

**Handbook for  
Palm™ i700 Series  
Handhelds**

## Copyright

Copyright © 1998-2001 Palm, Inc. All rights reserved. Graffiti, HotSync, MultiMail, PalmModem, Palm.Net, and Palm OS are registered trademarks, and the HotSync logo, MyPalm, Palm, Palm Powered, and the Palm logo are trademarks of Palm, Inc. Other product and brand names may be trademarks or registered trademarks of their respective owners. Bluetooth is a trademark of Telefonaktiebolaget L M Ericsson, Sweden and licensed to Palm, Inc.

## Disclaimer and Limitation of Liability

Palm, Inc. assumes no responsibility for any damage or loss resulting from the use of this handbook.

Palm assumes no responsibility for any loss or claims by third parties which may arise through the use of this software. Palm, Inc. assumes no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all important data on other media to protect against data loss.

---

**IMPORTANT** Please read the End User Software License Agreement with this product before using the accompanying software program(s). Using any part of the software indicates that you accept the terms of the End User Software License Agreement.

---

## Software Download Available

Palm™ Desktop software is supplied on a CD-ROM disc. If you do not have access to a CD-ROM drive for your computer, you can download the Palm Desktop software from [www.palm.com](http://www.palm.com).

# Contents

<b>About This Book</b>	<b>1</b>
<b>Chapter 1: Setting Up</b>	<b>3</b>
System requirements	3
Minimum requirements: Windows	3
Minimum requirements: Mac computers	4
Internet Access	4
If you are upgrading from another Palm OS® handheld	4
Step 1: Connect the HotSync cradle	5
Step 2: Charge your handheld	5
Step 3: Set up your handheld	5
Step 4: Install software	6
Step 5: Perform a HotSync operation	6
Step 6: Establish wireless service	6
Step 7: Activate your handheld	7
Step 8: Complete installation	7
Updating the mobile portal	8
Palm MultiMail Desktop Link	8
Congratulations!	8
<b>Chapter 2: Exploring Your Handheld</b>	<b>9</b>
Handheld components	10
Locating front panel controls	10
Using the backlight	11
Locating back panel components	12
Adding an expansion card	12
Tapping and typing	13
Elements of the handheld interface	14
<b>Chapter 3: Entering Data in Your Handheld</b>	<b>17</b>
Using the onscreen keyboard	17
Using Graffiti writing to enter data	18
Writing Graffiti characters	18
Graffiti tips	20

The Graffiti alphabet .....	20
Writing capital letters .....	21
Writing numbers .....	22
Graffiti numbers .....	22
Writing punctuation marks .....	22
Additional Graffiti punctuation .....	23
Writing symbols and extended characters .....	23
Writing accented characters .....	24
Accent strokes .....	24
Additional non-English characters .....	24
Navigation strokes .....	25
Graffiti ShortCuts .....	25
Beaming data .....	26
Using your computer keyboard .....	28
Importing data .....	28
Importing data from a Windows computer .....	28
Importing data from a Mac computer .....	30
Using Note Pad .....	31
Using a portable keyboard .....	31
<b>Chapter 4: Using Wireless Features .....</b>	<b>33</b>
Using the Wireless button .....	33
Turning on the radio .....	34
Monitoring the transmission signal .....	35
Using the indicator light .....	36
What is Web Clipping? .....	36
Web Clipping, not web browsing .....	37
Using the MyPalm mobile portal .....	38
Using mobile portal web clipping applications .....	38
Browsing or searching the Internet .....	39
Adding web clipping applications .....	39
Working with web clipping applications .....	40
Using installed web clipping applications .....	41
Example of web clipping .....	42
Reviewing current queries and clippings .....	43
Reviewing stored clippings: History list .....	43
Saving information from a web clipping application .....	44
Sending e-mail from a page .....	45
Web Clipping Preferences .....	45

---

Protection of your wireless transactions .....	46
<b>Chapter 5: Using MultiMail® Deluxe .....</b>	<b>49</b>
Receiving e-mail .....	50
Reading e-mail .....	51
Viewing other folders .....	51
Moving e-mail between folders .....	52
Sending e-mail .....	53
Adding attachments .....	54
Completing drafts .....	55
Replying to or forwarding e-mail .....	55
Deleting e-mail .....	56
Emptying trash .....	57
Using the Message menu .....	57
Configuring MultiMail Deluxe .....	58
Before you begin .....	58
Using Account Setup .....	58
Editing e-mail accounts .....	63
Deleting an account .....	65
Setting IMAP Options .....	66
Setting notification options .....	66
Using notification filters .....	67
Creating filters .....	68
Setting MultiMail Deluxe Preferences .....	70
<b>Chapter 6: Working with Applications .....</b>	<b>73</b>
Opening applications .....	73
Opening expansion card applications .....	74
Switching between applications .....	74
Categorizing applications .....	75
Changing the Applications Launcher display .....	76
Copying applications to an expansion card .....	76
Using menus .....	77
Choosing application preferences .....	79
Common tasks .....	79
Creating records .....	80
Editing records .....	80
Deleting records .....	81
Purging records .....	82

Categorizing records .....	83
Finding information .....	86
Sorting lists of records .....	89
Attaching notes .....	90
Choosing fonts .....	91
Reviewing alerts .....	92
Hiding or masking private records .....	93
Installing and removing applications .....	93
Installing add-on applications .....	93
Removing applications .....	97
Removing Palm Desktop software .....	97
<b>Chapter 7: Using Address Book .....</b>	<b>99</b>
Creating an Address Book entry .....	100
Selecting types of phone numbers .....	101
Changing Address Entry details .....	102
Address Book menus .....	102
<b>Chapter 8: Using Calculator .....</b>	<b>105</b>
Performing calculations .....	105
Recent Calculations .....	106
Calculator menus .....	106
<b>Chapter 9: Using Card Info .....</b>	<b>109</b>
Reviewing Card Information .....	109
Renaming a card .....	109
Formatting a card .....	110
Card Info menus .....	110
Card menus .....	110
<b>Chapter 10: Using Clock .....</b>	<b>111</b>
Viewing the time .....	111
Setting an alarm .....	112
Clock menus .....	112
<b>Chapter 11: Using Date Book .....</b>	<b>115</b>
Scheduling an event .....	116
Rescheduling an event .....	119
Setting an alarm for an event .....	119
Scheduling repeating or continuous events .....	120
Changing the Date Book view .....	122

---

Working in Week View .....	123
Spotting event conflicts .....	124
Working in Month View .....	124
Working in Agenda View .....	125
Date Book menus, preferences, and display options .....	126
Record menu .....	126
Options menu .....	126
<b>Chapter 12: Using Memo Pad .....</b>	<b>129</b>
Creating memos .....	129
Reviewing memos .....	130
Memo Pad menus .....	130
Record menus .....	131
Options menus .....	131
<b>Chapter 13: Using Note Pad .....</b>	<b>133</b>
Creating a note .....	133
Reviewing notes .....	134
Setting an alarm for a note .....	134
Note Pad menus .....	135
Record menus .....	136
Options menus .....	136
<b>Chapter 14: Using Security .....</b>	<b>137</b>
Assigning a password .....	137
Locking your handheld .....	139
Recovering from a forgotten password .....	141
Making records private .....	141
<b>Chapter 15: Using To Do List .....</b>	<b>145</b>
Creating list items .....	145
Setting priority .....	146
Checking off a To Do List item .....	146
Changing To Do List item details .....	147
Setting a due date .....	147
To Do Show Options .....	148
To Do List menus .....	149
<b>Chapter 16: Performing HotSync® Operations .....</b>	<b>151</b>
Selecting HotSync setup options .....	151
Customizing HotSync application settings .....	155

---

Performing cradle HotSync operations .....	158
Performing a cradle HotSync operation: Windows .....	158
Performing a direct HotSync operation: Mac computers .....	159
IR HotSync operations .....	162
Preparing your computer for infrared communication .....	162
Performing an IR HotSync operation .....	164
Returning to cradle HotSync operations .....	164
Conducting a HotSync operation via modem .....	165
Preparing your computer .....	166
Preparing your handheld .....	168
Selecting the conduits for a modem HotSync operation .....	169
Performing a HotSync operation via a modem .....	169
Creating a user profile .....	170
<b>Chapter 17: Setting Preferences for Your Handheld .....</b>	<b>173</b>
Viewing Preferences .....	173
Buttons preferences .....	174
Pen preferences .....	174
HotSync buttons preferences .....	175
Digitizer preferences .....	176
Formats preferences .....	176
General preferences .....	177
Date and Time preferences .....	178
Connection preferences .....	180
Network preferences and TCP/IP software .....	181
Owner preferences .....	193
ShortCuts preferences .....	194
<b>Appendix A: Maintaining Your Handheld .....</b>	<b>197</b>
Caring for your handheld .....	197
Battery considerations .....	197
Resetting your handheld .....	198
Performing a soft reset .....	198
Performing a hard reset .....	199
<b>Appendix B: Frequently Asked Questions .....</b>	<b>203</b>
Software installation problems .....	204
Operating problems .....	205
Tapping and writing problems .....	206
Wireless problems .....	207



Application problems .....	208
HotSync problems .....	209
Beaming problems .....	213
Recharging problems .....	214
Password problems .....	214
Technical support .....	215
<b>Product Regulatory Information .....</b>	<b>217</b>
<b>Index .....</b>	<b>219</b>



# About This Book

Welcome to the Palm™ i700 Series handheld. This handbook is designed to help you get up and running quickly on your handheld. It describes all you need to know about how to use your handheld and the applications that come with it. It walks you through:

- Enabling wireless features
- Sending and receiving personal and business e-mail wirelessly
- Locating all the parts of your handheld
- Viewing and entering data
- Working with expansion cards
- Using your handheld with your computer
- Personalizing your handheld with your own preference settings

After you become familiar with the basic functionality of your handheld, you can use the rest of this handbook as a reference for less common tasks, for maintaining your handheld, and also as a source of information if you have problems operating it.



Your new Palm™ i700 Series handheld is wirelessly enabled so that you can use it to transmit and receive information over the airwaves. Use your handheld to do the following:

- Receive secure business e-mail wherever you are, and rely on your handheld's blinking indicator light, vibrator, or alarm to notify you of its arrival.
- Set filters and notification preferences so that you determine what e-mail is forwarded from your desktop.
- Read, compose, and send e-mail on the go.
- Access the Internet and view content formatted for viewing on your handheld, or browse or search the Internet.
- Stay organized and on time by keeping your appointments, contact information, and to do items in one place
- Quickly jot notes or memos on the fly

Before you can use these features, you must set up your handheld, install software on your desktop computer, activate your wireless account, and activate your handheld.

## System requirements

To install and operate Palm™ Desktop software, your computer system must meet the following requirements:

### Minimum requirements: Windows

- IBM-compatible Pentium-class computer
- Windows 98/ME/2000 (Windows 95/NT operating systems require a serial cradle/cable, sold separately)
- 16 MB RAM (64 MB recommended with Windows 2000)
- 30 MB available hard disk space
- VGA monitor or better (the *Quick Tour* requires 256-color video display; for best results, use High Color: 16 bit)

- CD-Rom drive (you can also download Palm Desktop software from [www.palm.com](http://www.palm.com)).
- Mouse
- One USB port or available serial port (serial cradle/cable sold separately)

### Minimum requirements: Mac computers

- Apple Mac computer or compatible with a Power PC processor
- Mac OS 8.6 to 9.1 (9 or 9.1 required to receive updates to the MyPalm™ mobile portal)
- One USB port or available serial port (serial cradle/cable sold separately)
- 25 MB available hard disk space
- 6 MB free RAM

### Internet Access


For easiest activation of your wireless account, and to install Palm™ MultiMail® Deluxe Desktop Link, and receive updates to the MyPalm mobile portal, your desktop computer must have the following:

- A modem or LAN connection
- An account with an Internet service provider, or Internet service provided by your company
- A web browser

### If you are upgrading from another Palm OS® handheld:

If you already own a Palm OS® handheld, you must install the version of Palm Desktop software that comes with your new Palm i700 Series handheld. Before you install new software, perform a HotSync® operation using your old handheld and cradle. This ensures all data on your handheld is on your desktop computer.

## Step 1: Connect the HotSync cradle

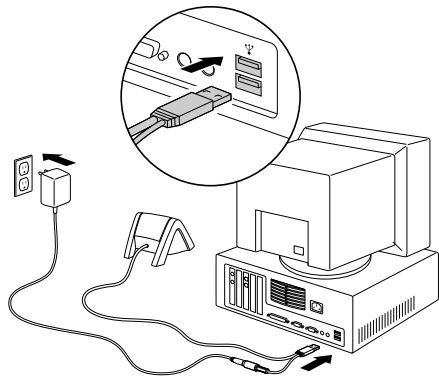

Shut down and turn off your computer.

Plug the USB connector into a USB port on your computer.

Connect the power cord that attaches to the back of the cradle's USB port connector to the AC adapter cord.



Plug the AC adapter into any AC current outlet.

## Step 2: Charge your handheld

Just place your handheld on the cradle for one hour for an initial charge. Once your handheld is set up and in daily use, place it on the cradle for a few minutes each day to recharge it to full capacity. Your handheld's indicator light displays solid green when it is recharging.


## Step 3: Set up your handheld

The Setup screen appears when you press the power button. Just follow the onscreen directions.

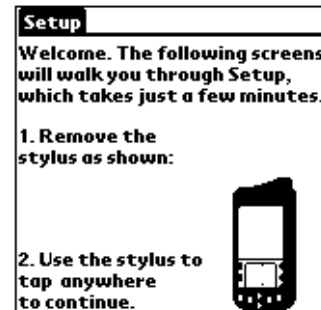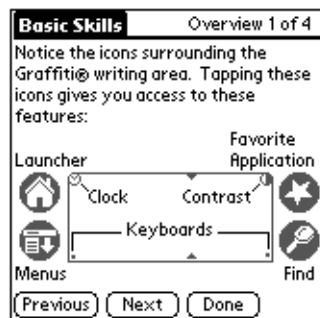

When you finish Setup, take a few minutes to review the Basic Skills and Graffiti® writing tutorials.


## Step 4: Install software

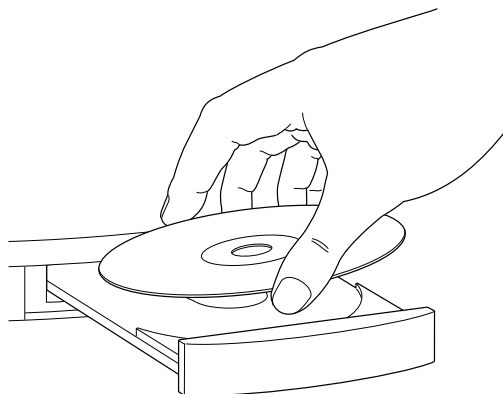

Insert the Palm Installation CD into your computer's CD-ROM drive and follow the onscreen instructions.

You will be guided through the process of installing Palm Desktop software, registering for a wireless account, selecting a service plan, and downloading and installing MultiMail Deluxe Desktop Link

## Step 5: Perform a HotSync operation

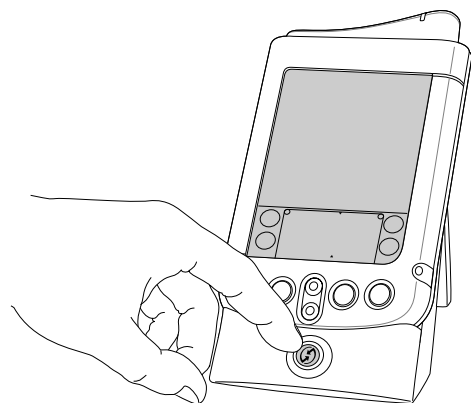

When prompted, just place your handheld on the cradle and press the HotSync button.

When a HotSync operation completes, remove the handheld from the cradle by gently rocking it forward and then lifting it from the cradle.

## Step 6: Establish wireless service

As the first HotSync operation completes, the installer launches a web browser on your desktop and opens the Palm i700 Series Activation URL where you will establish your wireless account, select a service plan, provide billing information, and set up your Palm wireless e-mail account.

**New users:** Click Sign up and Register.

**Palm VII/VIIx users:** Log in using your existing Palm.Net® username and password. You must also check the box beneath the password that identifies you as a Palm VII/VIIx user.

**MyPalm portal members:** Log in using your MyPalm portal username and password.

**NOTE** If you do not have Internet access, call Customer Care to set up your wireless account. You will need to provide your handheld's hardware serial number, which is printed on the back panel of the handheld.



**IMPORTANT** When you complete registration, you receive a five digit activation key that you need to activate wireless service on your handheld.

## Step 7: Activate your handheld

Tap Activate and follow the instructions.



Enter the Activation Key you received when you activated your wireless account.



Activation will also configure MultiMail Deluxe to work with your Palm wireless account and your business e-mail account.

At the Activation Successful screen, write down your user name and login information.

Perform a HotSync operation when prompted to complete activation.

## Step 8: Complete installation

As the HotSync operation completes, you will be able to do the following:

- Choose an option that updates the features of the mobile portal application.
- Install Palm MultiMail Deluxe Desktop Link, which wirelessly links your desktop business e-mail account to the business e-mail account on your handheld.

Onscreen directions guide you through the processes.

## Updating the mobile portal

The MyPalm mobile portal on your handheld is much like a portal site on the Internet. It allows you to quickly and wirelessly access Internet content by channel, and it specially formats content for viewing on a handheld. When you elect to receive updates to the mobile portal, the update process initiates an Internet connection each time you perform a HotSync operation. If a newer version of the MyPalm mobile portal is found, it replaces the current version on your handheld during the HotSync operation.

For information about changing conduit settings, see [“Customizing HotSync application settings”](#) in [Chapter 16](#).

## Palm MultiMail Deluxe Desktop Link

Palm MultiMail Deluxe Desktop Link securely forwards e-mail from your Windows 2000 Microsoft Outlook business e-mail account to your handheld. Your handheld notifies you of arriving e-mail by blinking its red indicator light at paired intervals, vibrating, or sounding an alarm.

For information about selecting notification methods, see [“General preferences”](#) in [Chapter 17](#).

**NOTE** You must install Palm MultiMail Deluxe Desktop Link to the same computer that you use to access your business e-mail.

## Congratulations!

You’ve set up your handheld, installed Palm Desktop software, activated your wireless account, activated your handheld, and installed additional wireless components. For comprehensive information about using your handheld, continue reading this electronic *Handbook*.

For more information about using Palm Desktop Software, see the following:

- The Windows tutorial for Palm Desktop software, *Quick Tour*. To access this tutorial, go to the Help menu in Palm Desktop software and choose Quick Tour.
- The electronic *Palm Desktop Software for the Macintosh User’s Guide*. To access this guide, open the Palm folder, and then open the Documentation folder. Double-click the file Palm Desktop.pdf.
- The online help for Palm Desktop software. To access the online help, go to the Help menu in Palm Desktop software.

**NOTE** If you have upgraded, your new handheld and your old handheld have the same user name after completing the upgrade process. We strongly recommend that you perform a hard reset on your old handheld to erase all data from it and assign it a new user name during the next HotSync operation. See [“Performing a hard reset”](#) in [Appendix A](#) for details.

# Exploring Your Handheld


Your Palm™ i700 Series handheld is wirelessly enabled. It will help you stay in touch with important e-mail and information, and to stay organized, on time, and up to date with daily tasks while you are away from your desk. Use your new handheld to do the following:

- Compose and securely send and receive business or personal e-mail wirelessly.
- Receive alerts when new e-mail arrives. Rely on any or all of the following alert modes: the indicator light, vibrator, or alarm sound.
- Access internet information with the MyPalm™ mobile portal.
- Browse or search the internet.
- Download and use web clipping applications that help you find Internet information quickly.
- Enter your schedule in Date Book.
- Keep all your contact names, addresses, and phone numbers in Address Book.
- Prioritize and assign your tasks a due date in To Do List.
- Jot quick notes directly on the screen in Note Pad.
- Set alarms from Clock, Date Book, and Note Pad, to keep yourself on schedule and remind yourself of appointments and notes.
- Set preferences for how you receive alarms: hearing a sound, seeing a blinking indicator light, or feeling your handheld vibrate. Chose any combination.
- Synchronize your data with Palm™ Desktop software on your Windows or Mac computer so you always have a copy.
- Insert Secure Digital (SD) or MultiMediaCards to add additional software or memory, or to back up your data.
- Beam information to another Palm OS® handheld that is close by and has an IR (infrared) port.
- Update, and receive new applications, via the MyPalm mobile portal.

## Handheld components

Take a few moments to locate the front and back panel components of your handheld.

### Locating front panel controls

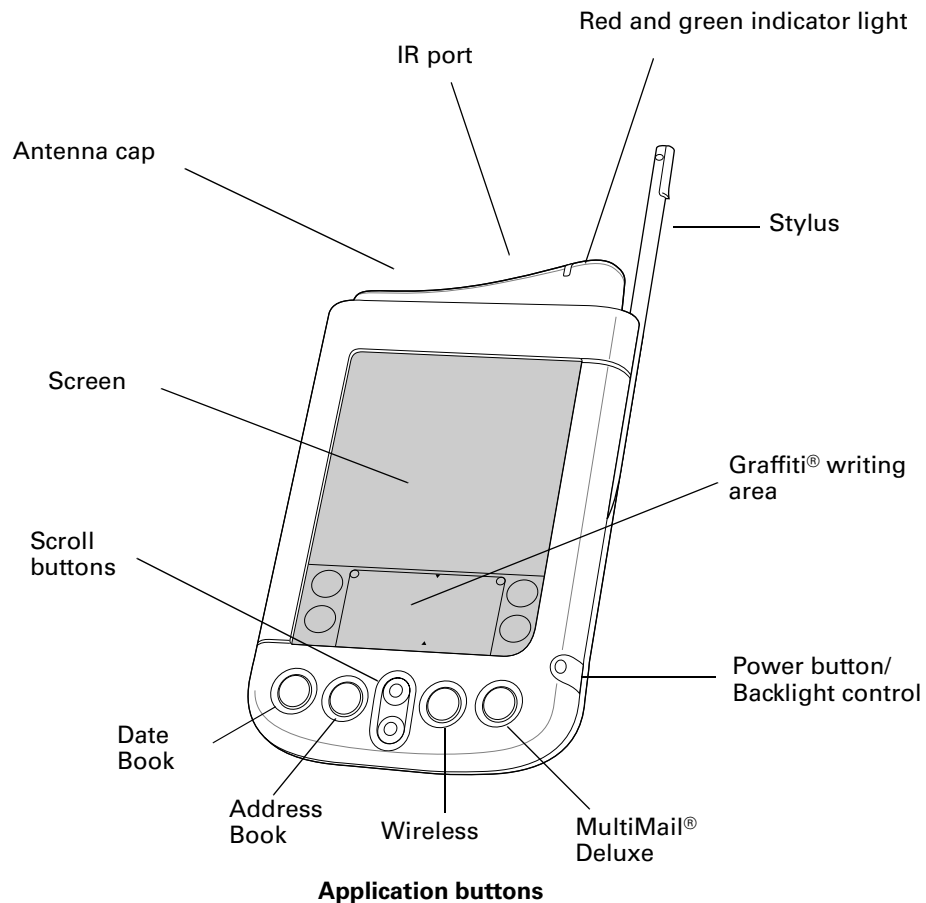

<b>IR port</b>	Uses infrared technology to transmit data to and receive data from other Palm OS handhelds, and to perform HotSync operations. See <a href="#">“Beaming data” in Chapter 3</a> and see <a href="#">“IR HotSync operations” in Chapter 16</a> or more information.
<b>Red and green indicator light</b>	Indicates when you are within or out of range for wireless transmission. It also notifies you of incoming e-mail, or Date Book/Clock/Note Pad alarms.
<b>Stylus</b>	Slides in and out of the slot in the side channel of the handheld. To use the stylus, remove it from the slot and hold it as you would a pen or pencil. Unscrew the top of the stylus to access the reset tool.

<b>Graffiti writing area</b>	The area where you write letters and numbers using the Graffiti alphabet. See <a href="#">“Using Graffiti writing to enter data”</a> in <a href="#">Chapter 3</a> to learn how to write Graffiti characters.
<b>Power button/ Backlight control</b>	<p>Turns your handheld on or off and controls the backlight feature. If your handheld is turned off, pressing the power button turns the handheld on and returns you to the last screen you viewed.</p> <p>If your handheld is turned on, pressing the power button turns the unit off. Pressing the power button for about two seconds turns the backlight on or off.</p>
<b>Application buttons</b>	Activates the individual handheld applications that correspond to the icons on the buttons: Date Book, Address Book, Wireless, and MultiMail Deluxe. See <a href="#">“Buttons preferences”</a> in <a href="#">Chapter 17</a> for details on reassigning these buttons to activate any application on your handheld.
<b>Scroll buttons</b>	Displays text and other information that extends beyond the area of the handheld screen. Pressing the lower scroll button scrolls down to view information below the viewing area, and pressing the upper scroll button scrolls up to view the information above the viewing area.
<b>Screen</b>	Displays the applications and information stored in your handheld. It is touch-sensitive and responds to the stylus.

## Using the backlight

If lighting conditions make it difficult for you to see the information on your handheld, you can use the backlight to illuminate your screen.

### To activate the backlight:


- Press the power button and hold it down for about two seconds. Release the button when the backlight turns on.

**TIP** In addition, you can assign the full-screen pen stroke to activate the backlight. See [“Pen preferences”](#) in [Chapter 17](#) for details.

### To turn off the backlight:

- Press and hold the power button for about two seconds. The backlight also turns off automatically (after a period of inactivity) with the Auto-off feature. See [“General preferences”](#) in [Chapter 17](#) for more information.

## Locating back panel components

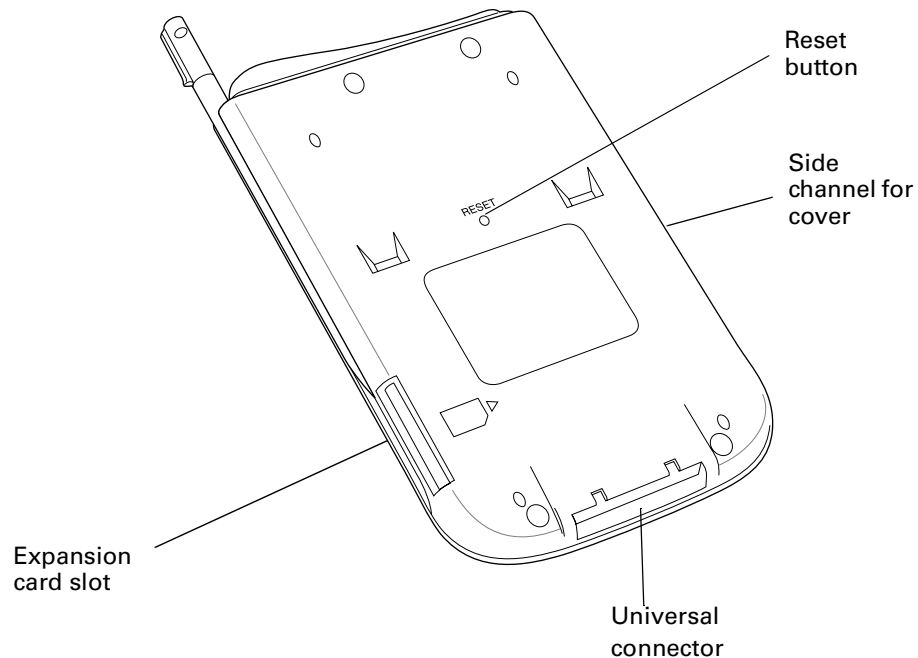


<b>Reset button</b>	Under normal use, you should not have to use the reset button. See <a href="#">“Resetting your handheld”</a> in <a href="#">Appendix A</a> for information about when and how to use the reset button.
<b>Side channel</b>	The left side channel holds the front cover, which slides in and out.
<b>Universal connector</b>	<p>Connects your handheld to the cradle, which in turn connects to the back of your computer and through the AC adapter to the wall current. This allows you to recharge your handheld as well as update the information between your handheld and computer using HotSync® technology.</p> <p>The universal connector also connects peripheral hardware devices to your handheld.</p>
<b>Expansion card slot</b>	Accepts Secure Digital (SD) or MultiMediaCard expansion cards, enabling you to add more memory, applications, or Bluetooth™ functionality. You can also back up data to an expansion card.

## Adding an expansion card


A tiny expansion card (sold separately) increases the variety of tasks you can do and the amount of space you have to store software and data on your handheld.

**To insert a card:**

1. Insert the card in the direction shown by the icon.
2. Push the card in with your thumb. You feel the card lock and hear the system sound.

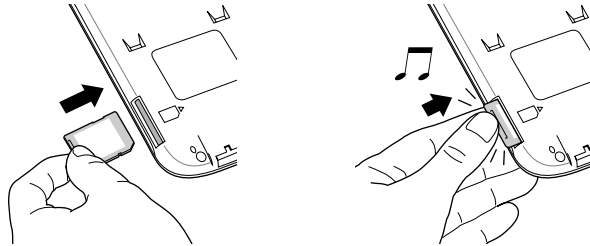**To remove a card:**

1. Push lightly against the card with your thumb.
2. When the card is released, you hear the system sound.

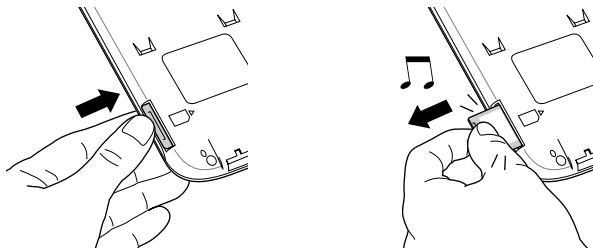

For complete information about working with expansion cards, see [Chapter 9](#).

## Tapping and typing

Like using a mouse to click elements on a computer screen, using the stylus to tap elements on your handheld screen is the basic action that gets things done on your handheld.

The first time you start your handheld, setup instructions appear on the screen. These instructions include a calibration screen. Calibration aligns the internal circuitry of your handheld with its touch-sensitive screen so that when you tap an element on the screen, the handheld can detect exactly which task you want to perform.

---

**IMPORTANT** Always use the point of the stylus for tapping or making strokes on the handheld screen. Never use an actual pen, pencil, or other sharp object to write on the handheld screen.


---







With your handheld turned on, you can tap the handheld screen to do many operations, such as the following:

- Open applications
- Choose menu commands
- Initiate a Find operation to search through applications installed on your handheld for specific text (Find operations do not search through applications on expansion cards)
- Select options in dialog boxes
- Open the onscreen keyboards

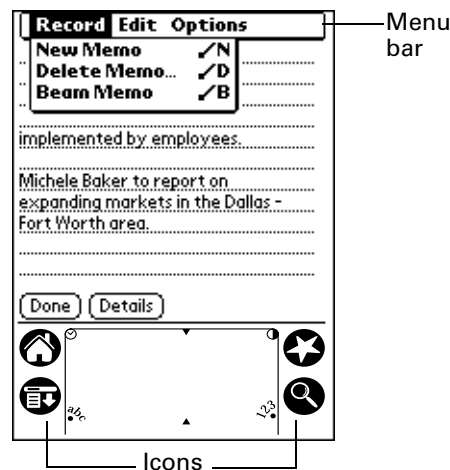
Just as you can drag the mouse to select text or move objects on your computer, you can also drag the stylus to select text. You can also use the stylus to drag the slider of any scroll bar.

## Elements of the handheld interface



<b>Menu bar</b>	A set of commands that are specific to the application. Not all applications have a menu bar.
<b>Icons</b>	Tap the icons to open applications  , menus  , a favorite application  , and to find text anywhere in your data  .
<b>Contrast control</b>	Tap the Contrast icon  to open the Adjust Contrast dialog box. Tap to the left or right of the slider to adjust the contrast in small increments or drag the slider to change the contrast in large increments.
<b>Clock</b>	Tap the Clock icon  to display the time and date.
<b>abc</b>	With the cursor in an input field, tap the dot to activate the alphabetic keyboard.
<b>123</b>	With the cursor in an input field, tap the dot to activate the numeric keyboard.



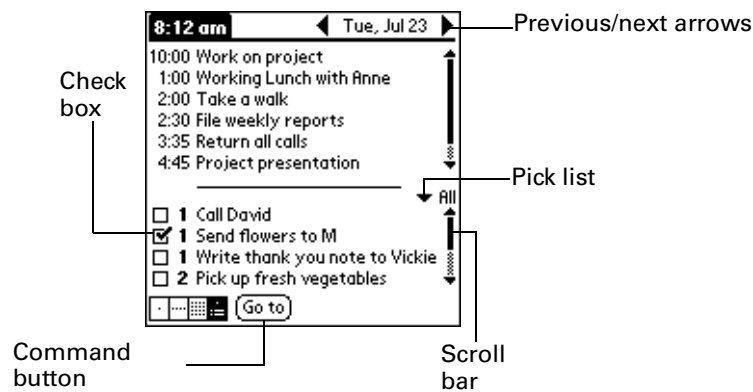


<b>Check box</b>	When a check mark appears in a check box, the corresponding option is active. If a check box is empty, tapping it inserts a check mark. If a check box is checked, tapping it removes the check mark.
<b>Command buttons</b>	Tap a button to perform a command. Command buttons appear in dialog boxes and at the bottom of application screens.
<b>Next/previous arrows</b>	Tap the left and right arrows to display the previous and next record; tap the up and down arrows to display the previous and next page of information.
<b>Pick list</b>	Tap the arrow to display a list of choices, and then tap an item in the list to select it.
<b>Scroll bar</b>	<p>Drag the slider, or tap the top or bottom arrow, to scroll the display one line at a time. To scroll to the previous page, tap the scroll bar just above the slider. To scroll to the next page, tap the scroll bar just below the slider.</p> <p>You can also scroll to the previous and next pages by pressing the upper and lower scroll buttons on the front panel of your handheld.</p>

### Displaying online tips

Many of the dialog boxes that appear on your handheld contain an online Tips icon in the upper-right corner. Online tips anticipate questions you have in a dialog box, provide shortcuts for using the dialog box, or give you other useful information.

To display an online tip:

1. Tap the Tips icon ⓘ.
2. After you review the tip, tap Done.

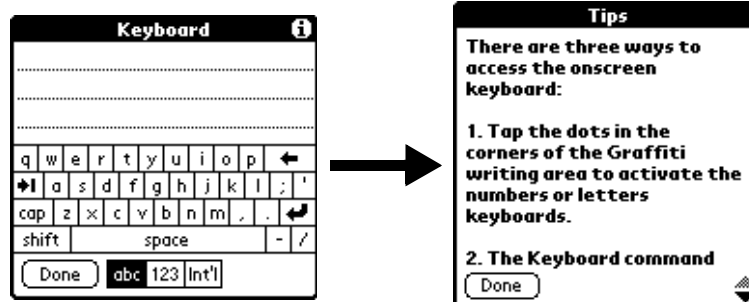

# Entering Data in Your Handheld

This chapter explains how to enter data into your handheld. There are several ways to enter data into your handheld:


- Using the onscreen keyboard
- Using Graffiti® writing
- Beaming data from another Palm OS® handheld that is close by and has an infrared port.
- Entering or importing data in Palm™ Desktop software and then synchronizing with your handheld
- Using Note Pad
- Using a portable keyboard accessory, sold separately, and attached to the universal connector

## Using the onscreen keyboard

You can open the onscreen keyboard anytime you need to enter text or numbers on your handheld. You can also use Graffiti writing when the keyboard is open, which makes it easy to switch between these two methods of entering data.


**To use the onscreen keyboard:**

1. Open any application (such as Memo Pad).
2. Tap any record, or tap New.
3. Tap “abc” to open the alphabetic keyboard, or tap “123” to open the numeric keyboard.

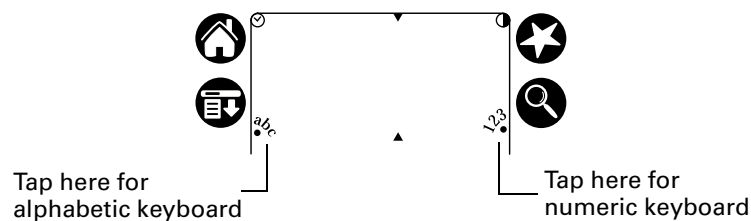

4. Tap the characters to enter text and numbers.

When a keyboard is open, you can tap to open any of the other keyboards, including the international keyboard.

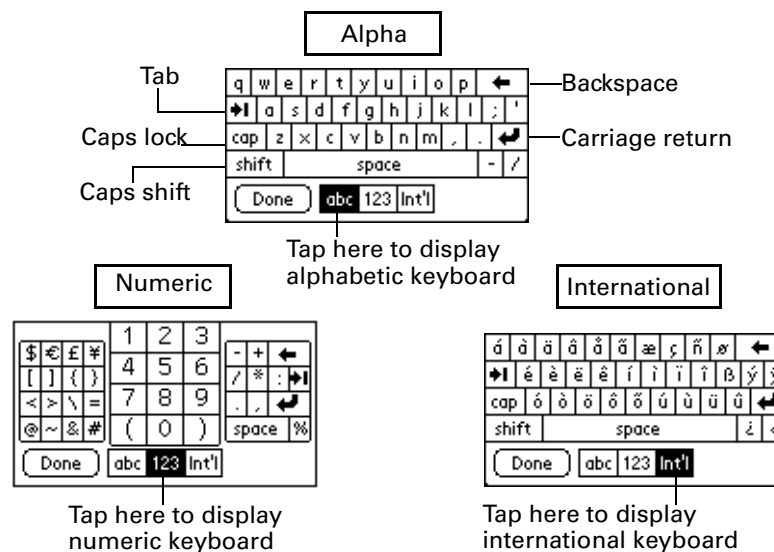

After you finish, tap Done to close the onscreen keyboard and place the text in the record.

## Using Graffiti writing to enter data


In this section, you learn the procedures for creating letters, numbers, punctuation, and symbols, as well as some Graffiti tips and tricks.

### Writing Graffiti characters

Most people find they can enter text quickly and accurately with only minutes of practice. Graffiti writing includes any character you can type on a standard keyboard. The Graffiti strokes closely resemble the uppercase letters of the regular alphabet, which makes Graffiti writing easy to learn.


**There are four basic concepts for success with Graffiti writing:**

- If you draw the character shape exactly as shown in the tables later in this chapter (like the shapes shown in the following diagram), you achieve 100% accuracy.



- The heavy dot on each shape shows where to begin the stroke. Certain characters have similar shapes, but different beginning and end points. Always begin the stroke at the heavy dot (you should not create the heavy dot; it is only there to show you where to begin the stroke).

- Most characters require only a single stroke. When you lift the stylus from the Graffiti writing area, your handheld recognizes and displays the text character immediately. To accomplish single strokes, some Graffiti strokes are portions of the regular alphabet equivalents.
- The Graffiti writing area is divided into two parts: one for writing the letters of the alphabet and one for writing numbers. The small marks at the top and bottom of the Graffiti writing area indicate the two areas.

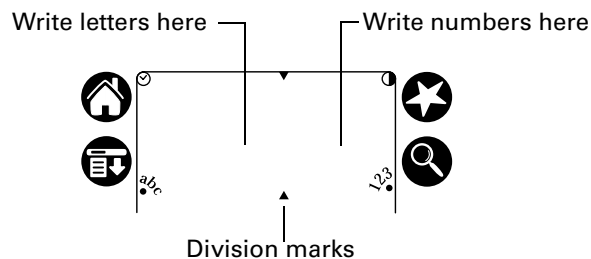


#### To write Graffiti letters:

1. Tap the screen where you want your text to go.

You need to tap above the Graffiti writing area, and must see a blinking cursor before you write the text.

2. Use the tables on the following pages to find the stroke shape for the letter you want to create. For example, the stroke shown below creates the letter "n."

There are two different stroke shapes available for some letters. For these letters, choose the one that's easiest for you.

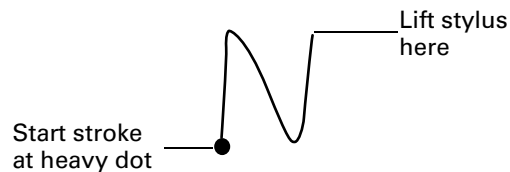

As you'll see later, you use the same shape to create both the uppercase and lowercase version of a letter.

3. Position the stylus in the left-hand side of the Graffiti writing area.
4. Start your stroke at the heavy dot and draw the stroke shape as it appears in the tables.
5. Lift the stylus from the screen at the end of the stroke shape.

That's all there is to it! When you lift the stylus from the screen, your handheld recognizes your stroke immediately and prints the letter at the insertion point on the screen.

As soon as you lift the stylus from the screen, you can begin the stroke for the next character you want to write.

**NOTE** You must begin the character strokes in the Graffiti writing area. If you do not make Graffiti strokes in the Graffiti writing area, your handheld does not recognize them as text characters.












## Graffiti tips

When using Graffiti writing, keep these tips in mind:

- Accuracy improves when you write large characters. You should draw strokes that nearly fill the Graffiti writing area.
- To delete characters, simply set the insertion point to the right of the character you want to delete and make the backspace stroke (a line from right to left) in the Graffiti writing area.
- Write at natural speed. Writing too slowly can generate recognition errors.
- Do not write on a slant. Vertical strokes should be parallel to the sides of the Graffiti writing area.
- Press firmly.

## The Graffiti alphabet

Letter	Strokes	Letter	Strokes
A		N	
B		O	
C		P	
D		Q	
E		R	
F		S	
G		T	
H		U	
I		V	

J		W	
K		X	
L		Y	
M		Z	
Space		Back Space	
Carriage Return		Period	tap twice

**TIP** A fullscreen pen stroke brings up Graffiti help on your handheld. See [“Pen preferences”](#) in [Chapter 17](#) for details.


### Writing capital letters

You make capital letters with the same stroke shapes as the basic alphabet characters. To make capital letters, you must first “shift” to caps — just as you press the Shift key on a keyboard — and then write the character strokes.


Graffiti writing includes a feature that automatically capitalizes the first letter when you create a new sentence or a new record (by tapping New or a blank line).

To draw the first letter of a word as a capital letter:

- Use the Caps Shift stroke:


Caps Shift	
------------	---

**TIP** When Caps Shift is active, an “up arrow” symbol appears in the lower-right corner of the handheld screen. If you accidentally activate Caps Shift, backspace will cancel it.




To enter only capital letters (Caps Lock):

- Use the Caps Lock stroke:



**TIP** When Caps Lock is active, an underlined “up arrow” symbol appears in the lower-right corner of the handheld screen. To return to lowercase, make the Caps Shift stroke.



## Writing numbers

Writing numbers with Graffiti writing is similar to writing letters of the alphabet, except that you make the character strokes on the right-hand side (numbers side) of the Graffiti writing area.

## Graffiti numbers


Number	Strokes	Number	Strokes
0		5	
1		6	
2		7	
3		8	
4		9	

## Writing punctuation marks

Graffiti writing can create any punctuation symbol that you can enter from a standard keyboard. All punctuation marks begin with a single tap on the Graffiti writing area. When you make this tap, you activate Punctuation Shift and a dot



appears to show it is active. The next stroke you make with the stylus creates a punctuation mark.



When Punctuation Shift is active, you can make a symbol stroke anywhere in the Graffiti writing area (the letters *or* numbers side).


Symbol	Stroke	Symbol	Stroke
Period .	•	Dash —	—
Comma ,	,	Left Paren (	(
Apostrophe '	'	Right Paren )	)
Question ?	?	Slash /	/
Exclamation !	!	Dollar \$	\$

Additional Graffiti punctuation


@	#	%	^	&	*	<	>	_	+	=	
@	#	%	^	&	*	<	>	_	+	=	
\	{	}	[	]	~	`	;	:	"	tab	
\	{	}	[	]	~	`	;	:	"	tab	


Writing symbols and extended characters

All symbols and extended characters begin with the stroke in the Graffiti writing area of your handheld:

Symbol Shift		
--------------	---	--

When the Symbol Shift is active, a slanted shift symbol appears in the lower-right corner of the screen. The next stroke that you make creates the symbol or extended character.




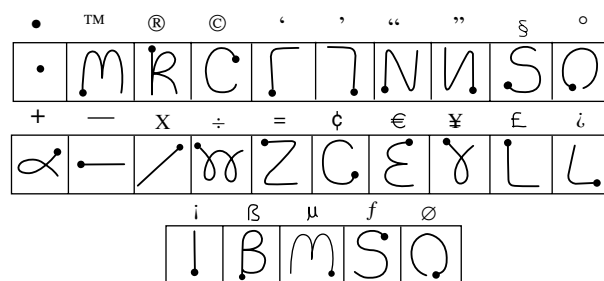


## Writing accented characters

To create accented characters, draw the stroke normally used to create the letter, followed by an accent stroke. Graffiti writing then adds the accent to the letter.

For example, the following diagram shows the strokes required to draw an accented “e.”



## Accent strokes




Using these accent strokes, you can write the following accented letters:

à á â ã ä å è é ê ë ì í î ï ò ó ô õ ö ù ú û ü ÿ ý ñ

## Additional non-English characters






You can write the following characters without any special punctuation or shifting:



You must write these non-English characters in the left side of the Graffiti writing area.

## Navigation strokes

In addition to character symbols, Graffiti writing includes special strokes that you can use to navigate within text or fields in your applications.


Command	Stroke
Move cursor right	
Move cursor left	
Previous field (Address Book only)	
Next Field (Address Book only)	
Open Address Record (Address Book only)	

## Graffiti ShortCuts

Graffiti ShortCuts make entering commonly used words or phrases quick and easy. ShortCuts are similar to the Glossary or Autotext features of some word processors.

Graffiti writing comes with several predefined ShortCuts, and you can also create your own. Each ShortCut can represent up to 45 characters. For example, you might create a ShortCut for your name, or for the header of a memo. See [“ShortCuts preferences”](#) in [Chapter 17](#) to learn about creating your own ShortCuts.

To use a ShortCut, draw the ShortCut stroke followed by the ShortCut characters. When you draw the ShortCut stroke, the ShortCut symbol appears at the insertion point to show that you are in ShortCut mode.

ShortCut	
----------	---

Your handheld includes the following predefined Graffiti ShortCuts:

Entry	Shortcut
Date Stamp	ds
Time stamp	ts
Date / time stamp	ds
Meeting	me

Entry	Shortcut
Breakfast	br
Lunch	lu
Dinner	di

## Beaming data


Your handheld is equipped with an IR (infrared) port that you can use to beam information to another Palm OS handheld that's close by and also has an IR port. The IR port is located at the top of the handheld, behind the small dark shield.

You can beam the following information between Palm OS handhelds:


- The record currently displayed in Date Book, Address Book, To Do List, Note Pad, or Memo Pad
- All records of the category currently displayed in Address Book, To Do List, Note Pad, or Memo Pad
- A special Address Book record that you designate as your business card, containing information you want to exchange with business contacts
- An application installed in RAM memory
- An application installed on an expansion card that is seated in the card slot

**TIP** You can also perform HotSync operations using the IR port. See [“IR HotSync operations”](#) in [Chapter 16](#) for more details.

### To select a business card:

1. Create an Address Book record that contains the information you want on your business card.
2. Tap the Menu icon .
3. Tap Record, and then tap Select Business Card.
4. Tap Yes.

### To beam a record, business card, or category of records:

1. Locate the record, business card, or category you want to beam.
2. Tap the Menu icon .
3. Tap one of the following on the Record menu:
  - The Beam command for an individual record
  - In Address Book only: Beam Business Card
  - Beam Category


4. When the Beam Status dialog box appears, point the IR port directly at the IR port of the receiving handheld.

For best results, handhelds should be between 10 centimeters (approximately 4 inches) and 1 meter (approximately 39 inches) apart, and the path between the two handhelds must be clear of obstacles. Beaming distance to other Palm OS handhelds may be different.



5. Wait for the Beam Status dialog box to indicate that the transfer is complete before you continue working on your handheld.

#### To beam an application:

1. Open the Applications Launcher.
2. Tap the Menu icon .
3. Tap App, and then tap Beam.
4. Select either Handheld or Card from the Beam From pick list.
5. Tap the application you want to transfer.

Some applications are copy-protected and cannot be beamed. These are listed with a lock icon next to them.

6. Tap Beam.
7. When the Beam Status dialog box appears, point the IR port directly at the IR port of the receiving handheld.
8. Wait for the Beam Status dialog box to indicate that the transfer is complete before you continue working on your handheld.

#### To receive beamed information:

1. Turn on your handheld.
2. Point the IR port directly at the IR port of the transmitting handheld to open the Beam dialog box.
3. Select a category for the incoming information, create a new category, or leave the information unfiled.



4. Tap Yes.

#### Tips on beaming information

- You can set the full-screen pen stroke to beam the current entry. See “[Pen preferences](#)” in [Chapter 17](#) for more information.
- You can draw the Graffiti Command stroke to activate the Command toolbar, and then tap the beam icon.
- You can use the Graffiti Command stroke “/ B” to beam the current entry.

## Using your computer keyboard

If you have a lot of data to enter, or prefer to use the computer keyboard, you can use Palm Desktop software or any supported PIM to enter information. You can then perform a HotSync® operation to synchronize the information on your computer with the information on your handheld. Many of the applications that came with your handheld are also available in Palm Desktop software and in most PIMs, so you don’t need to learn different applications. For more information on entering data on your computer, refer to the online Help in Palm Desktop software, the *Quick Tour* in Palm Desktop software (for Windows users), and the *Palm Desktop Software for the Macintosh User’s Guide* on the Palm Desktop software CD-ROM.

## Importing data

If you have data stored in computer applications such as spreadsheets and databases, or if you want to import data from another handheld, you can transfer the data to your handheld without having to key it in manually. Save the data in one of the file formats listed below, import it into Palm Desktop software, and then perform a HotSync operation to transfer the data to your handheld.

### Importing data from a Windows computer

Palm Desktop software can import data in the following file formats:

- Comma delimited (.csv, .txt): Address Book and Memo Pad only
- Tab delimited (.tab, .tsv, .txt): Address Book and Memo Pad only
- CSV (Lotus Organizer 2.x/97 Mapping): Address Book only
- vCal (.vcs): Date Book only
- v Card (.vcf): Address Book only
- Date Book archive (.dba)
- Address Book archive (.aba)
- To Do List archive (.tda)
- Memo Pad archive (.mpa)

Archive formats can only be used with Palm Desktop software. Use the archive file formats to share information with other people who use a Palm OS® handheld or to create a copy of your important Palm Desktop information.

**To import data from a Windows computer:**

1. Open Palm Desktop software.
2. Click the application into which you want to import data.
3. If you are importing records that contain a field with category names, do the following:

Select All in the Category box.

Be sure that the same categories that appear in the imported file also exist in the application. If the categories do not exist, create them now; otherwise, the records are imported into the Unfiled category.

4. From the File menu, choose Import.
5. Select the file you want to import.
6. Click Open.  
If you are importing a vCal or vCard file, skip to step 10. You do not have to specify which fields correspond to the imported data.
7. To import data into the correct Palm Desktop fields, drag fields in the left-hand column so that they are opposite the corresponding imported field on the right.
8. If you do not want to import a field, deselect the check box for that field.
9. Click OK.

The imported data is highlighted in the application.

10. To add the imported data to your handheld, perform a HotSync operation.

See Palm Desktop online Help for more information on importing and exporting data.

### Using File Link

The File Link feature enables you to import Address Book and Memo Pad information to your handheld from a separate external file on your Windows computer, such as a company phone list. You can configure the File Link feature to check for changes to the external file when you perform a HotSync operation. HotSync Manager stores the data in a separate category in Palm Desktop software and on your handheld.

With File Link, you can import data stored in any of the following formats:

- Comma-separated (\*.csv)
- Memo Pad archive (\*.mpa)
- Address Book archive (\*.aba)

- Text (\*.txt)

For information on how to set up a file link, see the Palm Desktop online Help.

## Importing data from a Mac computer

Palm Desktop software can import data from any of the following applications when you export the data in the appropriate file format:

- Address Book Plus (text file)
- Claris Organizer (Palm Desktop software can open these files directly)
- ClarisWorks (save under new name as ASCII text file)
- DateBook Pro (text file)
- DayMaker (text file)
- Dynodex (text file)
- FileMaker Pro (tab separated text file)
- Meeting Maker (text file)
- Newton running OS 1.0 with Newton Connection Kit: Names; Date Book Calendar; and Notepad (text file)
- Now Contact (text file)
- Now Up-to-Date (text file)
- QuickDex (text file)
- TouchBase Pro (text file)

### To import data from a Mac computer:

1. Open Palm Desktop software.
2. From the File menu, choose Import.
3. Select the file you want to import.
4. Click Open.
5. If you want to change the order of the fields you're importing, point to a field, wait for the cursor to change to a double arrow, and then drag the field to a new location.
6. If you do not want to import a field, click the arrow between the field names.
7. From the Fields pop-up menu, choose the appropriate field.
8. From the Delimiters pop-up menu, choose the appropriate delimiter.
9. Click OK.
10. To add the imported data to your handheld, perform a HotSync operation.



See Palm Desktop online Help for more information on importing and exporting data.

## Using Note Pad

In addition to using Graffiti characters and the onscreen keyboard, you can enter data on your handheld using the Note Pad application. When you use Note Pad, you write quick notes directly on the handheld screen in your own handwriting. See [Chapter 13](#) for more information and instructions.

## Using a portable keyboard

You can connect a portable keyboard accessory to the universal connector on your handheld so you can type data directly into your handheld. Portable keyboards are very helpful when you need to enter large amounts of data quickly and accurately while you are away from your computer. For additional information about this optional accessory, go to the web site: <http://www.palm.com>.



# Using Wireless Features

Your handheld is wirelessly enabled so that you can use it to transmit and receive information over the airwaves.

To use the wireless features, you must first establish a wireless account and activate your handheld. See “[Setting Up](#)” in [Chapter 1](#) or *Getting Started with Palm™ i700 Series Handhelds* for details.

After activation, you can use your wireless account to securely send and receive business and personal e-mail. See [Chapter 5](#) for details. You can also use it to quickly access Internet information from the MyPalm™ mobile portal and additional web clipping applications.


---

**IMPORTANT** Whenever you use the wireless features of your handheld, please observe the guidelines or prohibitions on the use of wireless devices in your current location. For example, when you are on an airplane, do not turn on your radio at times when government or airline regulations prohibit the use of cellular phones. You can, of course, use all other applications of your handheld in accordance with airline regulations for electronic devices.

---

## Using the Wireless button

- Press the Wireless button to open the MyPalm mobile portal where you can easily access Internet information.

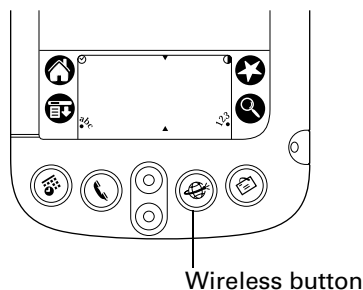




- Press and hold the Wireless button for one second to access the Wireless Preferences screen where you can turn the radio on or off.

## Turning on the radio

To send and receive wireless information and receive wireless notifications, the internal radio needs to be turned on. Use the Wireless Preferences screen to turn the radio on or off, or to schedule radio operation.

You can open the Wireless Preferences screen in multiple ways:

- Press and hold down the Wireless button  for one second.
- Tap the Applications icon , tap the Prefs icon , tap the pick list in the upper-right corner, and then tap Wireless.


Tap the Wireless Radio pick list and select one of the following options:

- Always Off** Radio remains off until you turn it on.
- Always On** Radio remains on until you turn it off.
- Scheduled** Radio automatically turns on and off at the hours you select.

**TIP** Scheduling radio operation helps conserve battery power.

To schedule radio coverage:

1. Tap the Wireless Radio pick list and select Scheduled.

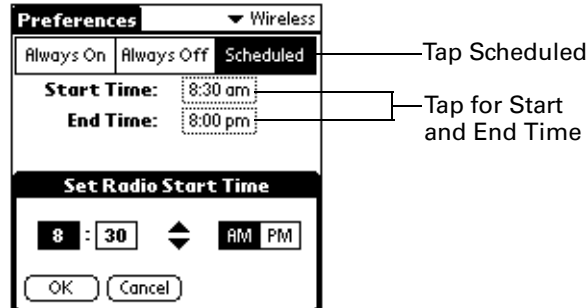

2. Tap the Start Time box.
3. Tap the up or down arrows to adjust the hour.
4. Tap the minutes box, and then tap the arrows to adjust the minutes.
5. Tap AM or PM.
6. Tap OK.
7. Tap the End Time box, and then repeat steps 3 through 6.

The radio turns off in multiple ways:

- Turn off the radio from the Wireless Preferences screen by tapping Always Off.
- The radio turns off automatically at a preset time when scheduling is used.
- The radio turns off automatically if the battery is very low.


---

**IMPORTANT** Turning off the handheld does not turn off the radio. When the handheld is turned off, the radio can remain on to receive notification of e-mail. The indicator light shows radio and notification status.

---

## Monitoring the transmission signal

When the radio is turned on, a signal strength bar graph and text message appear on the Wireless Preferences screen.

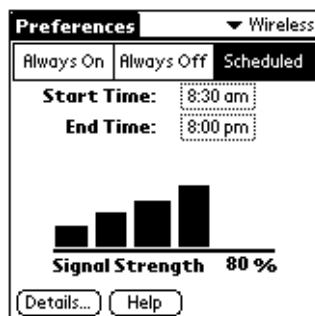


Both the bar graph and the number represent the signal strength:

- The graph represents signal strength as a series of bars. The more bars displayed, the stronger the signal.
- The number represents signal strength as a percentage. The higher the number, the stronger the signal.

If you experience poor reception, often you can improve it simply by moving five or ten feet in any direction away from the spot where reception is poor. As you move around to improve reception, you can monitor the increase or decrease in signal strength.

## Using the indicator light

The indicator light at the top of the handheld blinks to indicate the following status levels:

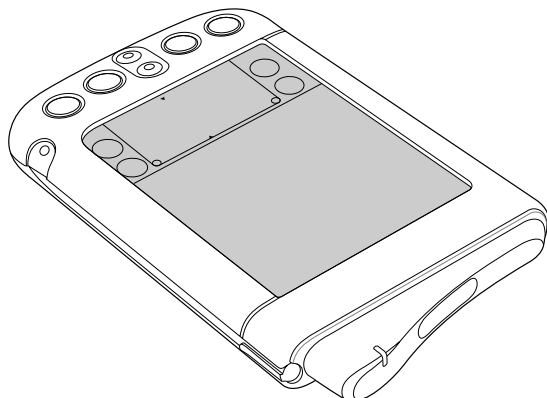

<b>No light</b>	Radio is off.
<b>Green light flashes every 5 seconds</b>	Radio is on and transmitter is within range.
<b>Red light flashes every 5 seconds</b>	Radio is on, but transmitter is out of range. You need to move to another area to bring the transmitter within range.
<b>Red light flashes at paired intervals</b>	<p>A notification that:</p> <p>E-mail or other content has been received</p> <p>Date Book/Note Pad/Clock event alert occurred</p> <p>A dialog box appears describing the reason for notification. Acknowledging the notification turns off the indicator light.</p>

## What is Web Clipping?

*Web clipping* is a fast and simple way to submit information to, and retrieve information from, the Internet.

Just as your web browser gives you access to many different web sites, your handheld gives you access to many different “sites” for web clipping — either through the MyPalm mobile portal, or downloaded and installed directly on your handheld.

These “sites” are called *web clipping applications*. You access and work with them just as you would with a handheld application like Address Book.

Web clipping applications give you access to a wide variety of practical Internet information. Each web clipping application is designed to let you query the Internet for a specific kind of information.

For example, there are web clipping applications that give you access to traffic and weather conditions; airline, hotel, and restaurant information; locations of


automatic teller machines; driving directions; stock market data; movie listings; availability of tickets to local events; business and general news; definitions, spelling, and synonyms of words; and business and residential phone numbers, addresses, and e-mail addresses.

## Web Clipping, not web browsing

It can be impractical to browse the Internet from a small handheld computer and look at elaborate, animated, graphics-laden web pages on a small screen. As a way to access Internet information, web clipping offers you the following advantages:

- **Convenience:** You can be sitting on a park bench or in the back of a taxi while accessing information from the Internet.
- **Focus:** Web clipping applications focus on retrieving specific, up-to-date information for the quickest, most efficient experience.

So when you're near a desktop computer and have some time, you can take advantage of the elaborate graphics, variety, and many choices offered by a web site.

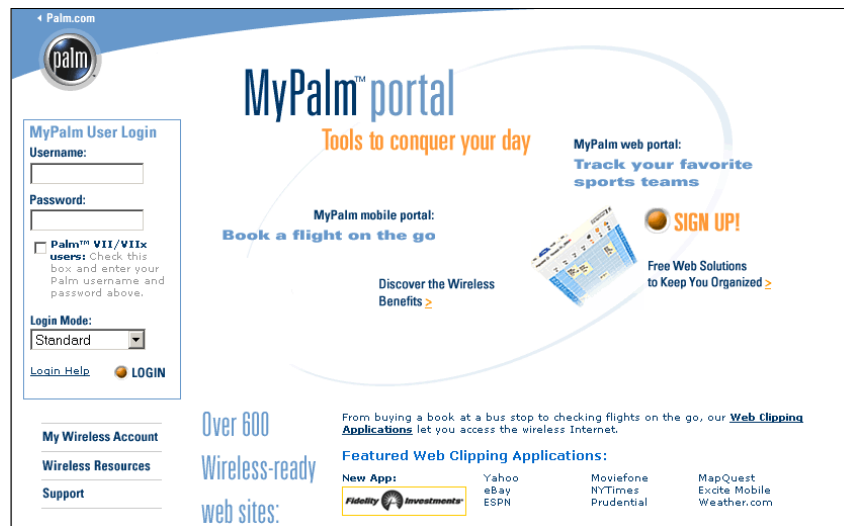

But when you're in a taxi or a hotel lobby and need information fast, a web clipping application makes it easy to find the specific information you need.



## Using the MyPalm mobile portal




The MyPalm application is a mobile portal. Like portals on the Internet that aggregate other web sites into content channels, the MyPalm mobile portal aggregates web clipping applications into content channels. Web clipping applications allow you to access a wide array of Internet information, and view that information in a format that is easy to read on your handheld screen and reduces the cost of transmission.

This application is also dynamic. If you selected the option to receive updates to the MyPalm mobile portal when you installed Palm™ Desktop software, you automatically receive newer versions of the application when you perform a HotSync® operation with an active Internet connection. Because of this, the application you see on your handheld may differ slightly from the images of it shown in this chapter.

**NOTE** In the event of a hard reset, the original MyPalm mobile portal will be restored. The next HotSync operation will replace it with a current version.

**To access the MyPalm mobile portal application:**

Do one of the following:

- Press the Wireless button  on your handheld.
- Tap the Applications icon  and then tap the MyPalm icon .

If the radio is not on, the Radio dialog box appears. Turn on the radio.



## Using mobile portal web clipping applications

The content channels of the MyPalm mobile portal host web clipping applications, grouped together by categories. These channels provide a convenient way to access information quickly, even without downloading and installing web clipping applications on your handheld.



**To access Internet content by channel:**


1. Tap a content channel, such as Finance.
2. Tap an icon to view the content.

If you want to access more web clipping applications, tap More or More Content at the bottom of the screen.

## Browsing or searching the Internet

Browsing or searching Internet sites directly using a URL is available from the MyPalm mobile portal. Keep in mind, however, that downloading information directly from an Internet site has certain limitations: downloading is slow, the presentation is not optimized for display on the handheld, and the amount of data transferred is higher, and therefore, more costly. We recommend that you access a web site using web clipping applications that are modified for use with your handheld. See “What is Web Clipping?” earlier in this chapter for more information.

**To browse or search the Internet:**

1. Tap the search icon  on the command bar.
2. Enter an URL to browse, or a search term, and then tap Go.




## Adding web clipping applications

In addition to the web clipping applications available through the mobile portal, you can also download and install web clipping applications directly on your handheld.

You can add web clipping applications to your handheld Applications Launcher in two ways:

- Download an application directly using the mobile portal.
- Download the application onto your computer desktop and perform a HotSync operation. This is the same procedure you would use for any other application. See “[Installing add-on applications](#)” in [Chapter 6](#) for details.

To add web clipping applications using the MyPalm mobile portal:


1. Tap the web clipping applications icon  on the command bar.
2. Tap Download.



3. Do one of the following:
  - Enter search terms, and then tap Search.
  - Tap New This Week.
  - Tap Top 10 Downloads.

Your handheld initiates a wireless transaction, and returns results.

4. Tap a web clipping application to see more information about it.

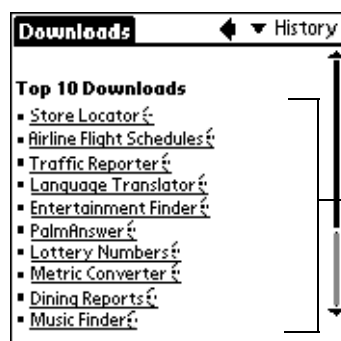

Tap a web clipping application for more information

5. Tap Download.
6. Tap Start Download.
7. Tap OK.

## Working with web clipping applications

Web clipping applications are designed so that you can use them as you use most handheld applications. Skills you learn in other applications can also be used to work in web clipping applications. For example:


- Tap to select an item or perform an action.
- Use Graffiti® writing or the onscreen keyboard to enter text.
- In edit lines, select, cut, copy, and paste text as you do in other applications on your handheld.

- Elements of the interface that look familiar—edit lines, pick lists, check boxes, scroll arrows, buttons, menus, etc.—behave in web clipping applications just as they behave in basic applications like Address Book.

When you install a web clipping application on your handheld, it appears by default in the Palm.Net® category of the Applications Launcher. Most web clipping application icons are easy to recognize because they usually include the over-the-air icon: three short lines radiating from the right side of the application icon. Often the application icons also have a dark diamond shape as their background:

◆ Common identifiers used in many icons of web clipping applications


After you establish a wireless connection, tapping a command button or other object that displays the over-the-air icon initiates a wireless transaction.



## Using installed web clipping applications

Web clipping applications installed on your handheld appear in a list accessible from the MyPalm mobile portal. They also appear by default in the Palm.Net category of the Applications Launcher.

**To open a web clipping application from the Applications Launcher:**

1. Tap the Applications icon .
2. Tap the pick list in the upper-right corner of the screen.
3. Tap Palm.Net.
4. Tap the icon of the web clipping application you want to open.

**To open a web clipping application from the MyPalm mobile portal:**

1. Tap the web clipping icon  from the command bar.
2. Tap a web clipping application in the list.

Once the web clipping application opens, you can query the Internet for information.


**To query the Internet for information:**

1. Follow the onscreen directions to specify the information you want from the Internet.
2. Tap the button or other object that displays the over-the-air icon to submit your query to the Internet.

The response — your clipping — typically appears within seconds.

To stop a wireless transaction:

- Tap the Stop icon.

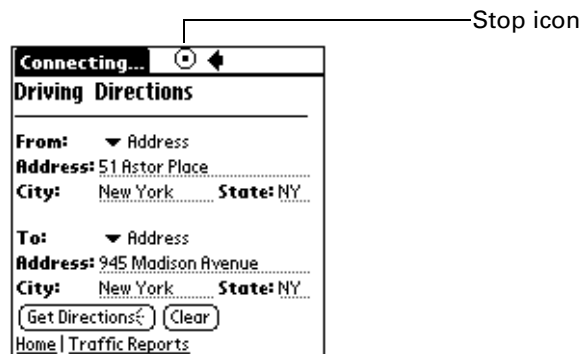

Any data that is downloaded to your handheld before you tap the Stop icon appears onscreen.

## Example of web clipping

This example takes you through the process of finding driving directions using the MapQuest web clipping application.

**Example: To find driving directions:**

1. Tap the MapQuest icon.
2. Under From, tap the Address field and enter the street address of the place you are leaving from.


You can use Graffiti writing or the onscreen keyboard to enter data.

3. Complete the From address by entering the city and state.
4. Under To, tap the Address field and enter the street address of the place you want to go to.
5. Complete the To address by entering the city and state.
6. Tap Get Directions.

Note the over-the-air icon following the word “Directions.” That’s your clue that the button initiates a wireless transaction.



Within seconds, your clipping appears. In this example, the clipping needs more than one screen to display all the directions. Use the scroll bar to see the rest of the clipping.

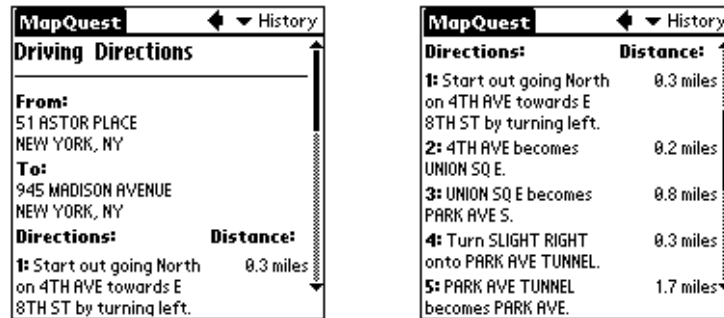


## Reviewing current queries and clippings

Your handheld stores the queries and clippings of your current session so that you can review them. Use the Back arrow to review the pages you displayed since you opened the web clipping application.

To go back to a previously viewed page:

- Tap the Back arrow ◀ in the web clipping application.

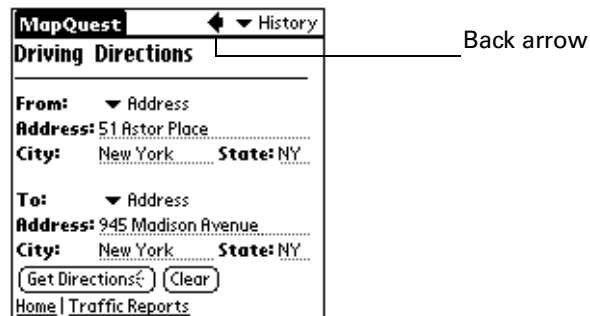


## Reviewing stored clippings: History list

You can see a list of stored clippings in the History list and then select the one you want to review. You can see clippings that pertain only to the web clipping application that is open. When you open another web clipping application, the History list changes to display only clippings that you received in that web clipping application.

To review the History list:

1. Open the web clipping application that has clippings you want to review.
2. Tap the History pick list.

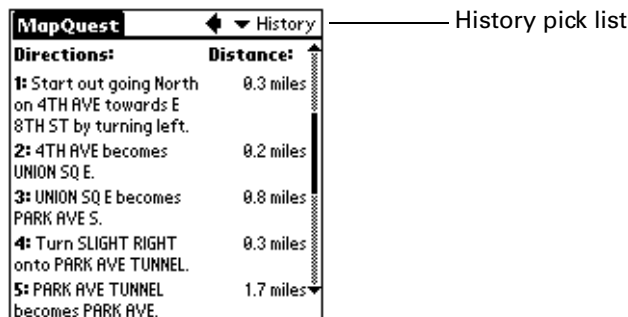

3. Select the clipping you want to review.


## Saving information from a web clipping application

You can copy the text of a clipping or a page of a web clipping application and paste it into another application. For example, you can copy driving directions and paste them into Memo Pad.


To save the text of a clipping or page:

1. Make sure the clipping or page you want to copy is onscreen.

You can use the Back arrow or the History list to display the clipping or page you want.

2. Tap the Menu icon .
3. Tap Edit, and then tap Copy Page.
4. Open one of the handheld applications, such as Memo Pad.
5. Create a new record.
6. Tap the Menu icon.
7. Tap Edit, and then tap Paste.

For example, here are the directions found in the sample procedure above, pasted into Memo Pad:

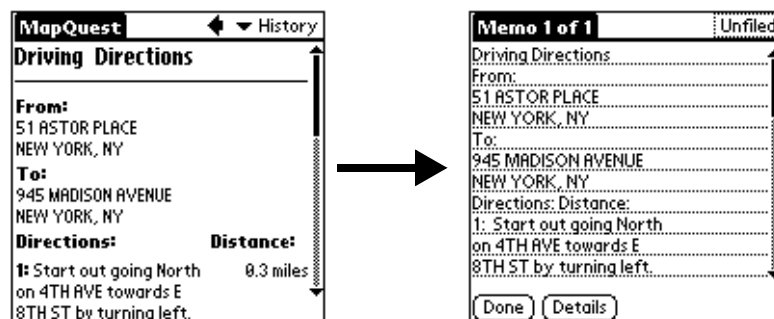

Keep the following points in mind about the Copy Page command:

- Copying always starts at the top of the current clipping or page, regardless of what is displayed onscreen.

- The Copy Page command copies only the first 4,096 bytes (4KB) of data. If the clipping or page you copy contains more than 4KB of data, your handheld appends the word “truncated” to the end of the pasted text.

**TIP** Use the Info command in the Options menu to find out how large a clipping is.

The Copy Page command does not copy images or icons; table structures; or text formatting such as bold, italics, and so on.

## Sending e-mail from a page

If a web clipping application or clipping gives you the opportunity to reply to an e-mail address, you can do so.

**To send e-mail from a page:**

1. Tap the address displayed in the page.

MultiMail® Deluxe opens. The To: field contains the address to reply to.

2. Enter the text of your message.

3. Do one of the following:

Tap Put in Outbox to file the message in the Outbox. Your message is sent the next time you open the e-mail application and tap Get & Send.

Tap Cancel, and then tap Yes to save the message in the MultiMail Draft folder. Tap No to delete the message.

## Web Clipping Preferences



The Web Clipping Preferences screen allows you to change the proxy server your handheld uses to communicate and allows you to prevent the transmission of your handheld's ID to Internet content providers.

---

**IMPORTANT** If you are working within a corporate environment, do not change these settings unless your corporate system administrator instructs you to do so.

---

**To view or change Web Clipping Preferences:**


1. Tap the Applications icon .
2. Tap the Prefs icon .
3. Tap the pick list in the upper-right corner of the screen.
4. Select Web Clipping.

## 5. Access any of the following options:

<b>Connection</b>	Displays the name of the current connection, either the Palm Wireless Service or a network dialup connection. Changes you make in the Network preferences panel update this field.
<b>User ID</b>	Displays your User ID.
<b>Server</b>	Displays the name of the proxy server.
<b>Warn when sending personal information</b>	Displays a warning when you submit a query that transmits your personal information, such as your unique handheld ID. The warning gives you a choice; you can continue the transaction or cancel it before any information is sent. If you want to be warned, select this check box.

## To change the proxy server:

1. From the Web Clipping Preferences screen, tap Server.
2. Enter your new Proxy server name or IP address.
3. Tap OK.

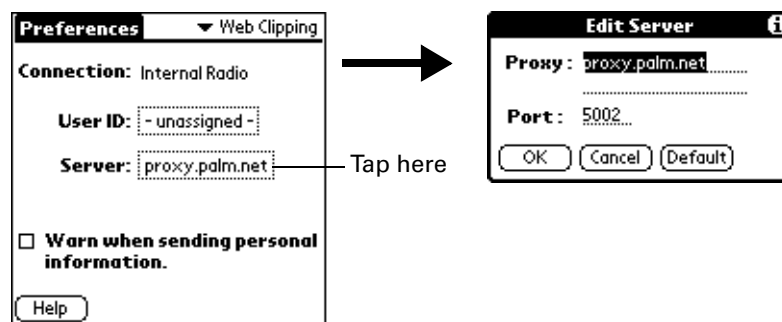


To restore the initial proxy server setting, tap Default.

## Protection of your wireless transactions

Your handheld uses next generation encryption technology. This encryption technology secures the transmission of sensitive information such as passwords that are sent over the network. Data is protected both when sent from your handheld over the network and when coming in from the Internet to your handheld.

When a wireless transaction is secured, the command button that initiates the transaction is marked not only by the over-the-air icon, but also by the security icon.

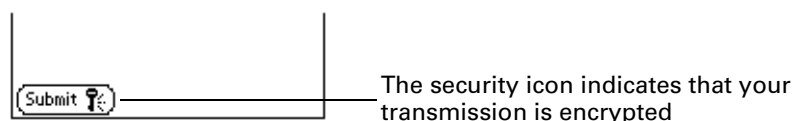



Encryption makes your data unreadable by anyone but the intended recipient. Encryption is done using a technology used in a wide variety of consumer handheld devices and enterprise applications.

It's not unusual to experience a delay of several seconds when a wireless transaction is being encrypted.

In addition to the protection provided by the encryption technology, individual web clipping applications may add another layer of protection to their transactions. For example, a web clipping application may require you to create and use a password to access sensitive information (for example, your checking account).



## Using MultiMail® Deluxe


MultiMail® Deluxe allows you to securely send and receive business and personal e-mail directly from your handheld. MultiMail Deluxe provides the following features:

- Send and receive e-mail using your Palm™ wireless account.
- Receive Microsoft Outlook business e-mail forwarded from your desktop, and reply to it.
- Wireless notification of new e-mail messages from your Palm wireless account or your business e-mail account.
- Filtering capabilities for wireless e-mail notification, and for sorting and organizing your e-mail based on rules you create.
- Support for SMTP, POP3, and IMAP4 protocols.
- Support for up to six e-mail accounts, in addition to your Palm wireless account and desktop account.

When you registered for your wireless account and activated your handheld, a mailbox was configured to work with your Palm wireless account. If you installed Palm™ MultiMail® Deluxe Desktop Link, a second mailbox is configured on your handheld to receive your forwarded business e-mail. You can create mailboxes to access up to six additional e-mail services. See [“Configuring MultiMail Deluxe”](#) later in this chapter for details.

### To open MultiMail Deluxe:

- Press the MultiMail Deluxe application button on the front panel of your handheld.

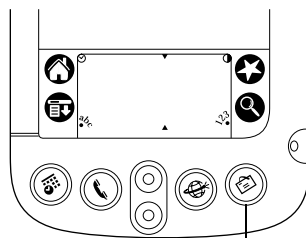

MultiMail Deluxe button

**TIP** Holding down the button for two seconds initiates wireless message retrieval.

## Receiving e-mail

1. Tap Get Mail.

If you have e-mail stored in your Outbox, you will see Get and Send.

2. In the Get Mail dialog box, select choices for downloading subjects only or messages.



3. Tap Details and select choices for retrieving unread mail, attachments, using filters (explained later in this chapter), and maximum download size.




4. Tap OK.

The Getting Messages dialog box appears and keeps you updated on connection status as your e-mail is downloaded.

When the Getting Messages dialog box disappears, another dialog box appears that tells you the number of new e-mail messages.


5. Tap OK.

A list of your e-mail appears in the Inbox.

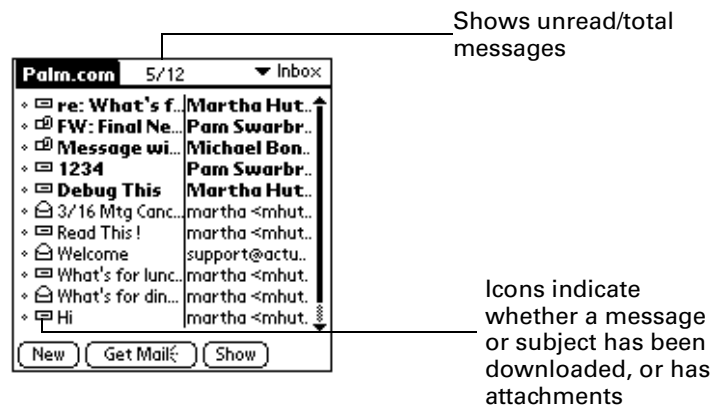

## Reading e-mail

To read e-mail, tap the item in the Inbox or another folder. The e-mail appears on the screen.

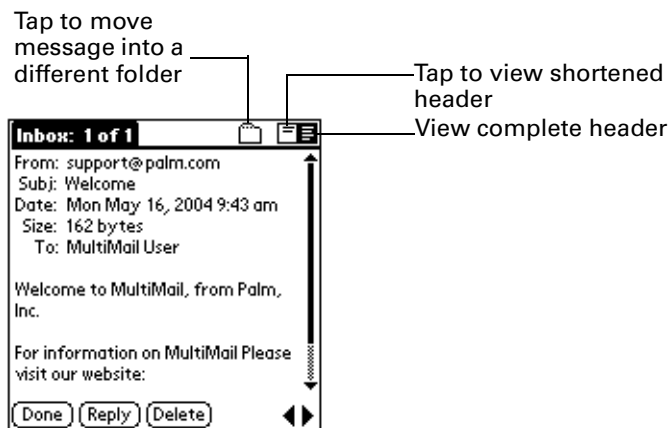

## Viewing other folders

When you receive e-mail, it appears in the Inbox folder. You can easily switch to any other folder to view its contents.

1. Tap the folders pick list in the upper-right corner of the screen.



2. Tap the folder you want to view.

## Moving e-mail between folders

You can move one or multiple e-mail messages between folders.

### To move one e-mail:

1. Tap the folder that contains the e-mail message you want to move.
2. Tap the icon to the left of the message, and then tap Move To.
3. The folders pick list appears.
4. Tap the folder that you want to move the e-mail to.

### To move multiple e-mail messages:

1. Tap the folder that contains the e-mail messages you want to move.
2. Select the messages to move by tapping to the left of each message icon.

A check mark appears next to selected messages.

3. Do one of the following:

Tap the account name, and then tap Move To on the Message menu.

Tap the Menu icon , and then tap Move To on the Message menu.

Tap a message icon next to a selected message, and then tap Move To on the pick list.


The Folders pick list appears.

4. Tap the Folders pick list, and select a destination folder.
5. Tap OK.

## Sending e-mail

To start a new e-mail:

1. Tap New.

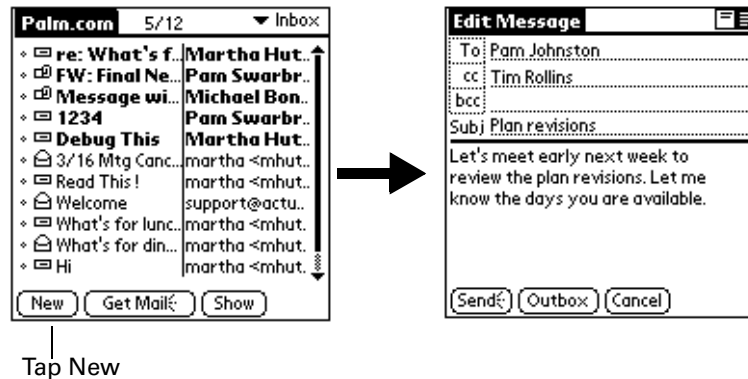

2. Tap the Subject field and enter the subject of your e-mail.

Address your e-mail by entering the address until recognized or looking it up in the Address Book.

To enter the address:

1. Tap the To field and enter the address.

If you want to edit an e-mail address that is longer than the line provided in the New Message screen, you need to use the Graffiti® navigation strokes for moving the cursor left and right.

If you add addresses to the same field, separate them with a comma and a space.

2. To send copies, tap cc: or bcc: and enter the address.


Copies (cc:) allow recipients see the addresses of the other recipients, but addresses in the blind copies (bcc:) field are hidden from all other recipients.

**TIP** Smart Addressing will complete an address for you. Just type in the first few characters of a name in Address Book with an associated e-mail address. When the e-mail address appears, use a comma to accept it or use the scroll buttons to see the previous or next e-mail address match.

To add an address from Address Book:


1. Tap the word To.
2. On the Recipient List screen, tap Lookup.

3. On the E-mail Lookup screen, tap the address you want, and then tap Add.

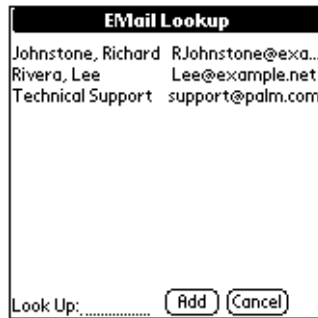

4. Repeat steps 2 and 3 to add more addresses.
5. Tap Done.
6. To enter an address in the cc: or the bcc: field, tap the field name, and follow the steps given for the To field.

**To compose and send an e-mail:**

1. Tap the area below the Subject line and enter the text of your e-mail.  
To access the editing features available on the Edit menu, tap the Menu icon .
2. Tap one of the following to send the e-mail:

<b>Outbox</b>	Stores e-mail in the Outbox. This allows you to compose e-mail offline and then send all e-mail during one connection with the server. To send your e-mail later, go to the Outbox and tap Get & Send. MultiMail Deluxe initiates the connection to the mail server and delivers all of the e-mail in the Outbox.
---------------	---

<b>Send</b>	Sends the e-mail immediately.
-------------	-------------------------------


## Adding attachments

You can attach and send files from your Palm wireless e-mail account. Attached files can be no larger than 3KB. The following files are supported as attachments:

- v Card (.vcf)
- vCal (.vcs)
- text (.txt)
- PQA (.pqa)
- PRC (.prc)
- PDB (.pdb)



To attach a file to a message:

1. Tap the Menu icon .
2. Tap Options, and then tap Add Attachments.




3. Tap the attachments pick list, and select the file type.  
All files of the selected type appear in the Select box.
4. Tap the file to attach, and then tap Add.  
The selected file appears in the Attachments box.
5. Tap Done.

## Completing drafts

If you are composing an e-mail and exit MultiMail Deluxe before tapping Outbox, Send, or Cancel, the draft e-mail is automatically moved to the Drafts folder. To finish editing the e-mail, tap the folders pick list and select Drafts. Select the e-mail you wish to complete or edit, and tap Edit. You can also delete the e-mail.

## Replying to or forwarding e-mail

1. Tap the folders pick list and select the folder that contains the e-mail.
2. Tap the item in the list of e-mail.
3. In the View window, tap Reply.
4. In the Reply Options dialog box, select choices for replying to the sender, all e-mail recipients, forwarding to new recipients, and including original message text.

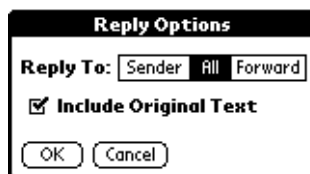

5. Tap OK.
6. The e-mail is addressed and you can enter your message.

7. Enter a reply.
8. Tap Outbox or Send to send the message.

## Deleting e-mail

You can delete one or more e-mail messages at a time.

### To delete one e-mail:

1. Tap the folders pick list and select the folder that contains the e-mail.
2. Tap the icon next to the message you want to delete.
3. Tap Delete.



4. (Optional) Select the check box to delete the message on the server.



5. Tap OK.

---

**IMPORTANT** If you delete a message on the server, you cannot retrieve it and view it again later.

---

### To delete selected e-mail:

1. Tap the folders pick list and select the folder that contains the e-mail.
2. Select the e-mail that you want to delete.
3. Do one of the following

Tap the account name, and then tap Delete.

Tap the icon next to a selected e-mail message, and then tap Delete on the pick list.

Tap the Menu icon , and then tap Delete.

- (Optional) Select the check box to delete the message on the server.



- Tap OK.


---

**IMPORTANT** If you delete a message on the server, you cannot retrieve it and view it again later.

---

## Emptying trash

Deleted e-mail accumulates in the Trash folder and takes up space on your handheld. To increase memory, do the following:

- Tap the Menu icon .
- Tap Message, and then tap Empty Trash.

## Using the Message menu

You can use the Message menu to further manipulate your e-mail, and you can select from the following options:



- |                     |   |
|---------------------|---|
| <b>Select All</b>   | Selects all e-mail in the current mail folder.  |
| <b>Deselect All</b> | Deselects all e-mail in the current mail folder.  |
| <b>Get Message</b>  | Connects to the mail server if needed, and downloads all bodies for selected e-mail that need to be downloaded.                           |
| <b>Move To</b>      | Moves selected e-mail to the folder you specify. See <a href="#">"Moving e-mail between folders"</a> earlier in this chapter for details. |

<b>Mark Read</b>	Marks all selected e-mail as read. Read messages appear in plain text.
<b>Mark Unread</b>	Marks all selected e-mail as unread. Unread messages appear in bold text.
<b>Delete</b>	Deletes all selected e-mail in the current folder.
<b>Empty Trash</b>	Deletes all e-mail from the trash.

## Configuring MultiMail Deluxe

If you have activated your handheld and established a Palm wireless account, a Palm wireless e-mail account is already configured in MultiMail Deluxe. If you installed Palm MultiMail Deluxe Desktop Link, a business e-mail account is configured to receive your forwarded business e-mail.

You can configure up to six additional e-mail accounts. Each account can use one of the following connection methods:

<b>Palm Wireless</b>	E-mail is sent and received using Palm wireless service.
<b>Synchronize Only</b>	E-mail is exchanged between your handheld and desktop computer when you perform a HotSync operation.
<b>Modem/Dialup</b>	E-mail is sent and received using a modem accessory.

## Before you begin


If you are setting up an e-mail account to use with a well known Internet service provider, MultiMail Deluxe will automatically set many of the required settings after you select your mail service. For other e-mail accounts, it will be helpful to have the following information, which is available from your mail server administrator:

- The protocol used for incoming mail
- The name of the incoming mail server
- The name of the outgoing mail (SMTP) server
- Your e-mail address
- The login script (if any) you need for connecting to your ISP or mail server

## Using Account Setup

Account Setup guides you through the process of adding a mailbox.

**To open account setup:**

1. Tap the Menu icon .
2. Tap Accounts.
3. Tap Account Setup.
4. Tap the Account pick list, and then tap New Account.

**To add a mailbox:**

1. Tap Next.
2. Enter a name for the mailbox you are creating.



The image shows a dialog box titled "MultiMail Setup". Inside, it says "Please enter a name for the mailbox (e.g. Earthlink Mail)." followed by a text input field containing the word "Example" and a dotted line. At the bottom, there are three buttons: "Previous", "Next", and "Cancel".

3. Tap Next.
4. Tap the Mail Service pick list and select the service to which you are connecting. Select Other if your ISP is not listed.

**TIP** When you select an ISP from the Mail Service pick list, MultiMail Deluxe automatically completes many of the required settings.



The image shows a dialog box titled "MultiMail Setup". Inside, it says "Select the type of mail service for the mailbox you just created. For example, select your Internet Service Provider (ISP), or mail server from the list." Below this text are two pick lists: "Mail Service: ▼ Other" and "Protocol: ▼ pop". At the bottom, there are three buttons: "Previous", "Next", and "Cancel".

5. Tap the Protocol pick list and select the protocol used by this mail service, either POP or IMAP.

6. Tap Next.



7. Tap the Connection pick list and select one of the following connection methods:

- |                         |  |
|-------------------------|--|
| <b>Synchronize Only</b> | E-mail is exchanged between your handheld and desktop computer when you perform a HotSync operation. |
| <b>Modem/Dialup</b>     | E-mail is sent and received using a modem accessory.   |
| <b>Palm Wireless</b>    | E-mail is sent and received using Palm wireless service.   |

The next screens in the setup process will differ based on the selected connection method.

**To complete setup for a Modem/Dialup connection:**

1. Tap Next.



2. Tap Network Prefs to adjust network settings. See [“Network preferences and TCP/IP software”](#) in [Chapter 17](#) for details about configuring network settings.
3. Tap Modem/Phone Prefs to adjust these settings. See [“Connection preferences”](#) in [Chapter 17](#) for details about configuring modem or phone settings.

When you finish adjusting these settings, tap Done to return to the Account setup process where you will enter mail server settings.

To enter mail server settings:

1. Tap Next.



The screenshot shows a dialog box titled "MultiMail Setup". It contains three text input fields with dotted lines below them. The first field is labeled "Enter the name of your outgoing mail server." with an example "(ex: mail.myserver.net)". The second field is labeled "Enter your name: (ex: Fred Smith)". The third field is labeled "Enter your email address: (ex: fred@myserver.net)". At the bottom, there are three buttons: "Previous", "Next", and "Cancel".

2. Enter the name of your outgoing mail server, and then enter your name and your full e-mail address.
3. (Optional) Tap Next and enter a signature to attach to your outgoing mail.
4. (Optional) Tap More to set options for receiving replies at a different e-mail address and sending blind (bcc:) copies to other recipients.
5. Tap OK.
6. Tap Next.
7. Tap OK.
8. Enter the name of your incoming mail server and your username (not your entire e-mail address).



The screenshot shows a dialog box titled "MultiMail Setup". It contains three text input fields with dotted lines below them. The first field is labeled "Enter the name of your incoming mail server (ex: pop3.server.net)". The second field is labeled "Mail Server Username: (ex: fsmith)". The third field is labeled "Mail Server Password: (ex: secret)" and has a "-Blank-" label below it. At the bottom, there are three buttons: "Previous", "Next", and "Cancel".


9. Tap the Mail Server Password box and enter a password.
10. Tap OK.

The next screen in the account set up process differs based on the protocol used by the mail service.

**NOTE** If you are creating a POP account that connects to your desktop using Synchronize only, you will see the same screen used for IMAP accounts.

**To set mail retrieval server options for a POP account:**

1. Tap Next.
2. If you want to view incoming mail later on your desktop, tap Leave mail on server.
3. If you want only unread mail to be downloaded to your handheld, tap Get unread mail ONLY.

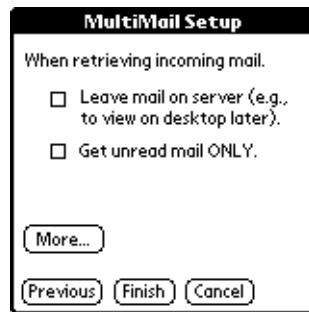

4. Tap More.
5. If you want to limit the maximum size of an incoming e-mail message, tap the maximum size field and enter the size in kilobytes.
6. Tap the check box to delete messages on the server when they are deleted in MultiMail Deluxe.
7. Tap OK.
8. Tap Finish.
9. Tap Done.

**To set mail retrieval server options for an IMAP account:**

1. Tap Next.



2. If you want only unread mail to be downloaded to your handheld, make sure Get unread mail ONLY is selected.
3. Tap More.
4. If you want to limit the maximum size of an incoming e-mail message, tap the maximum size field and enter the size in kilobytes.




5. Tap the check box to delete messages on the server when they are deleted in MultiMail Deluxe.
6. Tap OK.
7. Tap Finish.
8. Tap Done.

## Editing e-mail accounts

From time to time, you may need to alter information about an e-mail account.

### To select an account to edit:

1. Tap the menu icon .
2. Tap Options.
3. Tap Servers.
4. Tap the Account pick list, and then tap Edit Accounts.

All configured e-mail accounts appear in a list.

5. Tap the name of the account you want to change, and then tap OK.

### To change the connection type:

1. Tap the Connection pick list and select Synchronize Only, Modem/Dialup, or Palm Wireless.

### To change your username or password:


1. Tap the username field and enter a new username.

Your username is typically the first part of your e-mail, which appears before the @ symbol.

2. Tap the Password box and enter your password.
3. Tap OK.

**To change incoming mail server settings:**

1. Tap Server.
2. Tap Incoming Mail.

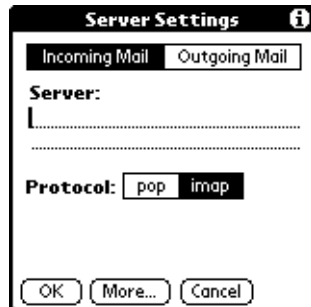

3. In the Server field, enter the name of your incoming mail (POP or IMAP) server.
4. Tap the appropriate protocol for this server: POP or IMAP.
5. Tap OK.

**To set additional incoming mail options:**

1. Tap More.
2. Set options for getting leaving mail on the server, retrieving unread mail only, and maximum message size.
3. Tap OK.

**To set outgoing mail server settings:**


1. Tap Outgoing Mail in the Server Settings dialog box.



2. In the Server field, enter the name of your outgoing (SMTP) mail server.
3. Enter your e-mail address.
4. Enter your name.

To set additional outgoing mail options:

1. Tap More and set additional options for outgoing mail.

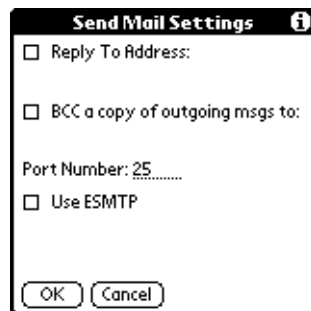


2. Set additional options for outgoing mail:

<b>Reply To Address</b>	If you want replies sent to a different e-mail address, tap the check box and enter an alternative address.
<b>BCC</b>	Tap the check box and enter an e-mail address to which a blind carbon copy will be sent.
<b>Port Number</b>	If your SMTP server uses a port number other than 25, change the Port number.
<b>Use ESMTP</b>	Select this option only when your System Administrator advises you to do so.

3. Tap OK.

## Deleting an account


1. Tap the menu icon .
2. Tap Options.
3. Tap Servers.
4. Tap the Account pick list, and then tap Edit Accounts.  
All configured e-mail accounts appear in a list.
5. Tap the name of the account you want to delete, and then tap Delete.
6. Tap Yes in the Delete Confirmation dialog box to delete the account and all associated e-mail messages.
7. Tap OK.

After you perform the next HotSync® operation, the memory associated with an account and its messages will be released.

## Setting IMAP Options

If you have created an IMAP e-mail account that connects to a server by a modem/dialup connection, you can set additional options.

To set options for an IMAP modem/dialup account:


1. Tap the menu icon .
2. Tap Options.
3. Set the following options:


<b>Folder Sync</b>	The IMAP protocol allows you to perform certain operations while disconnected from your server, then update the server with changes at a later time. Choose Folder Sync to update the server with changes on your handheld, and to have your handheld updated with changes from the server.
<b>Create Mailbox</b>	Creates a new mailbox on the server.
<b>Rename Mailbox</b>	Renames the mailbox on the server.
<b>Delete Mailbox</b>	Deletes the mailbox on the server.
<b>Disconnect</b>	Disconnects from the server.

## Setting notification options

Turn notification on or off, or set filters for your Palm wireless e-mail account so that you control the e-mail messages that are delivered to and trigger an alert from your handheld.

To set notification options:

1. Tap the menu icon .
2. Tap Options.
3. Tap Notification.

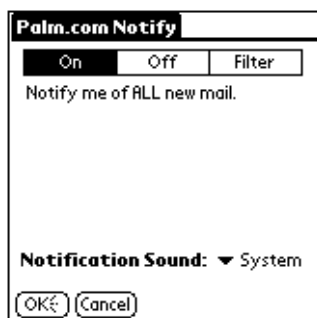

4. Select one of the following options:

- |               |  |
|---------------|--|
| <b>On</b>     | You are notified of all new mail whenever wireless coverage is enabled.          |
| <b>Off</b>    | You receive no notifications.  |
| <b>Filter</b> | Allows you to set conditions that e-mail must meet in order to trigger an alert. |

5. Tap the Notification Sound pick list and select either the System sound or None. With the sound turned off, you can still receive alerts from the indicator light and the vibrator.

## Using notification filters

For your Palm wireless e-mail account only, use notification filters to limit the e-mail messages that are delivered to and trigger an alert from your handheld.

For example, when you travel, you may want to receive and be alerted only to e-mail regarding a particular project. You can create a filter that permits delivery and notification only when e-mail meets these conditions.

**To create a notification filter:**

1. Tap Filter.
2. Tap Edit.



3. Use the If the pick lists to create criteria for the notification filter.

The two pick lists and the edit line combine to create a statement that identifies the type of e-mail that triggers notification. For example, a filter might read, "If the [From] [Contains] mweston@example.com, Then Notify Me."

You can also use the And button to create a more complex statement, such as "If the [From] [Contains] mweston@example.com, And if the [Subject] [Starts with] Apollo Project, Then Notify Me."

When you use this notification filter, only e-mail matching these conditions prompts a notification alert on your handheld.

- |                     |   |
|---------------------|---|
| <b>To pick list</b> | Select the header field with the information contained in the edit line: To, From, Subject. |
|---------------------|---|

<b>Contains pick list</b>	Select a filter action: Contains, Starts with, Does NOT Contain.
<b>Edit line</b>	Enter the text that must be found in the header field. For example, if you want to be notified of only e-mail whose Subject is the Apollo Project, enter "Apollo Project."
<b>ADD button</b>	Use to further refine the notification criteria by linking two conditions together.

## Creating filters

Filters provide efficient ways to manage e-mail retrieval and storage. Filters may be used differently based on the e-mail account to which you attach a filter.

**Palm wireless e-mail account:** When you initiate a Get Mail or a Get and Send transaction, filters can be used to define which e-mail is downloaded to your handheld.


**Any POP or IMAP e-mail account:** When you initiate a Get Mail or a Get and Send transaction, filters can be used to define which e-mail is downloaded to your handheld.

**Business e-mail account:** Filters can be used to determine which e-mail is forwarded from your desktop to your handheld.

For any e-mail account, filters allow you to sort incoming e-mail into a folder or mailbox you identify, to make reading faster and easier.

For example, you may want to file e-mail about sales meetings into a specific folder. You can create a filter that automates this action, so that whenever you receive an e-mail about sales meetings, it is immediately sent to the sales folder.

To create a filter:

1. Tap the Menu icon .
2. Tap Options, and then tap Filters.
3. Tap New.
4. Tap the Filter name field and enter a short description of the filter.



5. Use the If the pick lists to create criteria for the filter.

The three pick lists and the edit line combine to create a statement that identifies the type of e-mail and what you want to do with the e-mail. For example, a filter might read, "If the [Subject] [Contains] sales meeting, Then retrieve and move to [Sales]." When you use this filter to sort incoming e-mail, any e-mail containing sales in the subject line is filed in the Sales folder.

<b>To pick list</b>	Select the header field with the information contained in the edit line: To, From, Subject, cc, Date, Size.
<b>Contains pick list</b>	Select a filter action: Contains, Starts with, Does NOT Contain.
<b>Edit line</b>	Enter the text that must be found in the header field. For example, if you want to sort e-mail whose Subject is Sales, enter "Sales." If you enter more than one address, separate them with a comma.
<b>Inbox pick list</b>	Select the folder or mailbox into which you want your filtered e-mail to go.


6. Tap OK.

The filter appears in the Filters list.


7. Tap OK.

By default, a filter is selected for use and affects all subsequent downloads of e-mail until you deselect it. More than one filter can be in effect at once. Before you download e-mail, be sure the filters you want are turned on and the ones you don't want are turned off.

To turn a filter on or off:

1. Tap the Menu icon .
2. Tap Options, and then tap Filters.

The Filters dialog box appears, listing the filters you created.

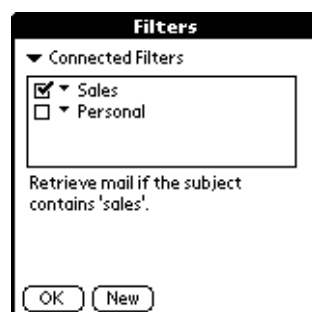

3. Tap the pick list in the upper-left, and select Connected or Synchronize.

The Connected setting applies a filter to a wireless or modem transaction.


The Synchronize setting applies a filter to a HotSync operation.

4. Tap the filter check boxes to select those filters you want to work for a subsequent e-mail transaction.

A check mark next to a filter means that it is selected. To remove a check mark, tap the check box. To add a check mark, tap an empty check box.

5. Tap OK.

**To edit or delete a filter:**

1. Tap the Menu icon .
2. Tap Options, and then tap Filters.

The Filters dialog box appears, listing the filters you created.

3. Tap the name of the filter.

The Filter Editor dialog box appears.

4. Do one of the following:

To edit the filter, revise your selections in the pick lists and revise the text in the edit line. Tap OK.


To delete the filter, tap Delete, and then tap Yes to confirm deletion.


5. Tap OK.

## Setting MultiMail Deluxe Preferences

Preferences allow you to set preferences for how MultiMail Deluxe handles your e-mail.

**To set General preferences:**

1. Tap the Menu icon .
2. Tap Options.
3. Tap Preferences.

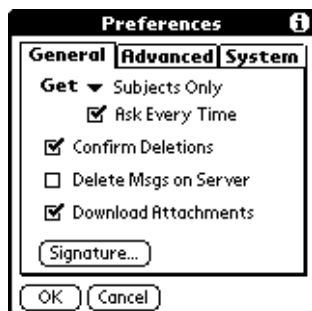

4. Select preferences:


**Get**                      Select either Subjects Only or Entire Message.



<b>Ask Every Time</b>	Select if you want to choose subjects only or entire messages each time you retrieve e-mail.
<b>Confirm Deletions</b>	Displays a confirmation dialog before executing e-mail deletions.
<b>Delete Msgs on Server</b>	Deletes messages on the server that you have deleted on your handheld.
<b>Download Attachments</b>	Enables files attached to e-mail to be downloaded to your handheld.
<b>Signature</b>	Allows you to attach a default signature to all your outgoing messages. Tap Signature, and then enter information in the signature dialog box.

To set Advanced Preferences:

1. Tap Advanced.

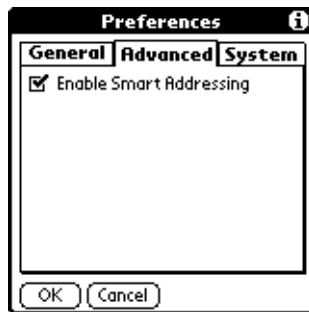

2. Select preferences:

<b>Enable Smart Addressing</b>	Allows MultiMail Deluxe to type ahead and complete an e-mail address when recognized.
--------------------------------	---

The rest of the settings only appear for accounts that use a modem/dialup connection:


<b>Timeout</b>	Sets the number of seconds that MultiMail Deluxe tries to connect before timing out. If you are using a wireless modem or an adapter with a cellular phone, this value should be greater than 45 seconds. To change, tap the Timeout field and enter a new value.
<b>Auto-Disconnect</b>	Automatically disconnects your remote connections after each command. This feature is especially useful for wireless modems.
<b>Disconnect on Exit</b>	Disconnects from the modem only after you leave MultiMail Deluxe. This feature is an alternative to AutoDisconnect.

**Modem Wait**

If you have a wireless modem and want to give the modem a few seconds to initialize itself, tap and enter a number of seconds for the wait. The typical setting for a wireless modem is 3, and the typical setting for most normal modems is 0.

To set System Preferences:

1. Tap System.

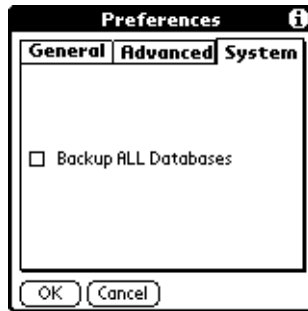

2. Select a preference:

**Backup ALL Databases**

Enables backing up the e-mail database. Deselecting this option allows you to increase the speed of HotSync operations by not backing up the mail database. Because in most cases your mail is on your server, you do not need to back up your e-mail database from your handheld.


3. Tap OK.

# Working with Applications

This chapter explains how to open and switch between applications on your handheld, how to change application settings so they are personalized to your work methods, and how to categorize applications so you view them in related groups.

## Opening applications

You can use the Applications Launcher to open any application installed on your handheld or an expansion card. You can also open Date Book, Address Book, the MyPalm™ mobile portal, and MultiMail® Deluxe with the application buttons on the front panel of your handheld.

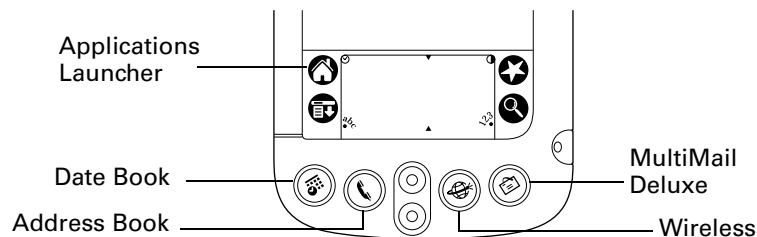

In addition to providing a way for you to open applications, the Applications Launcher displays the current time, battery level, and application category.

**To open an application on your handheld:**

1. Tap the Applications icon .



2. Tap the icon of the application that you want to open. If you have many applications installed on your handheld, tap the scroll bar to see all of your applications.


**TIP** To find an application quickly, you can write the Graffiti® character for the first letter of its name. The Applications Launcher scrolls to the first application with a name that begins with that letter.

## Opening expansion card applications


When an expansion card is properly seated in the expansion card slot, the Applications Launcher switches to the card and displays its contents. The pick list in the upper-right corner of the screen displays the name of the card.

To open an application on an expansion card:

- Tap the icon of the application that you want to open.

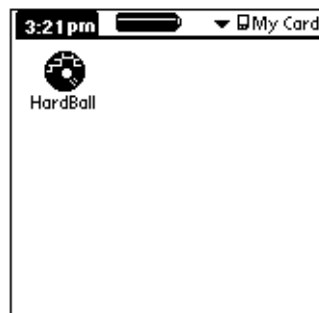


## Switching between applications

When working with any application, tap the Applications icon  or press an application button on the front panel of your handheld to switch to another application. Your handheld automatically saves your work in the current application and displays it when you return to that application.

When you use an expansion card, your handheld creates and displays a new category that matches the name of the expansion card. You can easily switch between applications installed on your handheld and on the expansion card.

To switch to an expansion card:

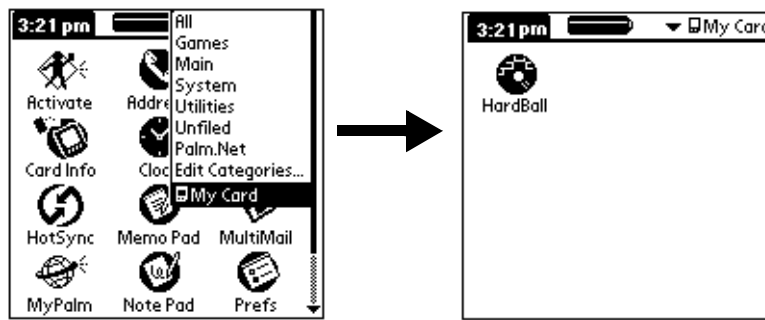

1. Tap the pick list in the upper-right corner.
2. Tap the category item that matches the name of the expansion card.




## Categorizing applications

The category feature enables you to manage the number of application icons that appear onscreen in the Applications Launcher. You can assign an application to a category and then display a single category or all your applications.

**To categorize an application:**


1. Tap the Applications icon .
2. Tap the Menu icon .
3. Tap Category on the App menu.
4. Tap the pick list next to each application to select a category.

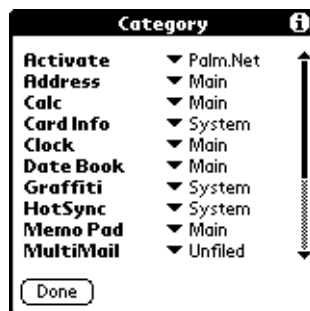

**TIP** To create a new category, tap Edit Categories from the pick list. Tap New, enter the category name, and then tap OK to add the category. Tap OK.

5. Tap Done.



**To display applications by category:**

1. Tap the Applications icon .
2. Do one of the following:
  - Tap the Applications icon repeatedly to cycle through all your categories.
  - Tap the pick list in the upper-right corner of the screen and select the category you want to display.

## Changing the Applications Launcher display



By default, the Applications Launcher displays each application as an icon. As an alternative, you can choose to show a list of applications. You can also choose to view the same category of applications each time you open the Applications Launcher.

**To change the Applications Launcher display:**

1. Tap the Applications icon .
2. Tap the Menu icon .
3. Tap Options, and then tap Preferences.
4. Tap the View By pick list and select List.
5. Tap OK.





**To open the Applications Launcher to the last opened category:**

1. Tap the Applications icon .
2. Tap the Menu icon .
3. Tap Options, and then tap Preferences.
4. Tap the Remember Last Category check box to select it.
5. Tap OK.


## Copying applications to an expansion card

You can copy applications from your handheld to an expansion card, or from an expansion card to your handheld.

**To copy an application to an expansion card:**

1. Tap the Applications icon .
2. Tap the Menu icon .

3. Tap Copy on the App menu.

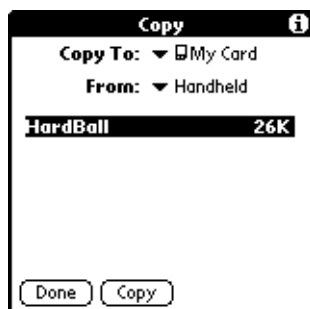

4. Select the card name from the Copy To pick list.
5. Select Handheld from the From pick list.
6. Tap an application to copy.
7. Tap Copy.
8. Tap Done.

You can install applications to a card that is seated in the expansion card slot during a HotSync® operation; see [“Installing add-on applications”](#) later in this chapter for details.


**NOTE** If you copy applications between your handheld and multiple expansion cards, and then attach a card with a copied application to a Card Reader/Writer, you may notice that the copied application’s filename has been changed to the name of a database file it contains. You will only see this if you use your cards with a Card Reader/Writer.

## Using menus


Menus on your handheld are easy to use. Once you have mastered them in one application, you can use them the same way in all other applications.

The menus of each application are illustrated in the chapter on that application.

**To open the menu bar:**

1. Open an application (such as Memo Pad).
2. Do one of the following:
  - Tap the Menu icon .

- Tap on the inverted title area at the top of the screen.

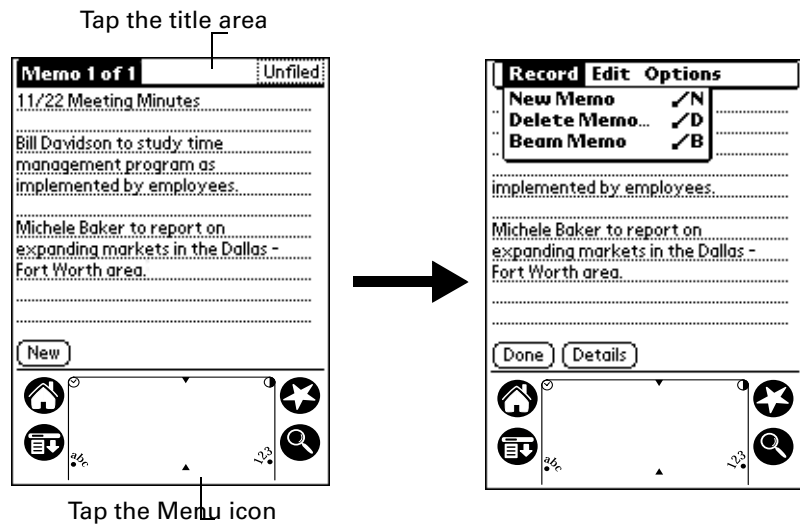

In this example, three menus are available: Record, Edit, and Options. The Record menu is selected and contains the commands New Memo, Delete Memo, and Beam Memo.


### Choosing a menu

After you open the menu bar for an application, tap the menu that contains the command you want to use.


The menus and menu commands that are available depend on the application that is currently open. Also, the menus and menu commands vary depending on *which* part of the application you're currently using. For example, in Memo Pad, the menus are different for the Memo list screen and the Memo screen.

### Graffiti menu commands


Most menu commands have an equivalent Graffiti Command stroke, which is similar to the keyboard shortcuts used to execute commands on computers. The command letters appear to the right of the command names.

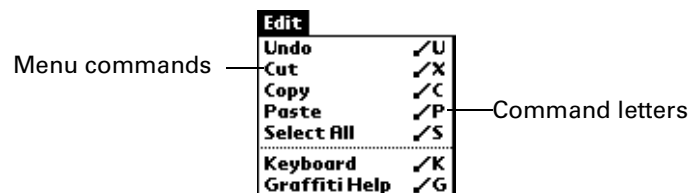

Draw the Command stroke anywhere in the Graffiti area. When you draw the Command stroke, the Command toolbar appears just above the Graffiti writing area to indicate that you are in Command mode.





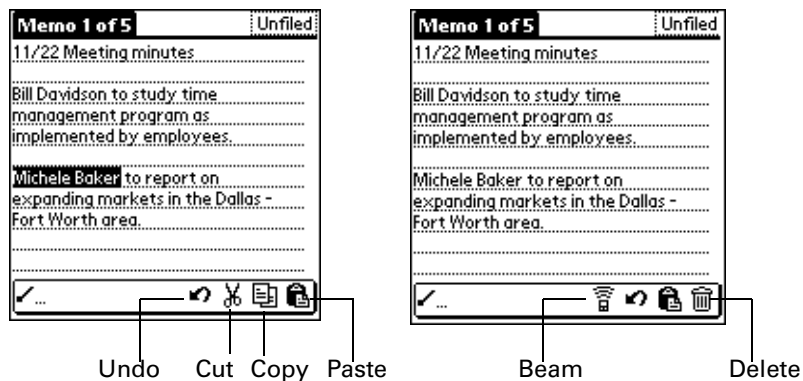

The command toolbar displays context sensitive menu commands for the current screen. For example, if text is selected the menu icons displayed may be undo, cut, copy, and paste. Tap on an icon to select the command, or immediately write the corresponding command letter for an appropriate command in the Graffiti writing area.


For example, to choose Select All in the Edit menu, draw the Command stroke, followed by the letter “s.”

Command mode is only active for a short time, so you must tap an icon or write the command letter immediately to choose the menu command.

## Choosing application preferences

You can set options that affect an entire application in the application’s Preferences dialog box.

**To change preferences for an application:**

1. Open an application.
2. Tap the Menu icon .
3. Tap Options, and then tap Preferences.

**NOTE** Not all applications have a Preferences command.

4. Make changes to the settings.
5. Tap OK.

## Common tasks

The tasks described in this section use the term “records” to refer to an individual item in any of the applications: a single Date Book event, Address Book entry, To Do List item, Note Pad note, or Memo Pad memo.

## Creating records

You can use the following procedure to create a new record in Date Book, Address Book, To Do List, Note Pad, and Memo Pad.

### To create a record:


1. Select the application in which you want to create a record.
2. Tap New.
3. In Date Book only: Select start and end times for your appointment and tap OK.
4. Enter text for the record.
5. (Optional) Tap Details to select attributes for the record. (Not available in Note Pad.)
6. In Address Book, Note Pad, and Memo Pad only: Tap Done.

There's no need to save the record because your handheld saves it automatically.

## Editing records

After you create a record, you can change, delete, or enter new text at any time. Two screen features tell you when your handheld is in editing mode:

- A blinking cursor
- One or more dotted edit lines

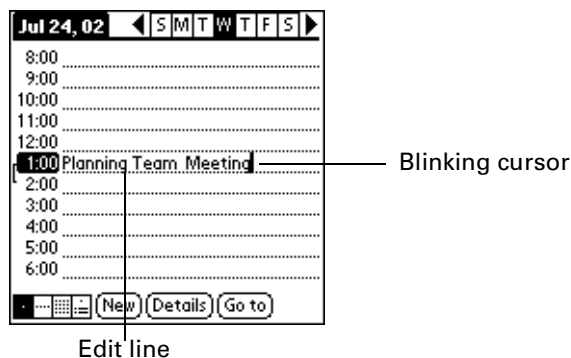

**NOTE** In Note Pad you can write anywhere on the screen. So, you will not see an edit line or blinking cursor.

### Entering text

For information on how to enter text using Graffiti writing, the onscreen keyboard, or the keyboard attached to your computer, see [Chapter 3](#). For information on entering text in Note Pad, see [Chapter 13](#).

### Edit menu

The Edit menu is available with any screen where you enter or edit text. In general, commands available in the Edit menu apply to text that you *select* in an application.

**To select text in an application:**

1. Tap the beginning of the text that you want to select.
2. Drag the stylus over the text to highlight it (in black).

**NOTE** You can also double tap to select a word, or triple tap to select a line of text. You can also drag *across* the text to select additional words, or drag *down* to select a group of lines.


The following commands may appear in an Edit menu:

<b>Undo</b>	Reverses the action of the <i>last edit</i> command. For example, if you used Cut to remove text, Undo restores the text you removed. Undo also reverses deletions done by using backspace.
<b>Cut</b>	Removes the selected text and stores it temporarily in the memory of your handheld. You can paste the text you cut into another area of the current application or into a different application.
<b>Copy</b>	Copies the selected text and stores it temporarily in the memory of your handheld. You can paste the text that you copy into another area of the current application or into a different application.
<b>Paste</b>	Inserts the text that you cut or copied at the selected point in a record. The text you paste replaces any selected text. If you did not previously cut or copy text, Paste does nothing.
<b>Select All</b>	Selects all of the text in the current record or screen. This enables you to cut or copy all of the text and paste it elsewhere.
<b>Keyboard</b>	Opens the onscreen keyboard. When you finish with the onscreen keyboard, tap Done.
<b>Graffiti Help</b>	Opens screens that show all the Graffiti character strokes. Use this command anytime you forget a stroke for a character.

**NOTE** In Note Pad, the Edit menu appears only when the title of a note is selected. To edit a note in Note Pad, use the eraser tool to remove lines, and the pen tool to add lines.

## Deleting records

**To delete a record:**

1. Select the record you want to delete.
2. Tap the Menu icon .
3. Tap Record, and then tap the Delete command:

**Date Book:** Delete Event

**Address Book:** Delete Address

**To Do List:** Delete Item

**Note Pad:** Delete Note

**Memo Pad:** Delete Memo

A confirmation dialog box appears. If you want to save a copy of the deleted item to an archive file in Palm™ Desktop software, be sure that the check box is checked. If you don't want to save a copy, tap the check box to remove the check. (The archive check box does not appear in Note Pad because you can't archive Note Pad notes.)

**4.** Tap OK.

If you choose to save a copy of the selected item, your handheld transfers it to the archive file on your desktop the next time you perform a HotSync operation.

### Other ways to delete records

You can also delete records in the following ways:

- In Date Book, Address Book, To Do List, and Memo Pad, open the Details dialog box for the record, tap Delete, and then tap OK.
- In Note Pad, open the note you want to delete, and then tap Delete.
- Delete the text of the record.

**NOTE** In Date Book, you can choose to delete the text of the current repeating event, current and future events, or all instances of that event.


## Purging records

Over time, as you use Date Book and To Do List, you'll accumulate records in these applications that have outlived their usefulness. For example, events that occurred months ago remain in the Date Book, and To Do List items that you marked as completed remain in the list.

All these outdated records take up memory on your handheld, so it's a good idea to remove them by using Purge. If you think Date Book or To Do List records might prove useful later, you can purge them from your handheld and save them in an archive file on your computer.

Purging is not available in Address Book, Note Pad, or Memo Pad; you must delete outdated records manually from these applications.

### To purge records:

1. Open the application.
2. Tap the Menu icon .
3. Tap Record, and then tap Purge.

A confirmation dialog box appears.

**Date Book:** Tap the pick list and select how old a record must be to be purged. Purge deletes repeating events if the last of the series ends before the date that you purge records.

**Date Book, To Do List:** If you want to save a copy of the purged records to an archive file on your desktop, be sure that the check box is checked. If you don't want to save a copy, tap the check box to remove the check box.

4. Tap OK.

If you chose to save a copy of the purged records, your handheld transfers them to an archive file on your desktop the next time you perform a HotSync operation.

**NOTE** Purging does not happen automatically. You must tap the command to make it happen.

## Categorizing records

Categorize records in the Address Book, To Do List, Note Pad, and Memo Pad applications so that they are grouped logically and are easy to review.

When you create a record, your handheld automatically places it in the category that is currently displayed. If the category is All, your handheld assigns it to the Unfiled category. You can leave an entry as Unfiled or assign it to a category at any time.

### System-defined and user-defined categories

By default, your handheld includes system-defined categories, such as All and Unfiled, and user-defined categories, such as Business and Personal.

You cannot modify the system-defined categories, but you can rename and delete the user-defined categories. In addition, you can create your own user-defined categories. You can have a maximum of 15 user-defined categories in each application.

When you have an expansion card properly seated in the expansion card slot, the last item in the category pick list will be the name of the expansion card. You cannot otherwise categorize applications that reside on an expansion card.

Address Book contains the QuickList user-defined category, in which you can store the names, addresses, and phone numbers you might need in emergencies (doctor, fire department, lawyer, etc.).

The illustrations in this section come from Address Book, but you can use these procedures in all the applications in which categories are available.

#### To move a record into a category:

1. Select the record you want to categorize.
2. In Address Book only: Tap Edit.
3. Tap Details.
4. Tap the Category pick list to display the list of available categories.




5. Select the category for the record.
6. Tap OK.

**NOTE** In Address Book, Note Pad, and Memo Pad you can tap the category name in the upper-right corner of the screen and select a new category for the item.

To display a category of records:

1. Tap the category pick list in the upper-right corner of the list screen.

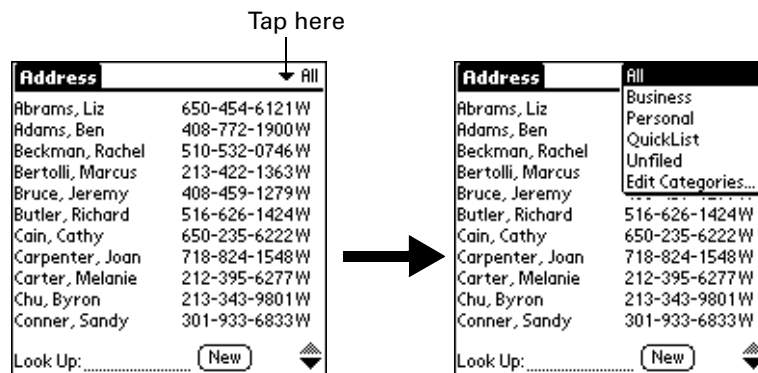

**NOTE** In the Date Book Agenda view, the pick list is in the upper right of the To Do list.


2. Select the category you want to view.

The list screen now displays only the records assigned to that category.

**TIP** Pressing an application button on the front panel of the handheld toggles through all the categories of that application.

**To define a new category:**

1. Tap the category pick list in the upper-right corner of the screen or list.

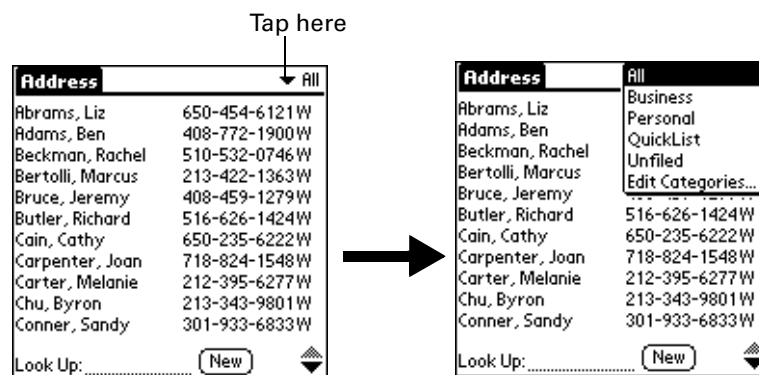

2. Tap Edit Categories.
3. Tap New.



4. Enter the name of the new category, and then tap OK.



5. Tap OK.

You can assign any of your records to the new category.

**To rename a category:**

1. Tap the category pick list in the upper-right corner of the screen or list.
2. Tap Edit Categories.
3. Select the category that you want to rename, and then tap Rename.



4. Enter the new name for the category, and then tap OK.



5. Tap OK.

**TIP** You can group the records in two or more categories into one category by giving the categories the same name. For example, if you change the name of the Personal category to Business, all records formerly in the Personal category appear in the Business category.

## Finding information

Your handheld offers several ways to find information quickly:

- **All applications that reside on your handheld:** Find locates any text that you specify, always starting with the current application. However, Find does not search through applications on expansion cards.
- **Date Book, To Do List, Memo Pad:** Phone Lookup displays the Address list screen and lets you add the information that appears in this list to a record.
- **Address Book:** The Look Up line lets you enter the first letters of a name to scroll immediately to that name.

### Looking up Address Book records

When working with Address Book, the scroll button on the front panel of the handheld makes it easy to navigate among your address entries.


- In the Address list screen, the scroll button moves up or down an entire screen of records. If you hold down the scroll button, you accelerate the scrolling and display every third screen.
- In the Address view screen, the scroll button moves to the previous or next address record.

You can also use the Address list Look Up feature to quickly scroll to any of your Address Book entries.



**To look up an Address Book record:**

1. Display the Address list screen.
2. Enter the first letter of the name you want to find.

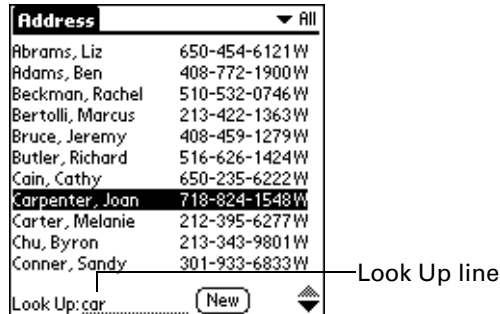

The list scrolls to the first entry that begins with that letter. If you write another letter, the list scrolls to the first entry that starts with those *two* letters. For example, writing an “s” scrolls to “Sands,” and writing “sm” scrolls further to “Smith.” If you sort the list by company name, the Look Up feature scrolls to the first letter of the company name.

3. Tap the record to view its contents.

**Using Find**

You can use Find to locate any text that you specify, in any application that resides on your handheld. Find does not search applications that reside on an expansion card.

**To use Find:**

1. Tap the Find icon

**TIP** If you select text in an application before you tap Find, the selected text automatically appears in the Find dialog box.


2. Enter the text that you want to find.

Find is *not* case-sensitive. For example, searching for the name “davidson” also finds “Davidson.”

Find locates any words that begin with the text you enter. For example, searching for “plane” finds “planet,” but not “airplane.”

3. Tap OK.

Find searches for the text in all records and all notes.

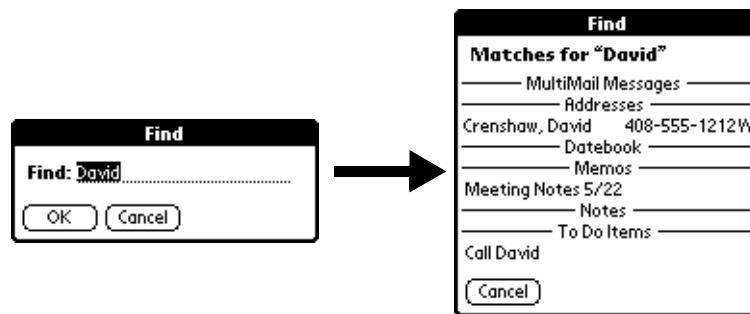


As your handheld searches for the text, you can tap Stop at any time. You may want to do this if the entry you want appears before your handheld finishes the search. To continue the search after you tap Stop, tap Find More.

4. Tap the text that you want to review.


### Using Phone Lookup

Phone Lookup displays the Address list screen and lets you add the information that appears in this list to a record.

#### To use Phone Lookup:

1. Display the record in which you want to insert a phone number. The record can be in Date Book, To Do List, Memo Pad, or Mail.
2. Tap the Menu icon .
3. Tap Options, and then tap Phone Lookup.
4. Begin to spell the last name of the name you want to find.

The list scrolls to the first record in the list that starts with the first letter you enter. Continue to spell the name you're looking for, or when you see the name, tap it.

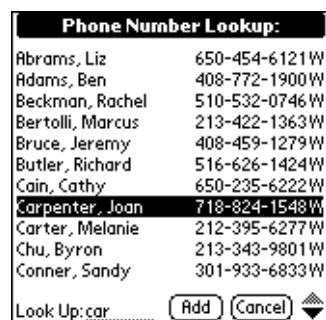

5. Tap Add.

The name you selected, along with the other information associated with it, is pasted into the record you selected in step 1.

### Phone Lookup tips

Write the Graffiti Command stroke “/L” to activate the Phone Lookup feature. You can also activate it in the following circumstances:

- **While entering text:** For example, to insert the full name and phone number for someone with the last name “Williams,” write the Graffiti characters for “Wi” and then the Phone Lookup Command stroke “/L.”  
Assuming you have only one Address Book record that begins with “Wi,” your handheld inserts the full name “Fred Williams” (and its associated information). If you have more than one name that begins with “Wi,” the Phone Lookup screen appears and highlights the first record that begins with “Wi.”
- **For selected text:** Drag to highlight the text, and then write the Phone Lookup Command stroke “/L.” Your handheld replaces the selected text and adds the name and its associated information.

## Sorting lists of records


You can sort lists of records in various ways, depending on the application. Sorting is available in applications that have list screens: Address Book, To Do List, and Memo Pad.

**NOTE** You can also assign records to categories. See “Categorizing records” earlier in this chapter.



### To sort records in To Do List:

1. Open the application to display the list screen.
2. Tap Show.
3. Tap the Sort by pick list and select an option.
4. Tap OK.

### To sort records in Address Book, Note Pad, and Memo Pad:

1. Open the application to display the list screen.
2. Tap the Menu icon .

3. Tap Options, and then tap Preferences.

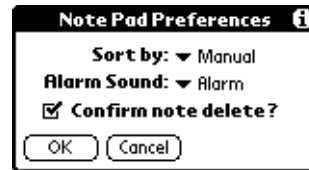**Address Book****Note Pad****Memo Pad**

4. Do one of the following:

**Address Book:** Tap the setting you want.

**Note Pad:** Tap the Sort by pick list and select Alphabetic, Date, or Manual.

**Memo Pad:** Tap the Sort by pick list and select Alphabetic or Manual.

5. Tap OK.

To sort the Note Pad or Memo list manually, tap and drag a memo or note to a new location in the list.

To make the list of your memos appear in Palm Desktop software as you manually sorted it on your handheld, open Memo Pad in Palm Desktop software and click List by. Then select Order on handheld.


## Attaching notes

In applications except Memo Pad and Note Pad, you can attach a note to a record. A note can be up to several thousand characters long. For example, for an appointment in Date Book, you can attach a note with directions to the location.

**To attach a note to a record:**


1. Display the entry to which you want to add a note.
2. In Address Book only: Tap Edit.
3. Tap Details.
4. Tap Note.
5. Enter your note.
6. Tap Done.

A small note icon appears at the right side of any item that has a note.

**To review or edit a note:**


- Tap the Note icon .

**To delete a note:**


1. Tap the Note icon .
2. Tap Delete.
3. Tap Yes.


## Choosing fonts

In many applications, you can change the font style to make text easier to read. You can choose small, large, or bold fonts in each application that allows you to change font style.

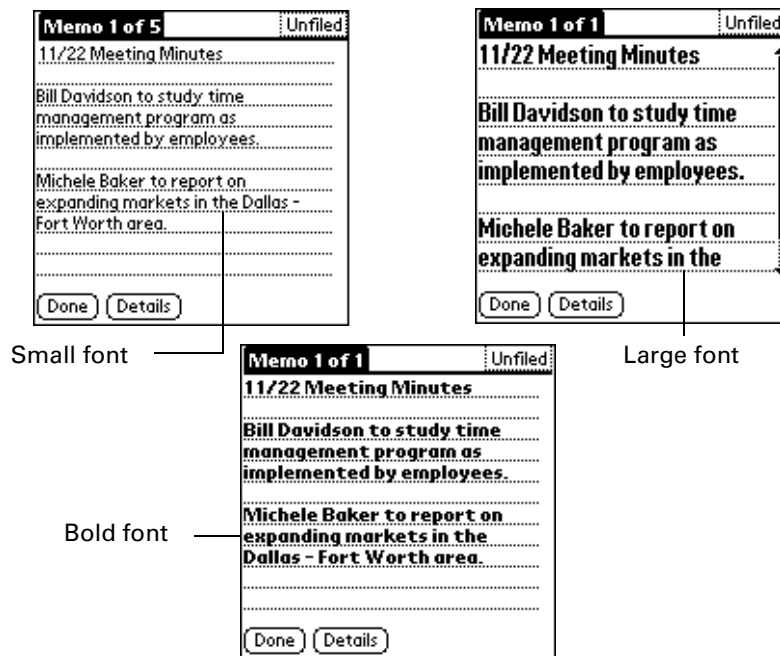

To change the font style:

1. Open an application.
2. Tap the Menu icon .
3. Tap Options, and then tap Font.
4. Tap the font style you want to use.

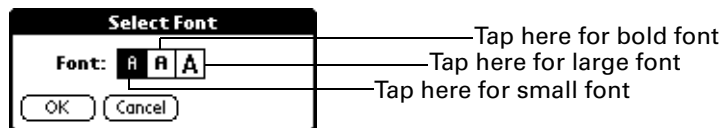


5. Tap OK.

## Reviewing alerts

When you use certain application settings, your handheld can alert you to any of the following:

- An appointment set in Date Book
- A note created in Note Pad
- An alarm set in Clock
- E-mail received by your Palm wireless or business e-mail accounts

When an alert occurs, your handheld displays a reminder message. If you tap Snooze in response to an alert message, your handheld reminds you of the item again in five minutes. The Reminder screen displays alerts that await attention.

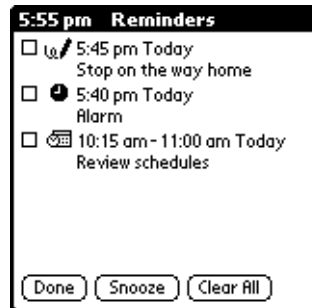

To respond to alerts, do one of the following:

- Select an item's check box to clear the item.
  - Tap an item (either the icon or the text description) to open the application where the alarm was set. The application opens to the entry associated with the alarm.
  - Tap Done to close the reminder list and return to the current screen. An attention indicator will blink in the upper-left corner of the screen; tap it to view the alert list again.
  - Tap Snooze to see the list again in five minutes.
- If you tap Done or Snooze and view the reminder list later, the current time displays in the Reminder bar and the original alert time displays with each list item.
- Tap Clear All to dismiss all alerts in the list.

## Hiding or masking private records

You can use the Security application to set a password and select whether to mask your private records or hide them completely. See [Chapter 14](#) for details.

## Installing and removing applications

This section explains how to install and remove applications on your handheld or on an expansion card, and how to remove Palm Desktop software from your computer.

### Installing add-on applications


Your handheld comes with applications installed and ready to use, but you can also install additional applications, such as games and other software, on your handheld or on a card that is seated in the expansion card slot. Applications or games that you install on your handheld reside in RAM memory, and you can delete them at any time.

The Install Tool makes it easy to install software during a HotSync operation. There are a variety of third-party applications available for your handheld. To learn more about these applications, go to the web site: [www.palm.com](http://www.palm.com).

**To install add-on software on your handheld using a Windows computer:**

1. On your computer, copy or download the application you want to install into the add-on folder in your Palm Desktop directory on your computer.
2. Double-click the Palm Desktop icon on your desktop.
3. Click Install.

**TIP** You can also access the Install Tool dialog by selecting Install Tool from the Palm Desktop program group or by double-clicking any file with a PRC, PDB, POA, PNC, or SCP file extension.

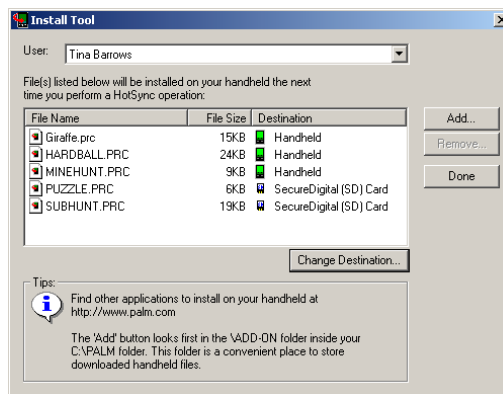


4. In the User drop-down list, select the name that corresponds to your handheld.
5. Click Add.



6. Select the application(s) that you want to install.
7. Click Open.



8. If you need to change the destination of the application you are installing, click Change Destination on the Install Tool window, and then use the arrows to move applications between your handheld and an expansion card.

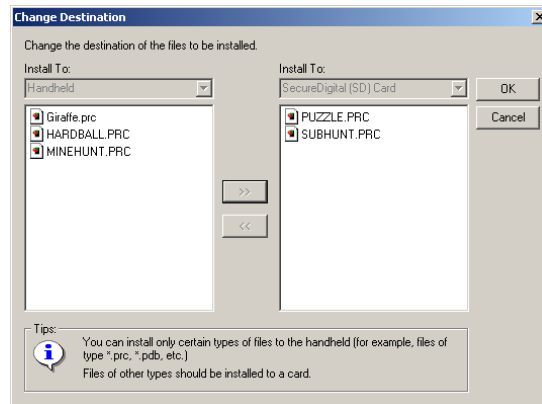


9. Click OK to close the Change Destination window.
10. Click Done to close the Install Tool window.
11. Perform a HotSync operation to install the selected application(s). See [“Performing cradle HotSync operations”](#) in [Chapter 16](#) for details.

**NOTE** Files that remain in the list after you perform a HotSync operation did not install. This can happen if the file type was not recognized during the HotSync operation. Expansion cards may hold applications that use files other than the Palm™ application files. In order for your handheld to recognize such a file, you must launch the application that uses these files at least once.


**To install add-on software on your handheld using a Mac computer:**

1. On your Mac computer, copy or download the application you want to install into the add-on folder in your Palm folder.
2. Double-click the HotSync Manager icon in the Palm folder.


- From the HotSync menu, choose Install Handheld Files.

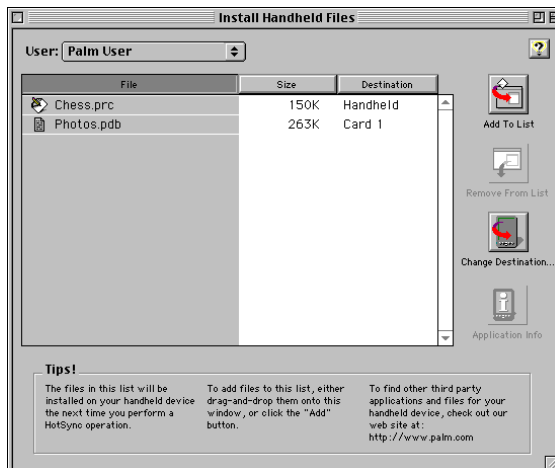

- From the User pop-up menu, select the name that corresponds to your handheld.
- Click Add to List.
- Select the Add-on folder from the pop-up menu.

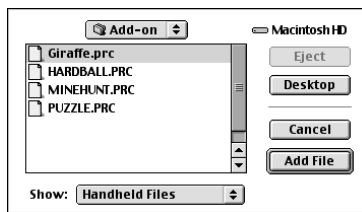

- Select the application(s) you want to install.
- Click Add File to add the selected application to the Install Handheld Files list.
- If you need to change the destination of the application you are installing, click Change Destination on the Install Handheld Files window, and then use the arrows to move applications between your handheld and an expansion card.

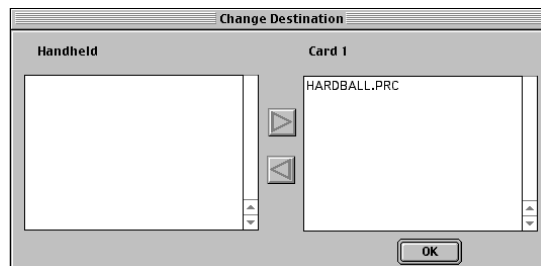

- Click OK to close the Change Destination window.
- Close the Install Handheld Files window.



12. Perform a HotSync operation to install the selected application(s) on your handheld. See [“Performing cradle HotSync operations”](#) in [Chapter 16](#) for details.

**NOTE** Files that remain in the list after you perform a HotSync operation did not install. This can happen if the file type was not recognized during the HotSync operation. Expansion cards may hold applications that use files other than the Palm application files. In order for your handheld to recognize such a file, you must launch the application that uses these files at least once.

## Removing applications

In the event that you run out of memory or decide that you no longer need an application you installed, you can remove applications from your handheld or from an expansion card. From your handheld, you can remove only add-on applications, patches, and extensions that you install; you cannot remove the applications that reside in the ROM portion of your handheld.

To remove an add-on application:

1. Tap the Applications icon .
2. Tap the Menu icon .
3. Tap Delete on the App menu.
4. Tap the Delete From pick list and select either Handheld or Card. To delete applications from a card, the card must be seated in the expansion card slot.
5. Tap the application that you want to remove.



6. Tap Delete.
7. Tap Yes.
8. Tap Done.

## Removing Palm Desktop software

If you no longer want to use Palm Desktop software, you can remove it from your computer.

**To remove Palm Desktop software from a Windows computer:**

1. From the Windows Start menu, choose Settings, and then Control Panel.
2. Double-click the Add/Remove Programs icon.
3. Click the Change or Remove Programs button.
4. Select Palm Desktop.
5. Click Change/Remove.
6. Click Yes in the Confirm File Deletion box.
7. Click OK.
8. Click Close.

**NOTE** You need to install the HotSync Manager from the installation CD if you want to synchronize data with another PIM.

**To remove Palm Desktop software from a Mac computer:**

1. Locate the Palm Desktop Installer icon and double-click this icon.
2. From the Easy Install screen, choose Uninstall from the pop-up menu.
3. Select the software you want to remove.
4. Click Uninstall.
5. Select the folder that contains your Palm Desktop software files.
6. Click Remove.

This process removes only the application files. The data in your Users folder remains untouched.

7. Restart your computer.

# Using Address Book




Address Book enables you to keep names, addresses, phone numbers, and other information about your personal or business contacts. Use Address Book to do the following:

- Quickly look up or enter names, addresses, phone numbers, and other information.
- Enter up to five phone numbers (home, work, fax, mobile, etc.) or e-mail addresses for each name.
- Define which phone number appears in the Address list for each Address Book entry.
- Attach a note to each Address Book entry, in which you can enter additional information about the entry.
- Assign Address Book entries to categories so that you can organize and view them in logical groups.
- Create your own digital business card that you can beam to other Palm OS® handhelds.

## To open Address Book:

- Press the Address Book application button on the front panel of your handheld. Address Book opens to display the list of all your records.

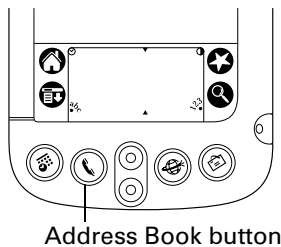

- Press the Address Book application button repeatedly to cycle through the categories in which you have records.
- Press and hold the Address Book application button to instantly beam your business card to another Palm OS handheld.

## Creating an Address Book entry


A record in Address Book is called an “entry.” You can create entries on your handheld, or you can use Palm™ Desktop software to create entries on your computer and then download the entries to your handheld with your next HotSync® operation.

Palm Desktop software also has data import capabilities that enable you to load database files into Address Book on your handheld.

See “Importing data” in [Chapter 3](#) and Palm Desktop online Help for more information.

To create a new Address Book entry:

1. Press the Address Book application button  on the front of your handheld to display the Address list.
2. Tap New.

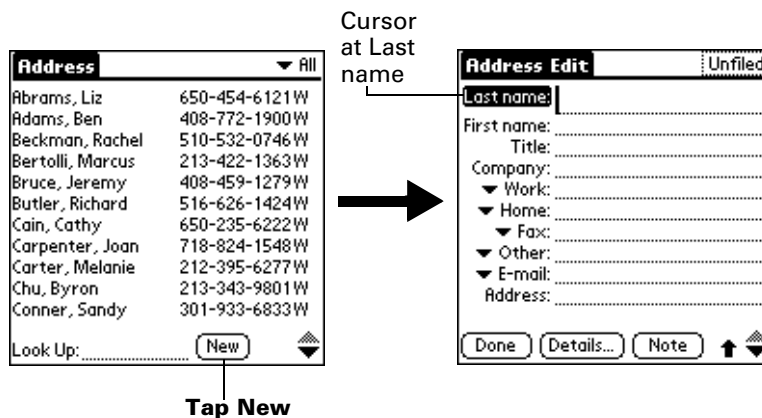

3. Enter the last name of the person you want to add to your Address Book.

The handheld automatically capitalizes the first letter of each field (except numeric and e-mail fields). You do not have to use the Graffiti® capital stroke to capitalize the first letter of the name.

4. Use the Next Field Graffiti stroke to move to the First Name field.




**TIP** You can also move to any field by tapping it directly.

5. Enter the first name of the person in the First Name field.
6. Enter the other information that you want to include in this entry.

As you enter letters in the Title, Company, City, and State fields, text appears for the first logical match that exists in your Address Book. As you enter more

letters, a closer match appears. For example, you may already have Sacramento and San Francisco in your Address Book. As you enter “S” Sacramento appears, and as you continue entering “a” and “n” San Francisco replaces Sacramento. As soon as the word you want appears, tap in the next field to accept the word.

7. Tap the scroll arrows  to move to the next page of information.
8. After you finish entering information, tap Done.



Tap Done


**TIP** To create an entry that always appears at the top of the Address list, begin the Last name or Company field with a symbol, as in \*If Found Call\*. This entry can contain contact information in case you lose your handheld.

## Selecting types of phone numbers

You can select the types of phone numbers or e-mail addresses that you associate with an Address Book entry. Any changes you make apply only to the current entry.

To select other types of phone numbers in an entry:

1. Tap the entry that you want to change.
2. Tap Edit.
3. Tap the pick list next to the label you want to change.

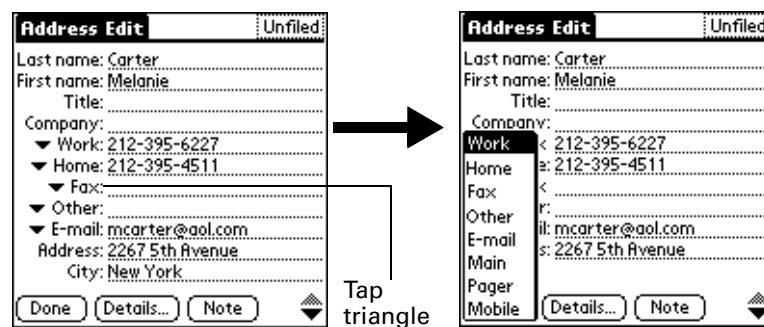

4. Select a new label.

## Changing Address Entry details

The Address Entry Details dialog box provides a variety of options that you can associate with an entry.

To open the Address Entry Details dialog box:

1. Tap the entry whose details you want to change.
2. Tap Edit.
3. Tap Details.



4. Select any of the following settings:

<b>Show in List</b>	Select which type of phone or other information appears in the Address list screen. Your options are Work, Home, Fax, Other, E-mail, Main, Pager, and Mobile. The identifying letters W, H, F, O, M, or P appear next to the record in the Address list, depending on which information is displayed. If you select E-mail, no identifying letter is displayed.
<b>Category</b>	Assign the entry to a category.
<b>Private</b>	Hide this entry when Security is turned on.


## Address Book menus

Address Book menus are shown here for your reference, and Address Book features that are not explained elsewhere in this book are described here.


See “Using menus” in [Chapter 6](#) for information about choosing menu commands.

The Record and Options menus differ depending on whether you’re displaying the Address list screen or the Address view screen.

### Record menus

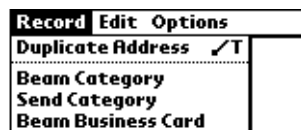

Address list

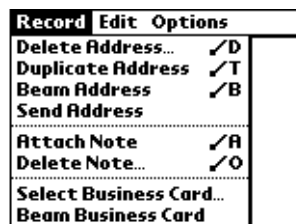

Address view



- Duplicate Address** Makes a copy of the current record and displays the copy in Address Edit so you can make changes to the copied record. The copy has the same category and attached notes as the original record.
- Send Category** Opens MultiMail® Deluxe and allows you to create a message to which all addresses in a category are attached.
- Send Address** Opens MultiMail Deluxe and allows you to create a message to which an address is attached.

### Options menus



Address list




Address view

### Preferences




**Remember last category.** Determines how Address Book appears when you return to it from another application. If you select this check box, Address Book shows the last category you selected. If you clear it, Address Book displays the All category.

- Rename Custom Fields** These custom fields appear at the end of the Address Edit screen. Rename them to identify the kind of information you enter in them. The names you give the custom fields appear in all entries.

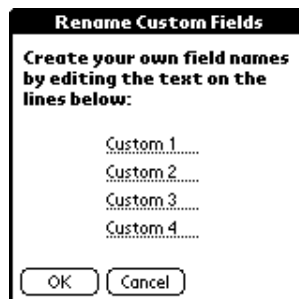



**About Address Book** Shows version information for Address Book.

# Using Calculator

 Calculator enables you to perform basic calculations. Use Calculator to do the following:


- Perform addition, subtraction, multiplication, division, and square root operations.
- Store and retrieve values.
- Display the last series of calculations, which is useful for confirming a series of “chain” calculations.

To open Calculator:

1. Tap the Applications icon .
2. Tap the Calculator icon .

## Performing calculations

The Calculator includes several buttons to help you perform calculations.

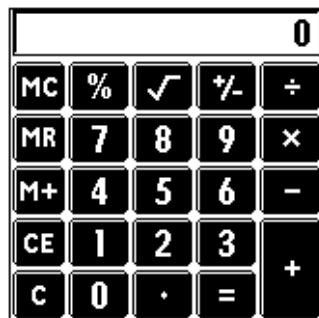

Clears the entire calculation and enables you to begin a fresh calculation.



Clears the last number you entered. Use this button if you make a mistake while entering a number in the middle of a calculation. This button enables you to re-enter the number without starting the calculation over.



Toggles the current number between a negative and positive value. If you want to enter a negative number, enter the number first *and then press* the +/- button.



Places the current number in memory. Each new number you enter with the M+ button is *added to the total* already stored in memory. The number that you add can be either a calculated value or any number you enter by pressing the number buttons. Pressing this button has no effect on the current calculation (or series of calculations); it merely places the value into memory until it is recalled.



Recalls the stored value from memory and inserts it in the current calculation.



Clears any value that is stored in the Calculator memory.




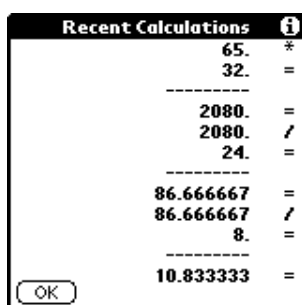
Calculates the square root of a number. Enter the number, then tap the square root button.

## Recent Calculations

The Recent Calculations command enables you to review the last series of calculations and is particularly useful for confirming a series of “chain” calculations.

To display recent calculations:

1. Tap the Menu icon .
2. Tap Options, and then tap Recent Calculations.




3. After you finish reviewing the calculations, tap OK.

## Calculator menus

Calculator menus are shown here for your reference, and Calculator features that are not explained elsewhere in this book are described here.

See “Using menus” in [Chapter 6](#) for information about choosing menu commands.

## Options menus



**About Calculator** Shows version information for Calculator.



# Using Card Info






Card Info lets you review general information about an expansion card.

Use Card Info to do the following:



- Review card contents.
- Rename a card.
- Format a card.


## Reviewing Card Information

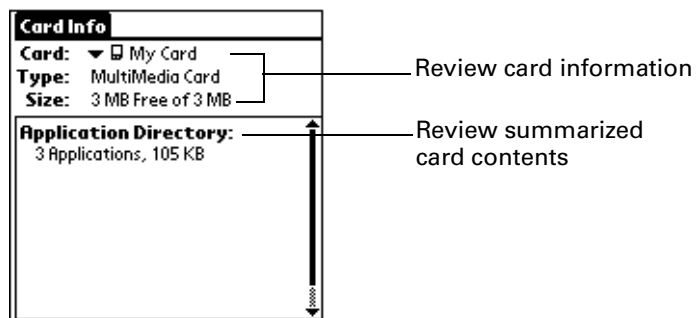1. Tap the Applications icon .
2. Tap the Card Info icon .
3. Review Card name, Type, and Size.
4. Review card contents summarized by directory.



## Renaming a card

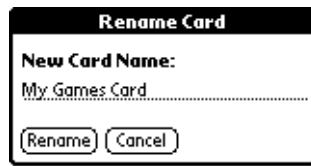

1. Tap the Applications icon .
2. Tap the Card Info icon .
3. Tap the Menu icon.
4. Tap Card, and then tap Rename Card.
5. Enter the new name for the card.



6. Tap Rename.

## Formatting a card

Formatting a card destroys all its data and prepares it to accept new applications and data.


1. Tap the Applications icon .
2. Tap the Card Info icon .
3. Tap the Menu icon.
4. Tap Card, and then tap Format Card.
5. Tap OK.

## Card Info menus

Card Info menus are shown here for your reference, and Card Info features that are not explained elsewhere in this book are described here.

See “Using menus” in [Chapter 6](#) for information about choosing menu commands.

## Card menus



- |                        |  |
|------------------------|--|
| <b>Help</b>            | Provides help text.                      |
| <b>About Card Info</b> | Shows version information for Card Info. |



# Using Clock





Clock enables you to view the current time and date and to set an alarm.

Use Clock to do the following:

- View the current time and date.
- Open a preferences screen where you can set the time and date for all the applications on your handheld.
- Set an alarm.

## To open Clock:

1. Tap the Applications icon .
2. Tap the Clock icon .

**TIP** You can also tap the clock icon  in the upper-left corner of the Graffiti® writing area to open clock.




## Viewing the time

Clock makes it easy for you to check the time and date, and provides a convenient travel alarm feature. See [“Date and Time preferences”](#) in [Chapter 17](#) for details on setting the current date and time for all the applications on your handheld.

In addition to setting the date and time, you can set an alarm to sound during the next 24-hour period.



## To view the time:


Do one of the following:

- When your handheld is on, tap the Clock icon  in the upper left corner of the Graffiti writing area.
- Tap the Applications icon , and then tap the Clock icon .


## Setting an alarm

To set an alarm:

1. Tap the Applications icon .
2. Tap the Clock icon .
3. Tap the Alarm box to open the Set Alarm dialog box.

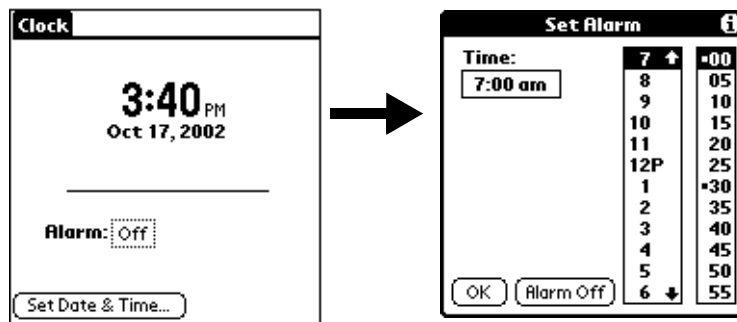

4. Tap the time columns to set the hour and minute.
5. When the alarm reminder message appears, do one of the following:  
 Tap OK to permanently dismiss the reminder and return to the current screen.  
 Tap Snooze to dismiss the reminder and return to the current screen. The reminder message appears again in five minutes, and an attention indicator blinks in the upper-left corner of the screen to remind you of the pending alarm. When the reminder message reappears, the current time displays in the Reminder bar and the alarm time displays on the screen.  
 Tap Go To to open Clock.

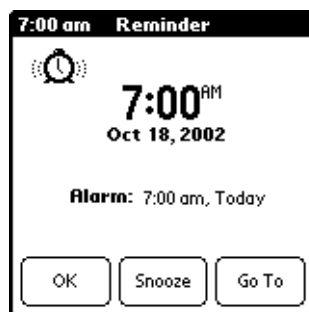


## Clock menus

Clock menus are shown here for your reference, and Clock features that are not explained elsewhere in this book are described here.

See [“Using menus”](#) in [Chapter 6](#) for information about choosing menu commands.


## Options menu



- Display Options** Allows you to choose which information appears on the Clock screen.
- Day.** Activates the day of the week display. When it is on, the day appears above the time.
- Date.** Activates the date display. When it is on, the date appears below the time.
- Alarm Preferences** **Sound.** Sets the sound of the alarm. The choices are Alarm, Bumble Bee, Reveille, Sonata, Wake Up, and Warbler.
- Volume.** Defines how loud the alarm sounds. The choices are Low, Medium, and High.
- About Clock** Shows version information for Clock.




# Using Date Book

 Date Book lets you quickly and easily schedule appointments or any kind of activity associated with a time and date. Use Date Book to do the following:

- Enter a description of your appointment and assign it to a specific time and date.
- Display a chart of your appointments for an entire week. The Week View makes it easy to spot available times and any potential scheduling overlaps or conflicts.
- Display a monthly calendar to quickly spot days where you have morning, lunch, or afternoon appointments.
- Display an agenda showing appointments, untimed events, and your To Do items for the day.
- Set an alarm to notify you of the scheduled activity.
- Create reminders for events that are based on a particular date, rather than time of day. Birthdays and anniversaries are easy to track with your handheld.
- Attach notes to individual events for a description or clarification of the entry in your Date Book.

## To open Date Book:

- Press the Date Book application button on the front panel of your handheld. Date Book opens to today's schedule.

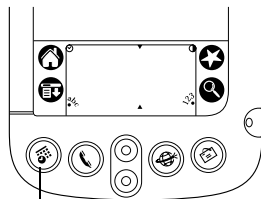

Date Book button

**TIP** Press the Date Book application button repeatedly to cycle through the Day, Week, Month and Agenda views.

When you open Date Book, the screen shows the current date and a list of times for a normal business day.

## Scheduling an event

A record in Date Book is called an “event.” An event can be any kind of activity that you associate with a day. You can enter a new event on any of the available time lines.

When you schedule an event, its description appears on the time line, and its duration is automatically set to one hour. You can easily change the start time and duration for any event.


It’s possible to schedule events that overlap, but Date Book makes it easy to find such conflicts. See [“Spotting event conflicts”](#) later in this chapter.

You can also schedule events in your Date Book that occur on a particular date but have no specific start or end times, such as birthdays, holidays, and anniversaries. These are referred to as “untimed events.” Untimed events appear at the top of the list of times, marked with a diamond. You can have more than one untimed event on a particular date.

You can also schedule a repeating event, such as a weekly meeting, and continuous events, such as a three-day conference or a vacation.


**To schedule an event for the current day:**

1. Tap the time line that corresponds to the beginning of the event.

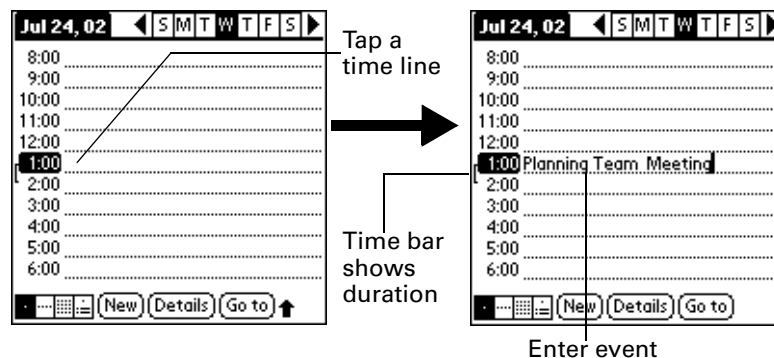

2. Enter a description of the event. You can enter up to 255 characters.

- If the event is one hour long, skip to step 5. If the event is longer or shorter than an hour, tap the time of the event to open the Set Time dialog box.

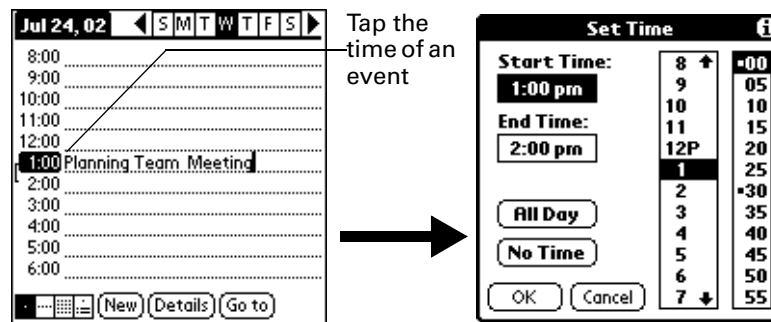


**TIP** You can also open the Set Time dialog (to select a start time) by making sure no event is selected, and then writing a number on the number side of the Graffiti® writing area.

- Do one of the following:

Tap the time columns on the right side of the Set Time dialog to set the Start Time, then tap the End Time box and tap the time columns to set the End Time.

Tap All Day to automatically insert the start and end time of the event as defined in your Date Book preferences.

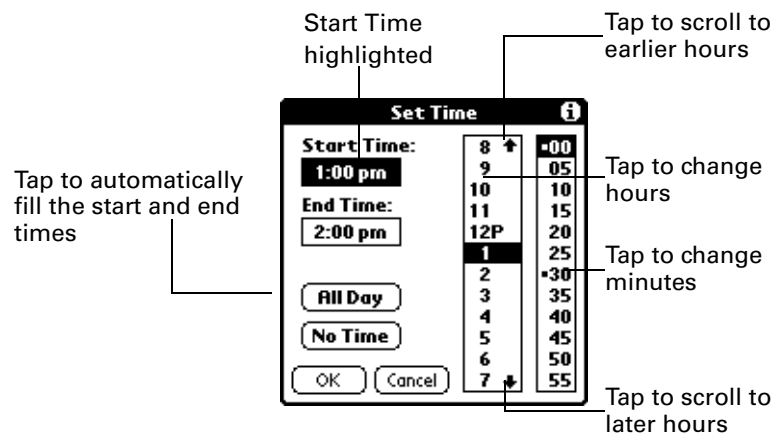


- Tap OK.
- Tap a blank area of the screen to deselect the event. A vertical line appears next to the time, indicating the duration of the event.

If an event has the same start and end time, the time is only displayed once.


#### To schedule an event for another day:

- Select the date you want for the event by doing one of the following:
  - Tap the day of the week that you want in the date bar at the top of the screen. If necessary, tap the Previous week or Next week scroll arrows to move to another week.

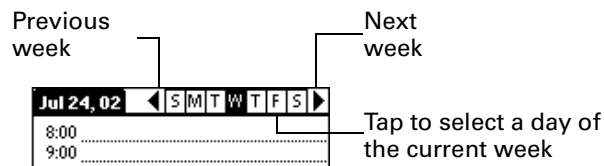

**TIP** You can also use the scroll button on the front panel of your handheld to move forward or backward one day at a time.

- Tap Go To at the bottom of the screen to open the Go to Date dialog box. Select a date by tapping a year, month, and day in the calendar.

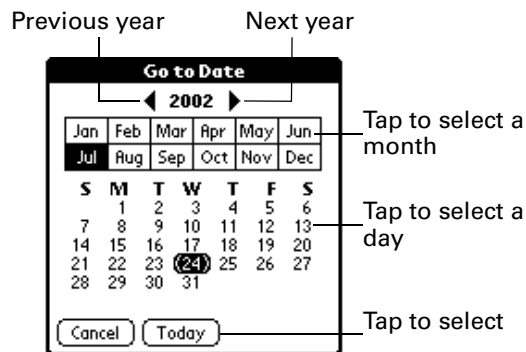


**TIP** In the Go to Date dialog box, you can also use the scroll button on the front panel of the handheld to move forward or backward one month at a time.

2. After you locate the date, follow the steps for scheduling an event for the current day.

**To schedule an untimed event:**


1. Select the date that you want for the event.
2. Tap New.
3. Tap No Time, so that no start or end times are defined for the new event.

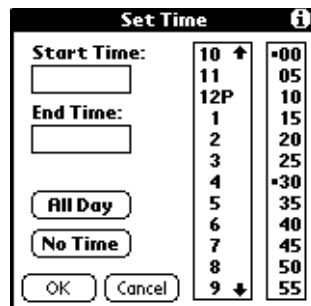

**TIP** You can also create a new untimed event by making sure no event is selected and then writing letters in the Graffiti® writing area.



4. Enter a description of the event.

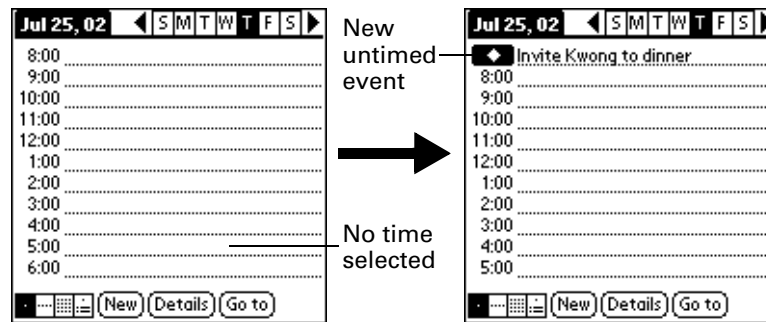

5. Tap a blank area on the screen to deselect the untimed event.

If you create an event and decide later that there is no particular start or end time, you can easily change it to an untimed event. Tap the time of the event in the Date Book screen, tap No Time, and then tap OK.

## Rescheduling an event


You can easily make changes to your schedule with your handheld.

**To reschedule an event:**

1. Tap the event you want to reschedule.
2. Tap Details.
3. To change the time, tap the Time box and select a new time.
4. To change the date, tap the Date box and select a new date.
5. Tap OK.

## Setting an alarm for an event

The Alarm setting enables you to set an alarm for events in your Date Book. You can set an alarm to notify you minutes, hours, or days before an event. The default Alarm setting is 5 minutes before the time of the event, but you can change this to any number of minutes, hours, or days.


When you set an alarm, this icon  appears to the far right of the event with the alarm. When the alarm occurs, a reminder message also appears onscreen.

**To set an alarm for an event:**


1. Tap the event to which you want to assign an alarm.
2. Tap Details.
3. Tap the Alarm check box to select it.

The default setting, 5 Minutes, appears.

4. Tap the pick list to select Minutes, Hours, or Days.
5. Select the 5 and enter any number from 0 to 99 (inclusive) as the number of time units.

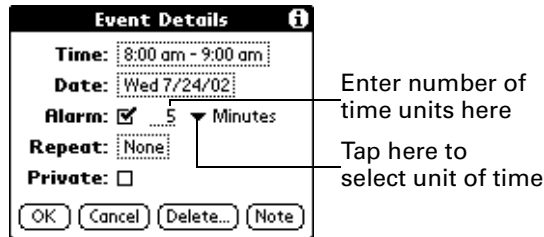

6. Tap OK.
7. When the reminder message appears on screen, do one of the following:  
 Tap OK to permanently dismiss the reminder and return to the current screen.  
 Tap Snooze to dismiss the reminder and return to the current screen. The reminder message appears again five minutes after you tap Snooze, and an attention indicator blinks in the upper-left corner of the screen to remind you of the pending alarm.  
 Tap Go To to open Date Book. Date Book will open and display the event associated with the alarm.

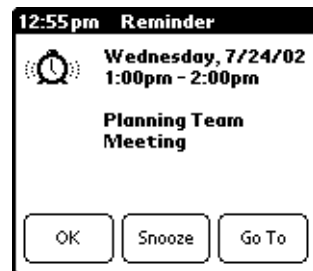

**Alarm for untimed events:** You can set a silent alarm for an untimed event. In this case, the alarm triggers at the specified period of minutes, hours, or days before midnight (beginning) of the day of the untimed event. When the alarm triggers, the reminder list displays the alarm message until you clear it. See [“Reviewing alerts”](#) in [Chapter 6](#) for details.

For example, you set an alarm for an untimed event that occurs on February 4th. If the alarm is set for 5 minutes, the reminder message appears at 11:55 PM on the night of February 3rd. The reminder remains in the reminder list until you turn on your handheld and dismiss it.

## Scheduling repeating or continuous events


The Repeat function lets you schedule events that recur at regular intervals or extend over a period of consecutive days.

A birthday is a good example of an event that repeats annually. Another example is a weekly guitar lesson that falls on the same day of the week and the same time of day.

A business trip or a vacation is an example of a continuous event.

**To schedule a repeating or continuous event:**

1. Tap the event.
2. Tap Details.
3. Tap the Repeat box to open the Change Repeat dialog box.

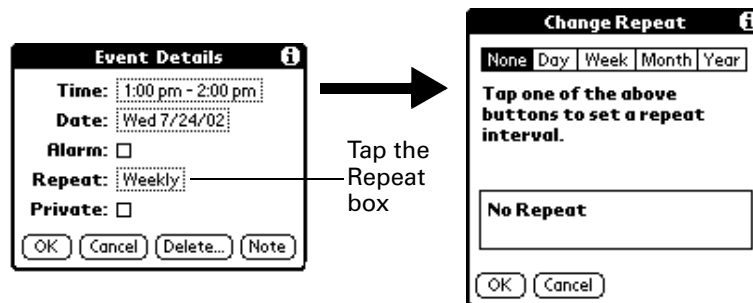


4. Tap Day, Week, Month, or Year to set how often event repeats.

For a continuous event, tap Day.

5. Enter a number that corresponds to how often you want the event to repeat on the Every line.

For example, if you select Month and enter the number 2, the event repeats every other month.


6. To specify an end date for the repeating or continuous event, tap the End on pick list and tap Choose Date. Use the date picker to select an end date.
7. Tap OK.

After you schedule a repeating or continuous event, this icon  appears to the far right of the event.

### Changing repeating or continuous events

When you make changes to a repeating or continuous event, such as deleting or adding notes, or changing the time of an event, you can decide which of the events you want to change; all events in the series, just the current event, or the current and future events.

**To delete repeating events:**

1. Select the record you want to delete.
2. Tap the Menu icon .
3. Tap Record, and then tap Delete Event.

4. Do one of the following:



Tap Current to delete only the current event item.


Tap Future to delete the current and all future event items and reset the end date of the repeating event to the last shown date.

Tap All to delete all occurrences of the repeating event.

5. Tap OK.

### Considerations for repeating or continuous events

Keep the following points in mind:

- If you change the start date of a repeating event, your handheld calculates the number of days you moved the event. Your handheld then automatically changes the end date to maintain the duration of the repeating event.
- If you change the repeat interval (e.g., daily to weekly) of a repeating event, past occurrences (prior to the day on which you change the setting) are not changed, and your handheld creates a new repeating event.
- If you change the date of an occurrence of a repeating event (e.g., from January 14th to January 15th) and apply the change to all occurrences, the new date becomes the start date of the repeating event. Your handheld adjusts the end date to maintain the duration of the event. If you apply the change to current and future occurrences, past occurrences are not changed.
- If you change other repeat settings (e.g., time, alarm, private) of a repeating event and apply the change to all occurrences, your handheld creates a new event. The start date of this new event is the day on which the setting is changed.
- If you apply a change to a single occurrence of a repeating event (e.g., time), that occurrence no longer shows the Repeat icon .

## Changing the Date Book view

In addition to displaying the time list for a specific day, you can also display a whole week, a month, or an agenda. You can also display the current time.


To cycle through Day, Week, Month, and Agenda views:

- Press the Date Book application button repeatedly to display the next view.

- Tap on the appropriate view icon in the lower-left corner of Date Book.

To display the current time:

1. Tap and hold the stylus on the date bar to display the current time.

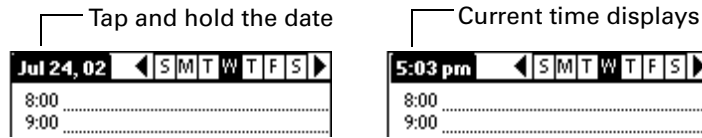

2. Drag the stylus below the title area and then lift it to redisplay the date.


**TIP** You can also tap the Clock icon ⌚ in the upper left corner of the Graffiti writing area to display the time for a few seconds.

## Working in Week View

Week View shows the calendar of your events for an entire week. This view lets you quickly review your appointments and available time slots. In addition, the graphical display helps you spot overlaps and conflicts in your schedule.


To display the Week View:

1. Tap the Week View button.




2. Tap the navigation controls to move forward or backward a week at a time, or tap on a column to display details of an event.

The Week View also shows untimed events and events that are before and after the range of times shown.

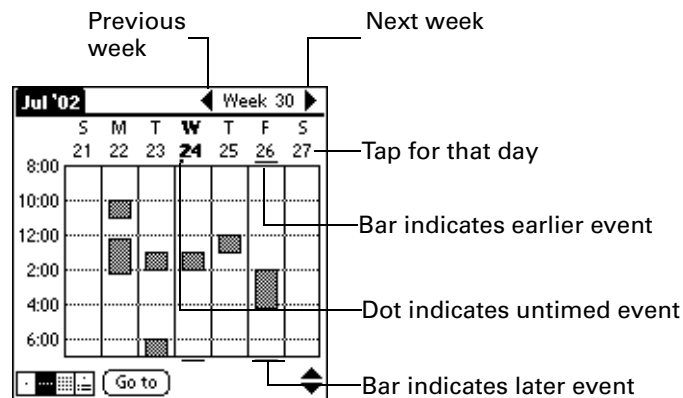

3. Tap an event to show a description of the event.

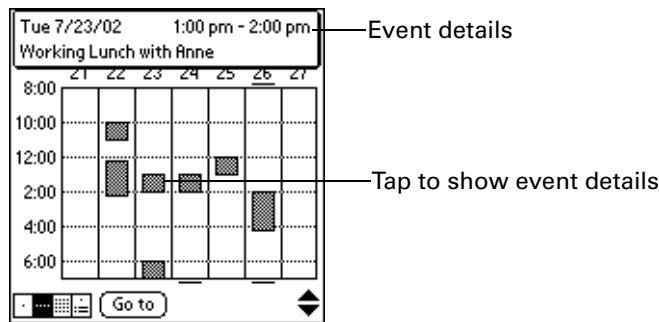

### Tips for using Week View


Keep the following points in mind:

- To reschedule an event, tap and drag the event to a different time or day.
- Tap a blank time on any day to move to that day and have the time selected for a new event.
- Tap any day or date that appears at the top of the Week View to move directly to that day without selecting an event.
- The Week View shows the time span defined by the Start Time and End Time in the Date Book Preferences settings. If you have an event before or after this time span, a bar appears at the top or bottom of that day's column. Use the onscreen scroll arrows to scroll to the event.

### Spotting event conflicts


With the ability to define specific start and end times for any event, it's possible to schedule events that overlap (an event that starts before a previous event finishes).

An event conflict (time overlap) appears in the Week View as overlapping bars. The Day View displays overlapping brackets to the left of the conflicting times.

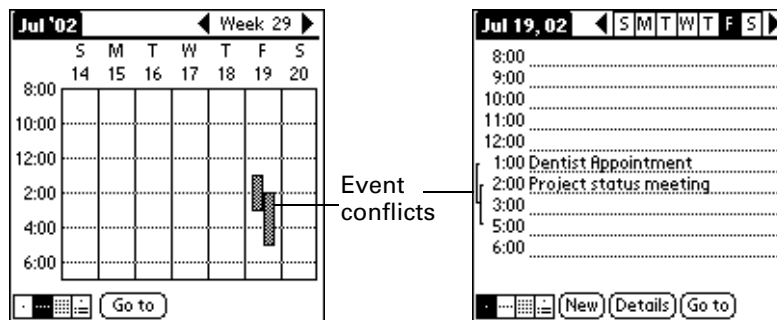

### Working in Month View

The Month View screen shows which days have events scheduled. Dots and lines in the Month View indicate events, repeating events, and untimed events.

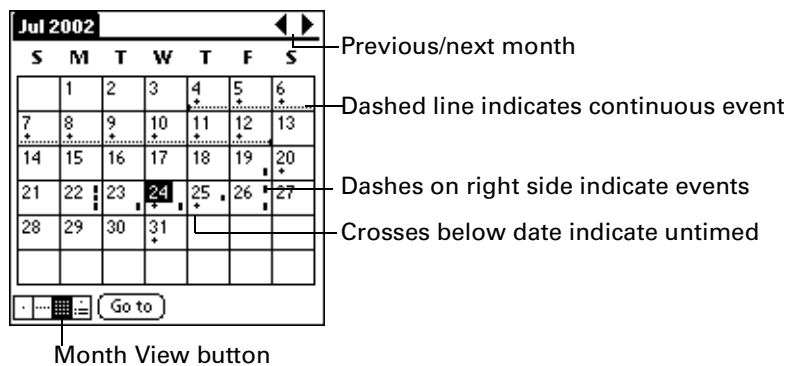

You can control the dots and lines that appear in the Month View. See "" later in this chapter.

### Tips for using Month View

Keep the following points in mind:

- Tap a day in the Month View to display that day in the Day View.
- Tap the scroll arrows in the upper-right corner to move forward or backward a month.
- Tap Go to open the date selector and select a different month.
- Use the scroll button on the front panel of your handheld to move between months. Press the upper half of the button to display the previous month, the lower half to display the next month.


## Working in Agenda View

The Agenda view shows you your untimed events, appointments, and To Do items in one screen. When you tap on an untimed event or appointment in the Agenda view, the Day view appears so you can see more detailed information about the event. You can tap the check box next to a To Do item to mark it as completed. When you tap on a To Do item, your To Do list appears.


**NOTE** The To Do items that appear and how you can change them depends on the settings in your To Do preferences. See ["To Do Show Options"](#) in [Chapter 15](#) for more information.

### To display the Agenda View:

1. Tap the Agenda View button.



2. Tap the navigation controls to move forward or backward a day at a time, or to display more events and To Do items.

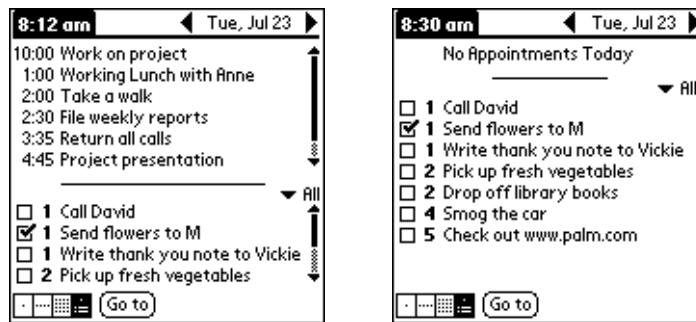


**NOTE** You can also change the category of To Do items shown. Click on the pick list to choose another category. See [Chapter 15](#) for more information on working with To Do items.

## Date Book menus, preferences, and display options

Date Book menus are shown here for your reference, and Date Book features that are not explained elsewhere in this book are described here.


see “Using menus” in [Chapter 6](#) for information about choosing menu commands.

### Record menu

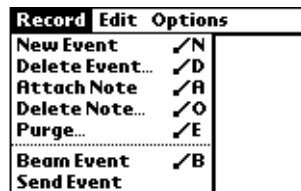

**Send Event** Opens MultiMail® Deluxe and allows you to create a message to which an event is attached.

### Options menu

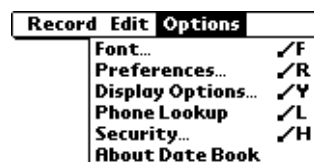



## Display Options

Allows you to change Date Book's appearance and which events display.



### Show Time Bars

Activates the time bars that appear in the Day View. The time bars show the duration of an event and illustrate event conflicts.


### Compress Day View

Controls how times appear in the Day View. When Compress Day View is off, all time slots display. When it is on, start and end times display for each event, but blank time slots toward the bottom of the screen disappear to minimize scrolling.


### Month View settings

These check boxes apply to the Month View of the Date Book. You can activate any or all of these settings to show that you have Timed, Untimed, or Daily Repeating events in the Month View *only*.

## Preferences

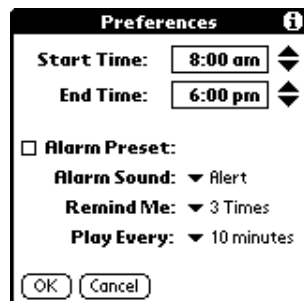

### Start/End Time

Defines the start and end times for Date Book screens. If the time slots you select do not fit on one screen, you can tap the scroll arrows  to scroll up and down.

### Alarm Preset

Automatically sets an alarm for each new event. The silent alarm for untimed events is defined by minutes, days, or hours before midnight of the date of the event.

### Alarm Sound

Sets the tone of the alarm.

**Remind Me** Defines how many times the alarm will occur after the initial occurrence. The choices are Once, Twice, 3 Times, 5 Times, and 10 Times.

**Play Every** Defines how often the alarm sounds. The choices are Minute, 5 minutes, 10 minutes, and 30 minutes.

### About Date Book

Shows version information for Date Book.

# Using Memo Pad



Memo Pad provides a place to take notes that are not associated with records in Date Book, Address Book, or To Do List. The number of memos you can store is dependent only on the memory available on your handheld. Use Memo Pad to do the following:

- Use Graffiti® characters to store memos, lists, or any other text message on your handheld.
- Drag and drop memos into popular computer applications like Microsoft Word when you synchronize using Palm™ Desktop software and HotSync® technology.
- Assign memos to categories so that you can organize and view them in logical groups.
- Write down phone numbers and other types of information. Later, you can copy and paste this information to other applications.

## To open Memo Pad:


1. Tap the Applications icon
2. Tap the Memo Pad icon

## Creating memos

### To create a new memo:

1. Tap the Applications icon
2. Tap the Memo Pad icon

## 3. Tap New.

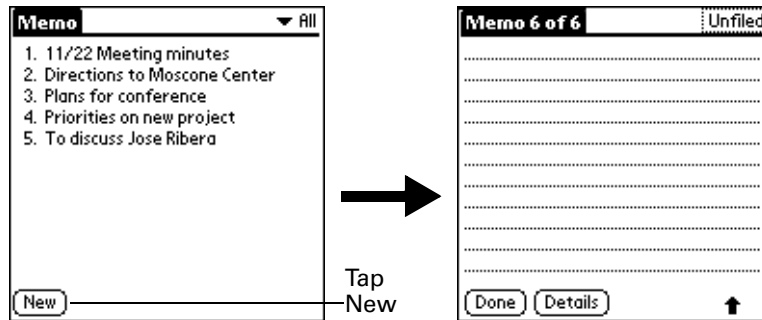

**TIP** In the Memo list screen, you can also begin writing in the Graffiti writing area to create a new memo. The first letter is automatically capitalized and begins your new memo.


4. Enter the text you want to appear in the memo. Use the carriage return stroke to move down to new lines in the memo.
5. Tap Done.

## Reviewing memos

The first line of a memo appears in the Memo list. This makes it easy to locate and review your memos.

To review a memo:

1. In the Memo list, tap the text of the memo.

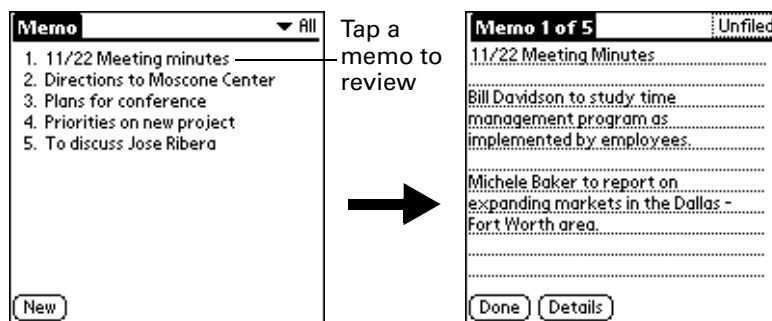

2. Review or edit the text in the memo.
3. Tap Done.


## Memo Pad menus

Memo Pad menus are shown here for your reference, and Memo Pad features that are not explained elsewhere in this book are described here.


See “Using menus” in [Chapter 6](#) for information about choosing menu commands.

The Record and Options menus differ depending on whether you're displaying the Memo list or an individual memo.

## Record menus



Memo list

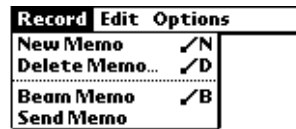

Memo screen

**Send Category** Opens MultiMail® Deluxe and allows you to create a message to which all memos in a category are attached.

**Send Memo** Opens MultiMail Deluxe and allows you to create a message to which a memo is attached.

## Options menus



Memo list



Memo screen

**Preferences** Displays the Memo Preferences dialog box, where you define the sort order for memos.

**About Memo Pad** Shows version information for Memo Pad.



# Using Note Pad




Note Pad provides a place to take notes in your own handwriting. You can use Note Pad to do everything you might do with a piece of paper and a pencil. Use Note Pad to do the following:

- Take notes, draw a sketch, or write any kind of message directly on your handheld screen. Later, you can enter this information into other applications.
- Set an alarm to use your notes as reminder messages.
- Assign notes to categories so that you can organize and view them in logical groups.
- Copy and paste notes into popular computer applications like Microsoft Word using Palm™ Desktop software and HotSync® technology.

## Creating a note

To create a new note:

1. Tap the Applications icon
2. Tap the Note Pad icon

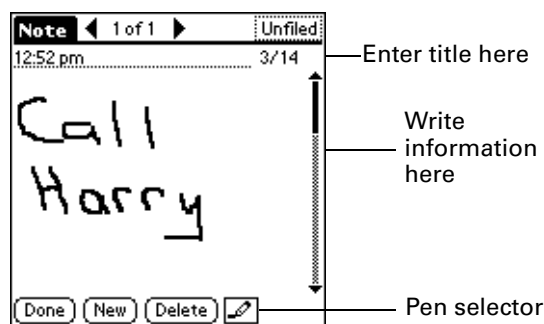

3. Write the information directly on the handheld screen.

Tap the pen selector to choose a different pen width, or choose the eraser to remove unwanted strokes.


4. (Optional) Select the time at the top of the screen and enter a title using Graffiti® writing.
5. Tap Done.

## Reviewing notes

The note title and the date you created the note appear in the Note Pad list. If you did not assign a title to your note, the time you created the note appears as the note title. This makes it easy to locate and review your notes.

To review a note:

1. In the Note Pad list, tap the note title.

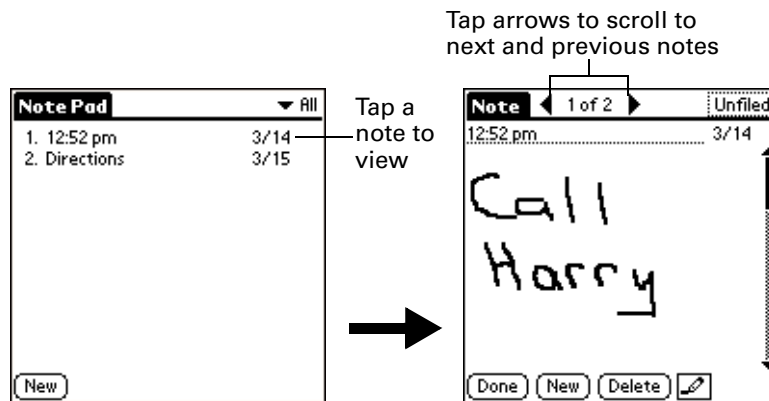


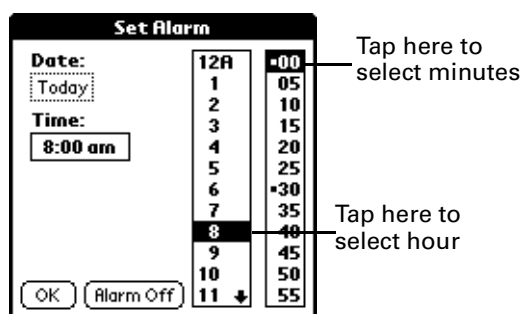
2. Review or edit the contents of the note.
3. Tap Done.

## Setting an alarm for a note

You can set an alarm for a specific time and date to remind you to follow-up on a note.


To set an alarm for a note:

1. Tap the note to which you want to assign an alarm.
2. Tap the Menu icon .
3. Tap Options, and then tap Alarm.
4. Tap the Time box.
5. Tap the hour and minute columns to select the time you want the alarm to occur.





6. Tap the Date box.

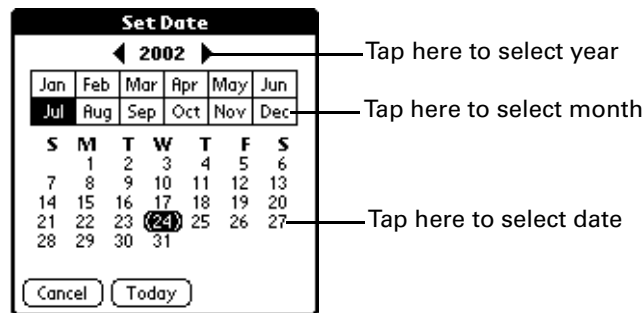

7. Tap the year, month and date you want the alarm to sound.  
After you tap the date, the Set Alarm dialog box reappears.
8. Tap OK.
9. When the alarm goes off and the reminder message appears on screen, do one of the following:
  - Tap OK to permanently dismiss the reminder and return to the current screen.
  - Tap Snooze to dismiss the reminder and return to the current screen. The reminder message appears again in five minutes, and an attention indicator blinks in the upper-left corner of the screen to remind you of the pending alarm. When the reminder message reappears, the current time displays in the Reminder bar and the note title displays on the screen.
  - If you did not title the note, the time the note was created displays on the screen.
  - Tap Go To to open Note Pad. Note Pad will open and display the note associated with the alarm.




## Note Pad menus


Note Pad menus are shown here for your reference, and Note Pad features that are not explained elsewhere in this book are described here.

The Record and Options menus differ depending on whether you're displaying the Note Pad list or an individual note.

## Record menus



Note Pad list



Note screen

## Options menus



Note Pad list



Note screen

<b>Preferences</b>	Displays the Note Pad Preferences dialog box, where you define the sort order for notes and the alarm sound.
<b>Security</b>	Displays the Change Security dialog box, where you set a privacy option for all notes.
<b>Details</b>	Displays the Note Details dialog box, where you assign a category and privacy option for a note.
<b>About Note Pad</b>	Shows version information for Note Pad.

# Using Security



Your handheld comes with a Security application so that unauthorized users cannot view the entries you wish to protect. Use the Security application to do the following:



- Lock and turn off your handheld so that it does not operate until you enter the correct password.
- Mask all records that you mark as private so the information appears greyed out.
- Hide all records that you mark as private so they do not appear on any screen.


You can mask and hide private records with or without a password. Without a password, private records are hidden or masked until you set the Security application to show them. With a password, you must enter the password to view the private entries.

## Assigning a password

You can assign a password to protect your private records and to lock your handheld.

**To assign a password:**

1. Tap the Applications icon .
2. Tap the Security icon .
3. Tap the Password box.
4. Enter a password.
5. Enter a hint to help your remember your password if you forget it. This is optional.

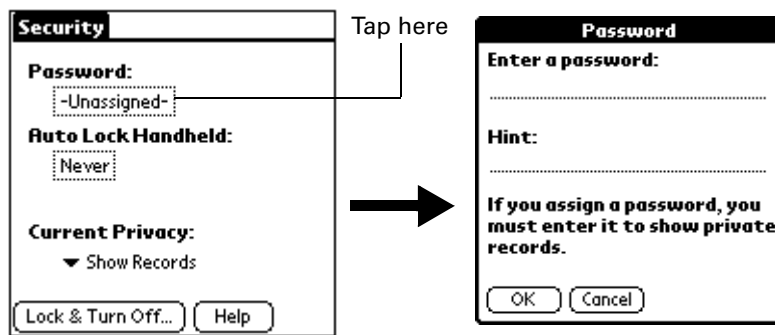


6. Tap OK.
7. Enter the *same* password a second time, and tap OK.

### Changing or deleting a password

Once you define a password for your handheld, you can change or delete it at any time. You must enter the current password before you can change or delete it.

To change or delete your password:

1. Tap the Password box.
2. Enter the current password.

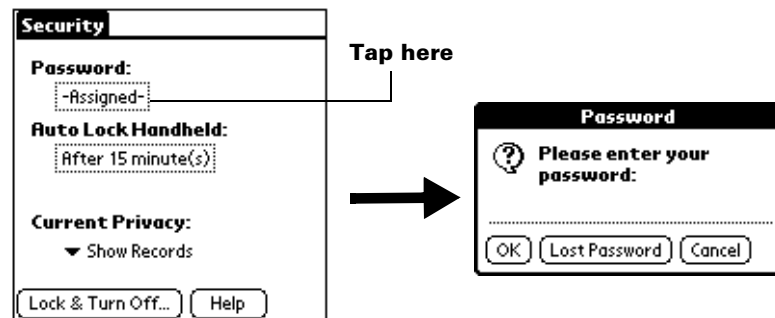

3. Tap OK.
4. Do one of the following:
  - To change the password and hint, enter the new password and hint, and tap OK.
  - To remove the password, tap Unassign.



## Locking your handheld



You can lock your handheld so that it cannot be operated until your password is entered. In the event that your handheld is lost or stolen, this helps protect your data from unauthorized use. You can set your handheld to lock automatically, or you can lock it manually.

### Locking your handheld automatically

You can set your handheld to lock automatically when any one of the following occur:

- When you turn off the power
- At a time you specify
- After a period of inactivity you specify



**To set your handheld to lock when you turn it off:**


1. Tap the Applications icon .
2. Tap the Security icon .
3. Tap the Auto Lock Handheld box, and then enter your password.



4. Tap On power off.
5. Tap OK.



**To set your handheld to lock at a preset time:**

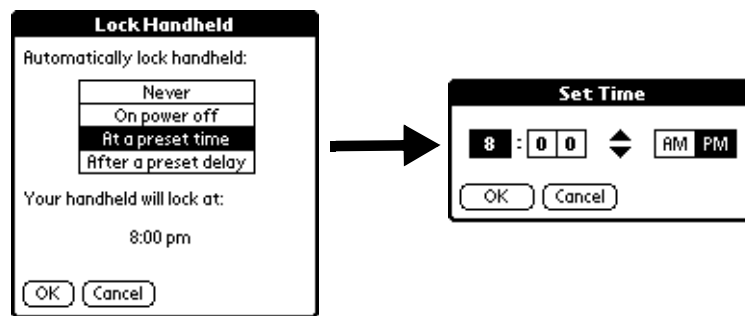
1. Tap the Applications icon .
2. Tap the Security icon .
3. Tap the Auto Lock Handheld box, and then enter your password.
4. Tap At a preset time, and then use the arrows to set the time.



5. Tap OK.

To set your handheld to lock after a period of inactivity:

1. Tap the Applications icon .
2. Tap the Security icon .
3. Tap the Auto Lock Handheld box, and then enter your password.
4. Tap After a preset delay.

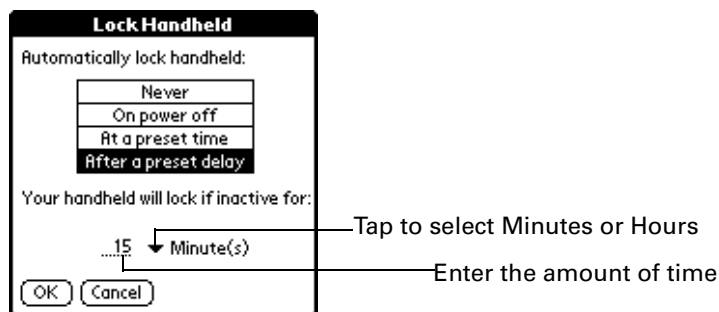



5. Enter the inactive period, then select Minute(s) or Hour(s) from the pick list.
6. Tap OK.


**CAUTION** If you lock your handheld, you must enter the exact password to re-activate your handheld. If you forget the password, your handheld will present the hint you have entered to help you remember the password. If you still cannot remember the password, you must perform a hard reset to resume using your handheld. Performing a hard reset deletes all the records in your handheld; however, you can restore all synchronized data at the next HotSync® operation. See [“Performing a hard reset”](#) in [Appendix A](#) for more information.

### Locking your handheld manually

You can turn off and lock your handheld manually.

To lock and turn off your handheld:

1. Tap the Applications icon .
2. Tap the Security icon .
3. Tap Lock & Turn Off.

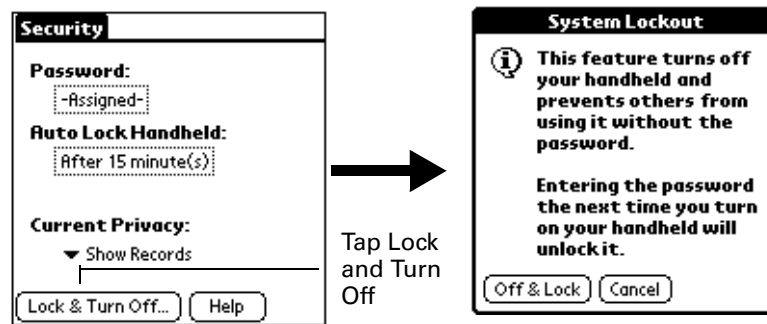

4. Tap Off & Lock.
5. To start your handheld, turn it on and then enter the password.

## Recovering from a forgotten password

If you forget your password, your handheld will display the password hint, if you entered one, to help you remember the password. If you are still unable to remember the password, you can delete it from your handheld. Deleting a forgotten password also deletes all entries and files marked as Private.

---

**IMPORTANT** If you synchronize with your computer before deleting a forgotten password, your handheld restores your private entries the next time you perform a HotSync operation, but it does not restore the password.

---


**To delete a forgotten password:**

1. Tap Lost Password.
2. Tap Yes.



## Making records private


In many applications, you can make individual records private. Private records remain visible and accessible, however, until you select the Security setting to hide or mask all private records. Masked records appear as grey placeholders in the same position they would appear if they were not masked, and are marked with a

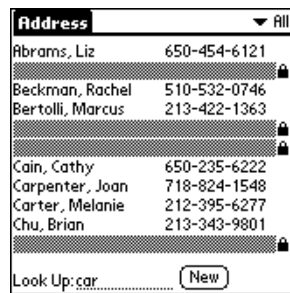lock icon. Hidden records disappear completely from the screen. If you define a password for your handheld, you must enter it to display private records.





To hide all private records:

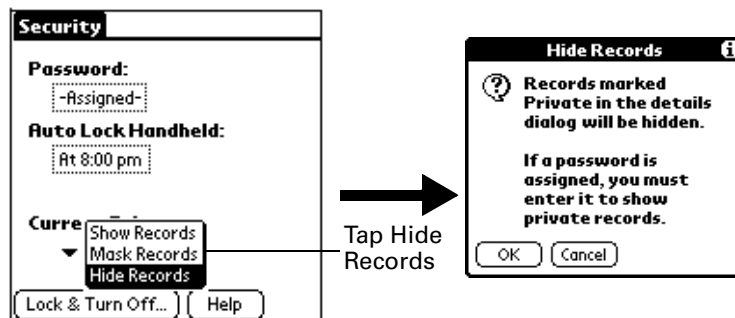
1. Tap the Applications icon .
2. Tap the Security icon .
3. Tap the Current Privacy pick list and select Hide Record.



4. Tap OK to confirm that you want to hide private records.

To mask all private records:

1. Tap the Applications icon .
2. Tap the Security icon .
3. Tap the Current Privacy pick list and select Mask Records.

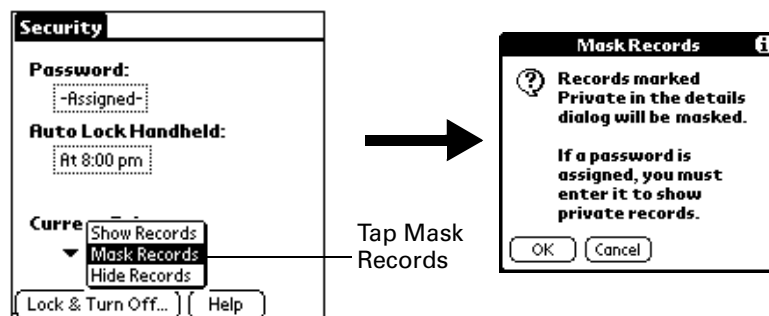

4. Tap OK to confirm that you want to mask private records.




**To display all private records:**

1. Do one of the following:

Tap the Applications icon , tap the Security  icon, then tap the Current Privacy pick list and select Show Records.

If you do not have a password, hidden and masked records become visible.  
If you have a password, the Show Private Records dialog box appears. Go to step 2.

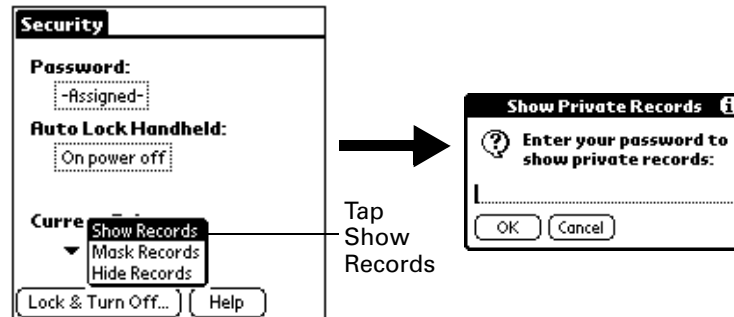

2. Enter your password, and then tap OK.

**To unmask individual records:**

1. Tap a masked record.
2. Do one of the following:

If you do not have a password, a masked record becomes visible.

If you have a password, the Show Private Records dialog box appears. Go to step 3.

3. Enter your password, and then tap OK.

**To make a record private:**

1. Display the entry that you want to make private.
2. Tap Details.
3. Tap the Private check box to select it.
4. Tap OK.



# Using To Do List

 To Do List is a convenient place to create reminders and prioritize the things that you have to do. Use To Do List for the following:

- Make a quick and convenient list of things to do.
- Assign a priority level to each task.
- Assign a due date for any or all of your To Do List items.
- Assign To Do List items to categories so that you can organize and view them in logical groups.
- Sort your To Do List items either by due date, priority level, or category.
- Attach notes to individual To Do List items for a description or clarification of the task.

**To open To Do List:**


1. Tap the Applications icon .
2. Tap the To Do List icon .

## Creating list items

A To Do List item is a reminder of some task that you have to complete. A record in To Do List is called an “item.”

**To create a To Do List item:**

1. Tap New.

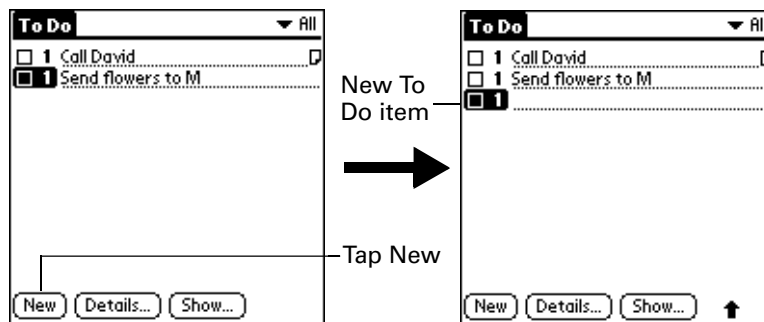

2. Enter the text of the To Do List item. The text can be longer than one line.

3. Tap anywhere onscreen to deselect the To Do List item.

**TIP** If no To Do List item is currently selected, writing in the Graffiti® writing area automatically creates a new item.


## Setting priority

The priority setting for items lets you arrange the tasks in your To Do List according to their importance or urgency. The default setting for the To Do List is to arrange items by priority and due date, with priority 1 items at the top. If you have a number of items in your list, changing an item's priority setting may move its position in the list.

When you create a new To Do List item, its priority is automatically set to level 1, the highest (most important) level. If you select another item first, however, the item you create appears beneath the selected item and is given the same priority as the selected item.

**To set the priority of a To Do List item:**

1. Tap the Priority number on the left side of the To Do List item.

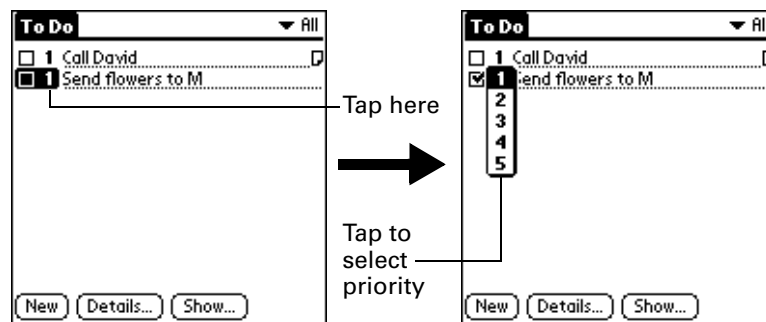


2. Tap the Priority number that you want to set (1 is most important).

## Checking off a To Do List item

You can check off a To Do List item to indicate that you've completed it. You can set the To Do List to record the date that you complete the To Do item, and you can choose to show or hide completed items. See "To Do Show Options" later in this chapter.

**To check off a To Do List item:**

- Tap the check box on the left side of the item.

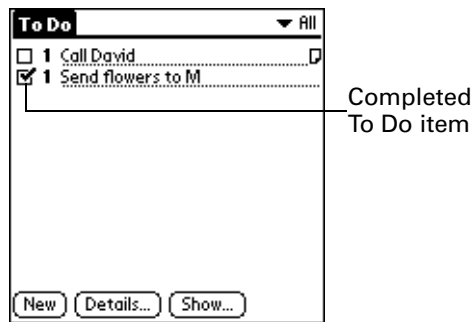

## Changing To Do List item details

The To Do Item Details dialog box enables you to change settings for individual items.

To display the To Do Item Details dialog box:

1. Tap the text of the item whose details you want to change.
2. Tap Details.




## Setting a due date

You can associate a due date with any To Do List item. You can also sort the items that appear in the list based on their due date.

To set a due date for a To Do List item:

1. In the Details dialog box, tap “No Date” to open the Due Date pick list.

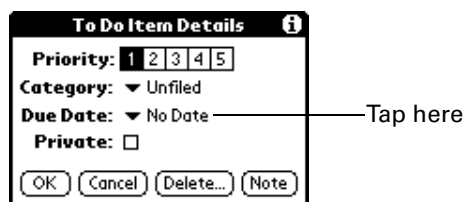

2. Tap the date that you want to assign the item:

**Today** Assigns the current date.

**Tomorrow** Assigns tomorrow's date.

<b>One week later</b>	Assigns the date exactly one week from the current date.
<b>No Date</b>	Removes the due date from the item.
<b>Choose date</b>	Opens the date selector, where you can choose any date that you want for the item.

3. Tap OK.

**TIP** If you turn on the Show Due Dates option in the To Do Show options dialog, you can tap directly on the due date in the To Do List to open the pick list shown in step 2.

## To Do Show Options

The Show Options dialog box enables you to control the appearance of To Do List, and To Do items in Date Book Agenda view.

To change the Show Options settings:

1. In To Do List, tap Show.



2. Select any of the following settings:

<b>Show Completed Items</b>	Displays your completed items in the To Do List. If you turn off this setting, your To Do items disappear from the list when you complete (check) them.  Items that no longer appear on the list because you turn off this setting have not been deleted. They are still in the memory of your handheld. Purge completed items to remove them from memory.
<b>Show Only Due Items</b>	Shows only the items that are currently due, past due, or have no due date specified. When this setting is active, items that are not yet due do not appear in the list until their due date.
<b>Record Completion Date</b>	Replaces the due date with the actual date when you complete (check) the item. If you do not assign a due date to an item, the completion date still records when you complete the item.

**Show Due Dates** Displays the due dates associated with items in the To Do List and displays an exclamation mark next to items that remain incomplete after the due date passes.

**Show Priorities** Shows the priority setting for each item.

**Show Categories** Shows the category for each item.


3. Tap OK.

## To Do List menus

To Do List menus are shown here for your reference, and To Do List features that are not explained elsewhere in this book are described here.

See “Using menus” in [Chapter 6](#) for information about choosing menu commands.

### Record menu

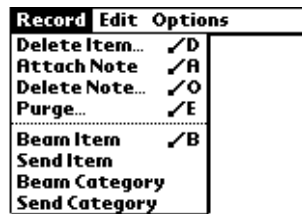

**Send Item** Opens MultiMail® Deluxe and allows you to create a message to which an item is attached.

**Send Category** Opens MultiMail Deluxe and allows you to create a message to which all items in a category are attached.

### Options menu



**About To Do List** Shows version information for To Do List.





# Performing HotSync® Operations


HotSync® technology enables you to synchronize data between one or more Palm OS® handhelds and Palm™ Desktop software or another PIM such as Microsoft Outlook. To synchronize data, you must connect your handheld and Palm Desktop software. You can synchronize your data either directly or indirectly. Direct methods include placing your handheld in the cradle attached to your computer, or using infrared communications. An indirect method is using a modem.

## Selecting HotSync setup options

You can choose when you want HotSync Manager to run. If necessary, you can adjust the local and modem HotSync settings as well.

To set the HotSync options on a Windows computer:

1. Click the HotSync Manager icon in the Windows system tray.
2. Choose Setup.

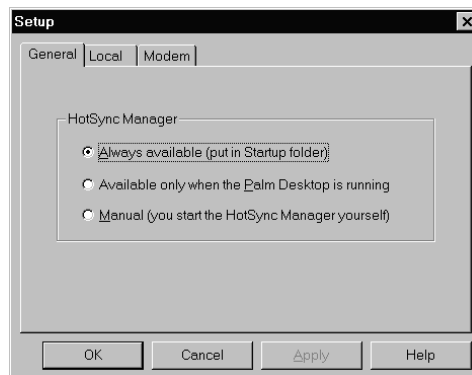

3. Click the General tab and select one of the following options:


<b>Always available</b>	Adds HotSync Manager to the Startup folder and constantly monitors the communication port for synchronization requests from your handheld. With this option, the HotSync Manager synchronizes data even when Palm Desktop software is not running.
-------------------------	--

<b>Available only when Palm Desktop software is running</b>	Starts HotSync Manager and monitors requests automatically when you open Palm Desktop software.
<b>Manual</b>	Monitors requests only when you select HotSync Manager from the Start menu.

If you're not sure which option to use, keep the default setting: Always available.

4. If you are using a serial cradle, click Local tab to display the settings for the connection between your computer and the handheld cradle, and adjust the following options as needed.

If you are using the USB cradle, you do not need to use the settings on the Local tab for a direct HotSync operation.

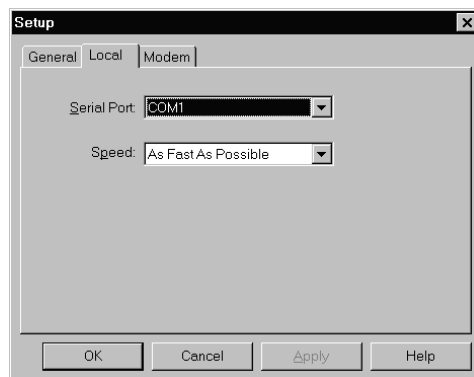

**Serial Port** Identifies the port that HotSync Manager uses to communicate with the cradle. The Palm Desktop installation software automatically detects the port to which you connected the cradle. If necessary, you can change the port selection.


Your handheld cannot share this port with an internal modem or other device.

**Speed** Determines the speed at which data is transferred between your handheld and Palm Desktop software. Try the As Fast As Possible rate first, and adjust downward if you experience problems. This setting allows Palm Desktop software and your handheld to find and use the fastest speed.

5. Click the Modem tab to display the modem settings and adjust the options as needed. See "Conducting a HotSync operation via modem" later in this chapter for more information.
6. Click OK.

**To set the HotSync options on a Mac computer:**

1. Double-click the HotSync Manager icon in the Palm folder.
2. Click the HotSync Controls tab and select any of the following options:

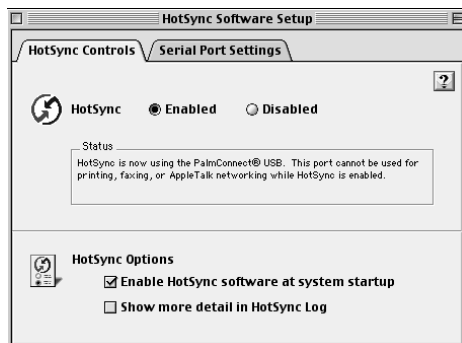**HotSync Enabled/Disabled**

Activates the serial port monitor and prepares your Mac computer to synchronize with your handheld. By default, the serial port monitor is enabled whenever you start your computer. Keep this default if your HotSync cradle is always connected to a specific port (USB, serial, or modem). If, however, you use the same port for other devices besides the HotSync cradle, disable the serial port monitor and then enable it manually only when you connect the cradle to perform a HotSync operation.

**Enable HotSync software at system startup**


Activates the serial port monitor automatically each time you start your computer. If this option is not checked, you must open HotSync Manager and select the Enabled option before you can perform a HotSync operation.

**Show more detail in HotSync Log**

Includes more troubleshooting information in the log that is generated when you perform a HotSync operation.

3. If you are using the USB cradle, you do not need to adjust the settings on the Serial Port Settings tab for a direct HotSync operation; they are automatically set when you perform the first HotSync operation.

If you are using the optional serial cradle, click the Serial Port Settings tab and select any of the following options:

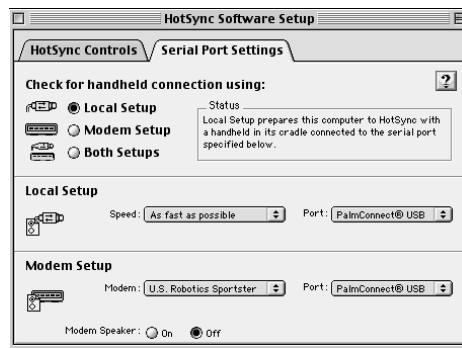

#### Check for a handheld connection using

Select the method you use to synchronize your handheld and your desktop applications:

**Local Setup.** Synchronizes while your handheld and HotSync cradle are connected to this computer.

**Modem Setup.** Synchronizes while your handheld communicates to this computer across a telephone line.

**Both Setups.** Synchronizes using the HotSync cradle, or through the modem; HotSync Manager monitors both connections for communication from a handheld.

Choosing Both Setups prevents you from using either port for other operations such as printing, faxing, or AppleTalk networking.

#### Local Setup

Enables you to perform HotSync operations using the HotSync cradle that is connected to your computer. If you are using the USB cradle for a direct HotSync operation, you do not need to set these options; set them if you are using the optional serial cradle.

**Speed.** Determines the speed at which data is transferred between your handheld and Palm Desktop software. Try the As Fast As Possible rate first, and adjust downward if you experience problems. This setting allows Palm Desktop software and your handheld to find and use the fastest speed.

**Port.** Identifies the port that Palm Desktop software uses to communicate with the HotSync cradle. Select the port where you connected the HotSync cradle. If you perform IR HotSync operations, select Infrared port.

**Modem Setup**

Enables you to perform HotSync operations across a telephone line. To do this you must purchase an optional add-on modem accessory for your handheld, have a modem connected to your computer, and set the following options:

**Modem.** Identifies the type of modem connected to your computer. If your modem does not appear on the list, use the Hayes setting, or choose Custom to enter a command string. Refer to the manual that came with your modem to find the appropriate command string.

**Port.** Identifies the port that Palm Desktop software uses to communicate with the modem. Select the USB, modem or printer port where you connected the modem cable.

**Modem Speaker.** Activates the modem's speaker. If you are having trouble connecting, turn on this option to make sure the modem connected to your computer is responding to incoming calls.

You can set both Local and Modem settings and prepare your computer to synchronize using the HotSync cradle or a modem. However, choosing both setups prevents you from using either port for other operations such as printing, faxing, or AppleTalk networking.

4. Close the HotSync Software Setup window.

## Customizing HotSync application settings

For each application, you can define a set of options that determines how records are handled during synchronization. These options are called a "conduit." By default, a HotSync operation synchronizes all files between the handheld and Palm Desktop software.

In general, you should leave the settings to synchronize all files. The only reason you might want to change these settings is to overwrite data on either your handheld or Palm Desktop software, or to avoid synchronizing a particular type of file because you don't use it.

In addition to the conduits for Date Book, Address Book, To Do List, Memo Pad, and Note Pad, Palm Desktop software includes System and Install conduits, as well as conduits for MutliMail® Deluxe and for updating the MyPalm™ mobile portal. The System conduit backs up the system information stored on your handheld, including Graffiti® ShortCuts. The Install conduit installs add-on applications on your handheld. The conduit for MutliMail Deluxe enables you to select e-mail accounts to synchronize, and the MyPalm Update conduit allows you to receive newer versions of the MyPalm mobile portal.


To customize HotSync application settings on a Windows computer:

1. Click the HotSync icon  in the Windows system tray (bottom-right corner of the taskbar).

You can also click the HotSync command on the Palm Desktop software menu bar.

2. From the HotSync Manager menu, choose Custom.
3. Select the appropriate user name from the list.
4. Select an application in the Conduit list.
5. Click Change, and do one of the following:


**The MyPalm Update conduit:** Set update options. Enter your Username and Password, and select the check box to set these options as a default.

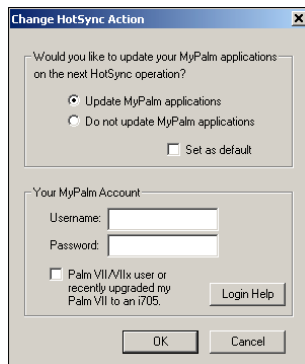

**MultiMail:** Set synchronization options. Click Configure Accounts to change e-mail account settings.

**Other applications:** Click the direction in which you want to write data, or click Do Nothing to skip data transfer for an application.

Changing the HotSync setting from the default affects only the *next* HotSync operation. Thereafter, the HotSync Actions revert to their default settings. To use a new setting on an ongoing basis, select the Set As Default box. Thereafter, whatever you selected as the default setting is used when you click the Default button in the Custom dialog.

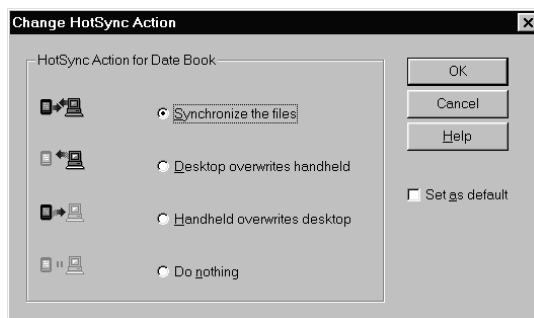


6. Click OK.

7. Repeat steps 4 through 6 to change conduit settings for other applications.
8. Click Done to activate your settings.

To customize HotSync application settings on a Mac computer:


1. Double-click the Palm Desktop icon in the Palm folder.
2. From the HotSync menu, choose Conduit Settings.
3. From the User pop-up menu, select the appropriate user name.
4. Select an application in the Conduit list.
5. Click Conduit Settings, and do one of the following:

**The MyPalm Update conduit:** Set update options. Enter your Username and Password, and select the check box to set these options as a default.

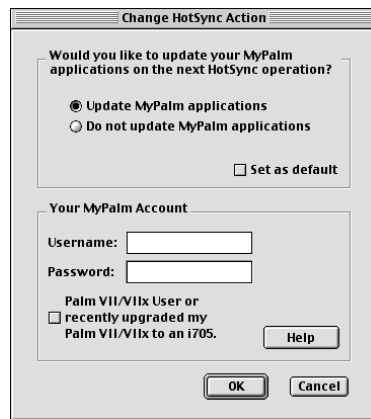

**Other applications:** Click the direction in which you want to write data, or click Do Nothing to skip data transfer for an application.

Changing the HotSync setting from the default affects only the *next* HotSync operation. Thereafter, the HotSync Actions revert to their default settings. To use a new setting on an ongoing basis, click Make Default. Thereafter, whatever you selected as the default setting is used for HotSync operations.

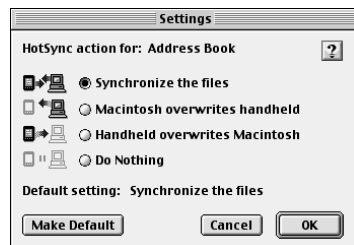

6. Click OK.
7. Repeat steps 4 through 6 to change conduit settings for other applications.
8. Close the Conduit Settings window.

## Performing cradle HotSync operations

The simplest way to synchronize data is to perform a direct HotSync operation by seating your handheld in the cradle and pressing the HotSync button.

### Performing a cradle HotSync operation: Windows

The first time you synchronize your data, you need to enter user information on Palm Desktop software. After you enter this information and synchronize, the HotSync Manager recognizes your handheld and doesn't ask for this information again.

If you are a System Administrator preparing several handhelds for a group of users, you may want to create a user profile. See [“Creating a user profile”](#) later in this chapter before performing the following steps.

---


**IMPORTANT** You must perform your *first* HotSync operation with a local, direct connection, or with infrared communication, rather than using a modem.

---

The following steps assume that you have already installed Palm Desktop software. If you have not installed this software, see [“Step 4: Install software”](#) in [Chapter 1](#) for instructions.

To perform a local HotSync operation on a Windows computer:


1. Place your handheld on the cradle.

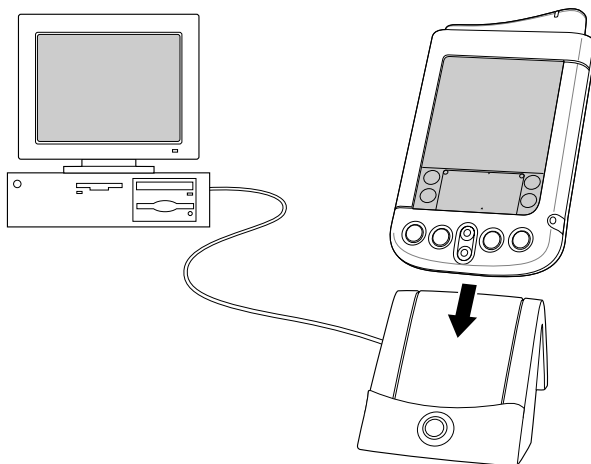

2. If the HotSync Manager is not running, start it: On the Windows desktop, click Start, and then choose Programs. Navigate to the Palm Desktop software program group and choose HotSync Manager. Alternatively, you can start the Palm Desktop software which automatically opens the HotSync Manager.



3. Press the HotSync button ™ on the cradle.

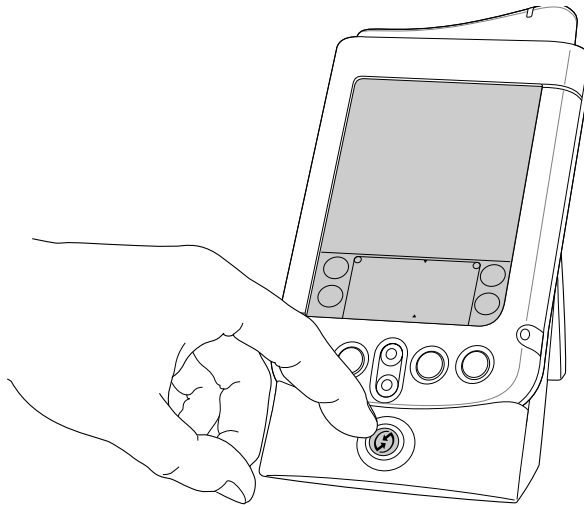


---

**IMPORTANT** The first time you perform a HotSync operation, you must enter a user name in the New User dialog box and click OK. Every handheld should have a unique name. To prevent loss of a user's records, never try to synchronize more than one handheld to the same user name.

---

The HotSync Progress dialog box appears and synchronization begins.

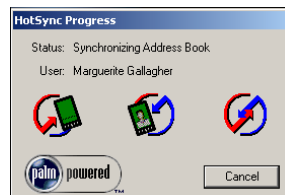

4. Wait for a message on your handheld indicating that the process is complete.

After the HotSync process is complete, you can remove your handheld from the cradle. Gently rock your handheld forward in the cradle and then lift it to remove.


## Performing a direct HotSync operation: Mac computers

When you installed Palm Desktop software, you entered a user name. This user name is the connection between your handheld and your computer.

The first time you perform a HotSync operation the Palm Desktop software:

- Adds a user name to your handheld.

- Creates a folder for the user name in the Users folder inside the Palm folder. For example, if you entered Jane Garcia as your user name, a folder called Jane Garcia is created in the Users folder.

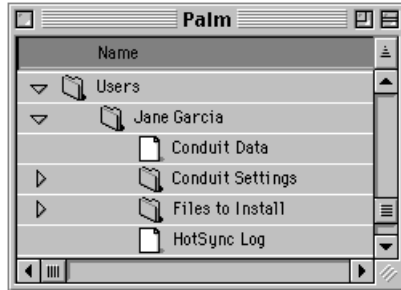

- Creates a file named User Data in your user name folder.

User names appear in the User pop-up on the right side of the toolbar. You can change users by selecting a new name in the pop-up menu.

Each subsequent time you perform a HotSync operation, HotSync Manager reads the user name from your handheld and synchronizes the data in the folder of the same name.

Be sure you select the correct user name from the User pop-up before entering data on Palm Desktop or performing a HotSync operation.

If you are a System Administrator preparing several handhelds for a group of users, you may want to create a user profile. See [“Creating a user profile”](#) later in this chapter before performing the following steps.

---


**IMPORTANT** You must perform your *first* HotSync operation with a local, direct connection, or with infrared communication.


---


The following steps assume that you have already installed Palm Desktop software. See [“Step 4: Install software”](#) in [Chapter 1](#) if you have not installed this software.

To perform a local HotSync operation on a Mac computer:

1. Place your handheld on the HotSync cradle.

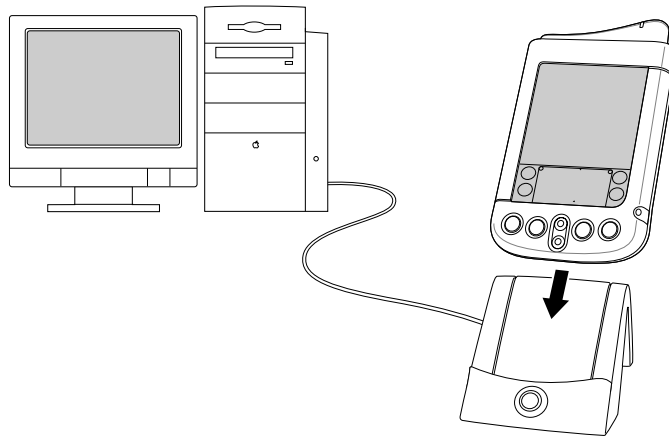


2. Make sure HotSync Manager is enabled: Double-click the HotSync Manager icon in the Palm folder. Click the HotSync Controls tab and make sure the Enabled option is selected.
3. Press the HotSync button  on the cradle.

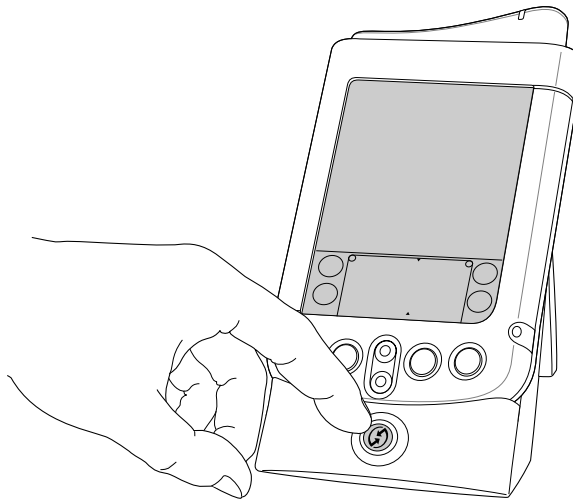

The HotSync Progress dialog box appears followed by the Select User dialog box.

4. In the Select User dialog box, select the user name you entered when you installed the Palm Desktop software, and click OK.

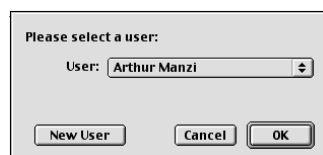

The HotSync Progress dialog box reappears and synchronization begins.



5. Wait for a message on your handheld indicating that the process is complete.

After the HotSync process is complete, you can remove your handheld from the cradle. Gently rock your handheld forward in the cradle and then lift it to remove.

## IR HotSync operations

Your handheld is equipped with an infrared (IR) port that supports the IrCOMM implementation of the standards for infrared communication established by the Infrared Data Association (IrDA). This means that not only can you beam data to another Palm OS handheld that's equipped with an IR port, but you can also beam data to a mobile phone and any other device that supports the IrCOMM implementation of the IrDA standards.

Most importantly, you can use the IR port to perform HotSync operations; you don't need your cradle. This is especially useful if you travel with an infrared-enabled laptop. You simply enable infrared communication on your laptop and handheld and follow the steps in "Performing an IR HotSync operation" later in this section.


### Preparing your computer for infrared communication


Before you can perform a HotSync operation using the IR port, the computer with which you want to synchronize must fulfill these requirements:

- Your computer must support the IrCOMM implementation of the IrDA standards.
- Your computer must have an enabled infrared port that's built into the computer, or an enabled infrared device attached to the computer.
- Some desktop computers may require an infrared device attached to a physical COM port. Laptops are likely to have a built-in IR port, so no external device is necessary.
- Your computer must have an installed infrared driver.
- If you have an external infrared device attached to your computer, a driver is probably included with the device. Consult the documentation included with the device for information on installing the required driver.

Check your computer's documentation to learn if the computer supports infrared communication.

**To configure HotSync Manager for infrared communication on a Windows computer:**

1. Click the HotSync Manager icon  in the Windows system tray, and make sure Infrared is checked. If you do not have an Infrared option on the HotSync Manager menu, complete the following steps.
2. Make sure Local Serial is checked on the menu.
3. Choose Setup.
4. Click the Local tab.
5. In the Serial Port drop-down box, select the simulated port that your computer uses for infrared communication.

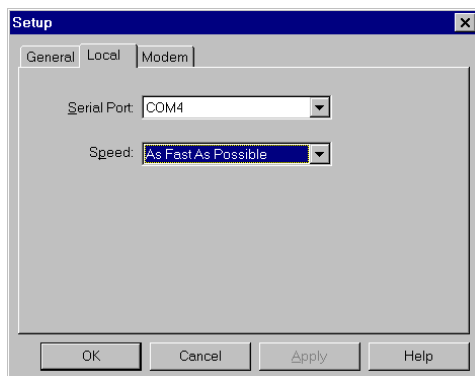

See the documentation for your operating system for instructions on finding the simulated port. This information is usually located in the Control Panel.


6. Click OK.

**NOTE** If your cradle is connected to a USB port, you can continue using it while HotSync Manager is configured for infrared communication. If your cradle is connected to a serial port, you cannot use your HotSync cradle again until you reconfigure the HotSync Manager to communicate with the port defined for cradle synchronization.

**To configure HotSync Manager for infrared communication on a Mac computer:**

1. Double-click the HotSync Manager icon in the Palm folder.
2. In the HotSync Controls tab, select Enabled.
3. Click the Serial Port Settings tab.
4. Under Check for handheld connection using, select Local Setup.

- Under Local Setup, select Infrared Port from the Port pop-up menu.

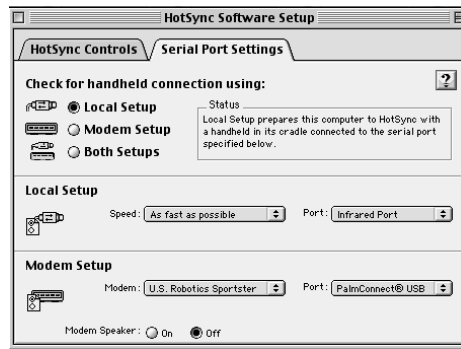


- Close the HotSync Software Setup window.

## Performing an IR HotSync operation

After you complete the steps to prepare for performing an IR HotSync operation, it is easy to perform the actual operation.

**To perform an IR HotSync operation:**

- In the Applications Launcher, tap the HotSync icon.
- Tap Local.
- Tap the pick list below the HotSync icon and select IR to a PC/Handheld.
- Position the IR port of your handheld within a couple of inches of the infrared port of your computer.
- Tap the HotSync icon to start the IR HotSync operation.

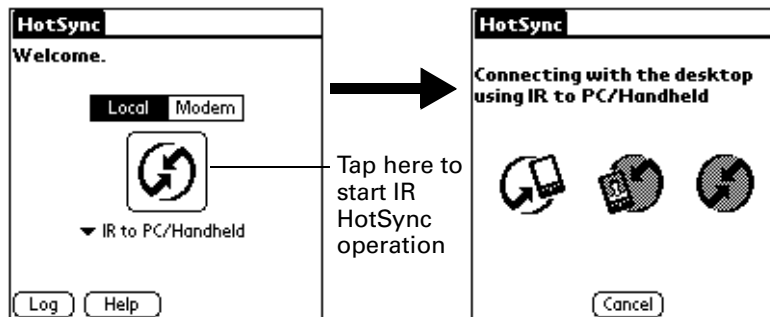


## Returning to cradle HotSync operations


It's easy to return to using the cradle for HotSync operations.

If your cradle is connected to a USB port, you can continue using it while HotSync Manager is configured for infrared communication. Use the following instructions to return to Local USB cradle HotSync operations only when needed, such as when you have disconnected the cradle from the USB port.

**To return to local USB cradle HotSync operations on a Windows computer:**

1. If needed, connect the cradle to the USB port of your computer you use for HotSync operations.
2. Click the HotSync Manager icon  in the Windows system tray, and select Local USB if it is not already checked.

**To return to local Serial cradle HotSync operations on a Windows computer:**

1. If needed, connect the cradle to the port of your computer you use for HotSync operations.
2. Click the HotSync Manager icon  in the Windows system tray.
3. Choose Setup, and then click Local.
4. Select the COM port where your cradle is connected.
5. Click OK.

**To return to local serial cradle HotSync operations on a Mac computer:**

1. If needed, connect the cradle to a serial port on your computer.
2. Double-click the HotSync Manager icon in the Palm folder.
3. In the HotSync Controls tab, select Enabled.
4. Click the Serial Port Settings tab.
5. Under Check for handheld connection using, select Local Setup.
6. Under Local Setup, select the port where your cradle is connected from the Port pop-up menu.
7. Close the HotSync Software Setup window.

Now, the next time you want to perform a HotSync operation, just press the HotSync button on the cradle, as you always did in the past.

## Conducting a HotSync operation via modem

You can use a modem to synchronize your handheld when you are away from your computer.

---

**IMPORTANT** The first HotSync operation must be performed using a local, direct connection, or with infrared communication. After that, you can perform a modem HotSync operation.

---

To perform a HotSync operation via modem you need the following:

- A modem connected to your computer.
- Palm Desktop software configured for use with the modem.

- A modem connected to your handheld.
- A configuration for the kind of modem connection you want to make. See [“Connection preferences”](#) in [Chapter 17](#) for more information.

**NOTE** You cannot perform a wireless HotSync operation using your handheld’s internal radio.

## Preparing your computer


There are a few steps you must perform to prepare your computer for a modem HotSync operation. Be sure to perform these steps before you leave your office so that your computer is ready to receive a call from your handheld.

**To prepare your Windows computer for a modem HotSync operation:**

1. Confirm that the computer modem is connected and turned on, and that no communications applications, such as fax or telephony software, are running on a COM port.

Make sure the computer is disconnected from all online services, such as America Online (AOL). This helps to avoid conflicts with the COM port.

2. Start HotSync Manager if it is not already running, and from the HotSync Manager menu, choose Modem.
3. Adjust the following options as needed.

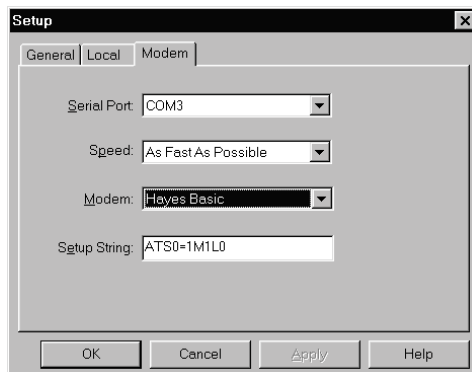

- |                    |   |
|--------------------|---|
| <b>Serial Port</b> | Identifies the port for the modem. If you are unsure of the port assignment, look at the Modem Properties in the Windows Control Panel.   |
| <b>Speed</b>       | Determines the speed at which data is transferred. Try the As Fast As Possible rate first, and adjust downward if you experience problems. This setting allows Palm Desktop software and your handheld to find and use the fastest speed. |
| <b>Modem</b>       | Identifies the modem type or manufacturer. Refer to your modem manual or faceplate for its type or settings. If you’re not sure of your modem type or your modem doesn’t match any that appear in the list, select Hayes Basic.           |



**Setup String** Identifies the setup string for your particular modem. Not all modems require a setup string. Refer to your modem manual and enter the setup string if recommended by the manufacturer.


4. Click OK.

**To prepare a Mac computer for a modem HotSync operation:**

1. Confirm that the computer modem is connected and turned on, and that no communications applications, such as fax or telephony software, or AppleTalk networking are running on that serial port.

Make sure the computer is disconnected from all online services, such as America Online (AOL). This helps to avoid conflicts with the serial port.

2. Double-click the HotSync Manager icon in the Palm folder.
3. Click the Serial Port Settings tab.
4. Under Check for handheld connection using, click Modem Setup.
5. Adjust the following options as needed.

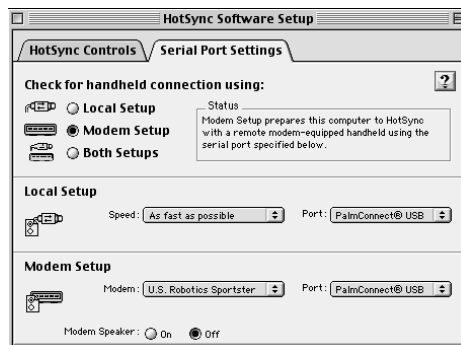

**Modem** Identifies the type of modem connected to your computer. If your modem does not appear on the list, use the Hayes Basic setting, or choose Custom to enter a command string. Refer to the manual that came with your modem to find the appropriate command string.

**Port** Identifies the port that Palm Desktop software uses to communicate with the modem. Select the modem or printer port where you connected the modem cable.



**Modem Speaker** Activates the modem's speaker. If you are having trouble connecting, turn on this option to make sure the modem connected to your computer is responding to incoming calls.


6. Close the HotSync Software Setup window.

## Preparing your handheld

There are a few steps you must perform to prepare your handheld for a modem HotSync operation.


To prepare your handheld for a modem HotSync operation:

1. Tap the Applications icon .
2. Tap the HotSync icon .
3. Tap Modem.
4. Tap the pick list below the icon and select a modem configuration.

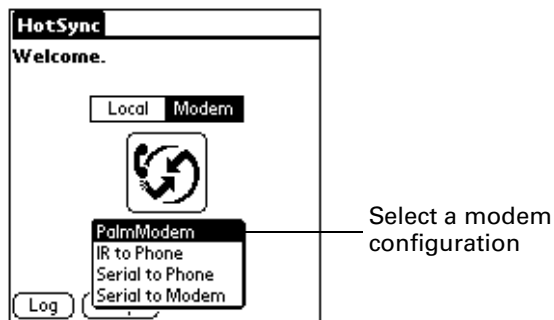

If you need to create a configuration, tap the Menu icon and then select Options and Connection Setup. See [“Connection preferences”](#) in [Chapter 17](#) for more information.

5. Tap the Enter phone # field.

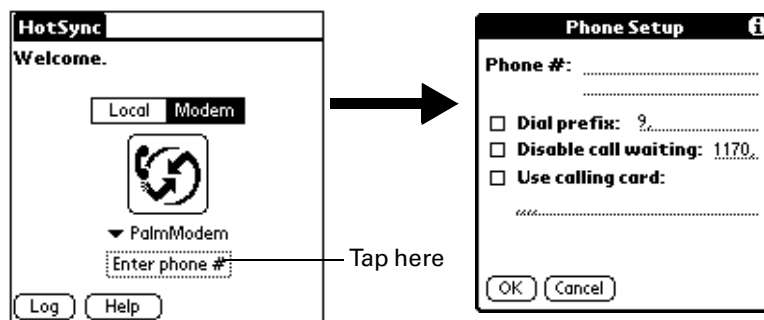

If you plan to connect to your company's dial-in server (network modem) instead of connecting to a computer modem, see [“Creating a user profile”](#) later in this chapter.

6. Enter the telephone number to access the modem connected to your computer.
7. If needed, enter a dial prefix (such as “9”) to access an outside line, and then tap the Dial Prefix check box.




**TIP** You can enter a comma in the field to introduce a “pause” in the dialing sequence. Each comma equals a two second pause.


8. If the phone line you're using for the handheld has Call Waiting, select the Disable call waiting check box to avoid an interruption during the modem HotSync operation.
9. If you want to use a calling card to place the call, select the check box and enter the calling card number.
10. Tap OK.

## Selecting the conduits for a modem HotSync operation

The Conduit Setup dialog box on your handheld enables you to define which files and/or applications synchronize during a modem HotSync operation. You can use these settings to minimize the time required to synchronize data with a modem.

**To change the Conduit Setup for a modem HotSync operation:**

1. Tap the Applications icon .
2. Tap the HotSync icon .
3. Tap the Menu icon .
4. Tap Options, and then tap Conduit Setup.
5. Tap the check boxes to deselect the files and applications that you do *not* want to synchronize during a modem HotSync operation. The default setting is to synchronize all files.

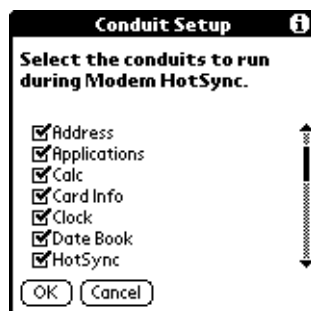

Applications that do not have a database (such as games) do not synchronize — even if you select the item in the Conduit Setup dialog box.


6. Tap OK.

## Performing a HotSync operation via a modem

After you prepare your computer and your handheld, and select your Conduit Setup options, you are ready to perform a modem HotSync operation.

**To perform a modem HotSync operation:**

1. Tap the Applications icon .
2. Tap the HotSync icon .


3. Tap the Modem icon  to dial the Palm Desktop modem and synchronize the applications.
4. Wait for the HotSync operation to complete. If you have any problems conducting a successful HotSync operation, see [“HotSync problems”](#) in [Appendix B](#).

## Creating a user profile

If you use the File Link feature to configure several Palm OS handhelds with specific information (such as a company phone list) before distributing them to their actual users, you can create a user profile to load the data into a handheld without associating that data with a user name. The User Profile feature is designed only for the first-time HotSync operation, before you assign a User ID to a particular handheld.

**To create a user profile on a Windows computer:**

1. Open Palm Desktop software.
2. From the Tools menu, choose Users.
3. Click Profiles.
4. Click New.

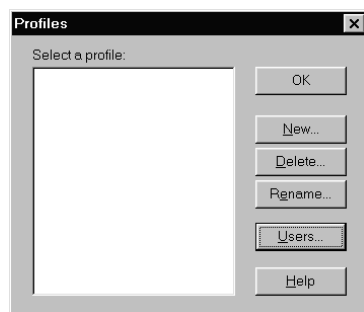

5. Enter a unique name for the profile and click OK.



6. Repeat steps 3 and 4 for each profile that you want to create, and then click OK to return to Palm Desktop software.
7. Select the profile from the User list and create the data for the profile (e.g., company phone list, etc.).



**To create a user profile on a Mac computer:**

1. Open Palm Desktop software.
2. From the User pop-up menu, choose Edit Users.
3. Click New Profile.




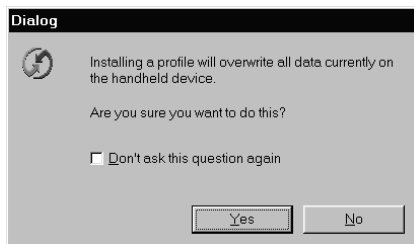
4. Enter a unique name for the profile and click OK.



5. Close the Users window.
6. From the User pop-up menu, choose the new profile.
7. Create the data for the profile (such as a company phone list).
8. From the HotSync menu, choose Conduit Settings.
9. Select the conduit settings for the profile. See “Customizing HotSync application settings” earlier in this chapter for details.

**To use a profile for the first-time HotSync operation on a Windows computer:**


1. Place the new handheld in the cradle.
2. Press the HotSync button  on the cradle.
3. Click Profiles.
4. Select the profile you want to load on the handheld, and click OK.




5. Click Yes to transfer all the profile data to the handheld.

The next time you perform a HotSync operation, Palm Desktop software prompts you to assign a user name to the handheld.

**To use a profile for the first-time HotSync operation on a Mac computer:**

1. Connect the new handheld to the HotSync cradle.
2. Press the HotSync button  on the cradle.
3. Select the profile you want to load on the handheld, and click OK to transfer all the profile data to the handheld.

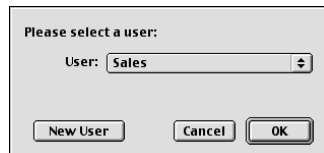

The next time you perform a HotSync operation, Palm Desktop software prompts you to assign a user name to the handheld.



# Setting Preferences for Your Handheld

The Preferences screens enable you to customize the configuration options on your handheld, including the following:

<b>Buttons</b>	Assign an application to the Favorite icon. Reassign the following: different applications to the buttons on the front panel of your handheld and the HotSync® button on the cradle, and the full-screen pen stroke command.
<b>Connection</b>	Configure cradle, modem, and infrared communication settings.
<b>Date and Time</b>	Set the date, time, time zone, and Daylight Saving switch.
<b>Digitizer</b>	Calibrate the screen on your handheld.
<b>Formats</b>	Set the country default and the formats for dates, times, calendar, and numbers.
<b>General</b>	Set these features: auto shutoff interval, Stay on in cradle, sounds, vibrator, indicator light, and Beam Receive.
<b>Network</b>	Configure your handheld for use with a network.
<b>Owner</b>	Assign your name, phone number, and other owner information to your handheld.
<b>ShortCuts</b>	Define a list of Graffiti® abbreviations.
<b>Web Clipping</b>	Configure your handheld to make an Internet web connection using clipping applications either wirelessly (using the internal radio) or using a modem/dialup connection. See <a href="#">“Web Clipping Preferences”</a> in <a href="#">Chapter 4</a> for details.
<b>Wireless</b>	Enable wireless operations by scheduling the radio on, or turning it completely on or off. Check the signal strength. See <a href="#">“Turning on the radio”</a> in <a href="#">Chapter 4</a> for details.

## Viewing Preferences

To open the Preferences screens:

1. Tap the Applications icon .
2. Tap the Preferences icon .
3. Tap the pick list in the upper-right corner of the screen.
4. Select the Preferences screen you want to view.

## Buttons preferences

The Buttons Preferences screen enables you to assign a frequently used application to the Favorite icon, and to associate different applications with the buttons on the front of the handheld.


Note Pad is assigned to the Favorite icon by default. But if you use Memo Pad more frequently, you can assign Memo Pad to the icon so that you don't have to scroll through the Applications Launcher whenever you want to use Memo Pad.

Any changes you make in the Buttons Preferences screen become effective immediately; you do not have to change to a different screen or application.

If you assign a different application to a button, you can still access the original application using the Applications Launcher.

### To change the Buttons preferences:

1. Tap the pick list next to the button you want to re-assign.

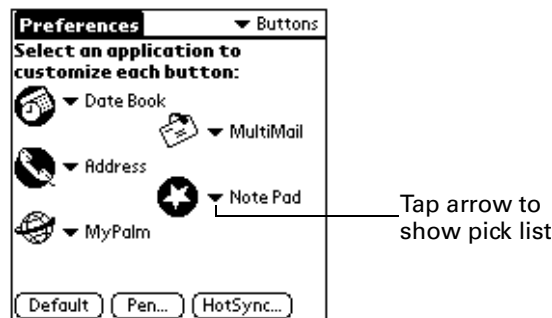


2. Tap the application that you want to assign to the button.

To restore all of the buttons to their factory settings, tap Default.

## Pen preferences

The Buttons Preferences screen enables you to change the assignment of the full-screen pen stroke. By default, the full-screen pen stroke activates Graffiti Help.

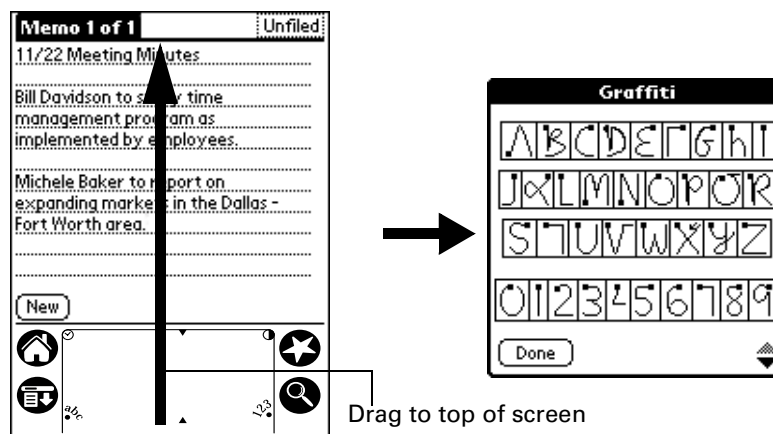



To change the Pen preferences:

1. Tap Pen.



2. Tap the pick list and select one of the following settings for the full-screen pen stroke:

<b>Backlight</b>	Turns on the backlight of your handheld.
<b>Keyboard</b>	Opens the onscreen keyboard for entering text characters.
<b>Graffiti Help</b>	Opens a series of screens that show the complete Graffiti character set.
<b>Turn Off &amp; Lock</b>	Turns off and locks the handheld. You must assign a password to lock the handheld. When locked, you need to enter the password to use your handheld.
<b>Beam Data</b>	Beams the current record to another Palm OS® handheld.


3. Tap OK.

## HotSync buttons preferences

The Buttons Preferences screen also enables you to associate different applications with the HotSync button on the cradle and the HotSync button on the optional PalmModem® accessory. Any changes that you make in the HotSync Buttons dialog box become effective immediately; you do not have to change to a different screen or application.

To change the HotSync buttons preferences:

1. Tap HotSync.
2. Tap the pick list next to the button you want to assign.

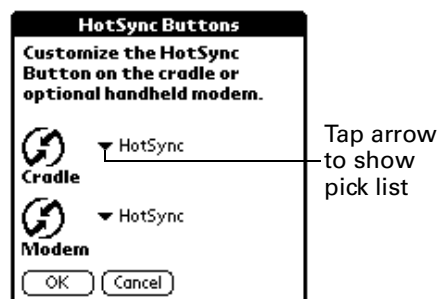

3. Tap the application that you want to assign to each button.

The default setting for each button is the HotSync setting, which means the cradle and optional PalmModem accessories perform their normal HotSync functions.

4. Tap OK.

## Digitizer preferences

The Digitizer Preferences screen opens the digitizer calibration screen. This is the same screen that appears when you start your handheld for the first time.

You can recalibrate your screen after a hard reset, or if your digitizer drifts.

## Formats preferences

Use the Formats Preferences screen to set the country default and the display format of the dates, times, and numbers on your handheld.


### Country default

The country default sets date, time, week start day, and number conventions based on geographic regions where you might use your handheld. For example, in the United Kingdom, time often is expressed using a 24-hour clock. In the United States, on the other hand, time is expressed using a 12-hour clock with an AM or PM suffix.

All your handheld applications use the Country default settings. You can, however, customize your own preferences as described in “Time, date, week start, and numbers formats” later in this chapter.

To set the country default:

1. Tap the country name pick list.

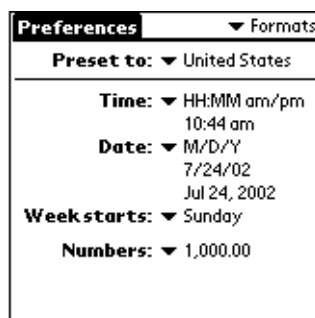

2. Tap the setting you want to use.

### Time, date, week start, and numbers formats

The Time setting defines the format for the time of day. The time format that you select appears in all applications on your handheld.

To select the time, date, week start, and numbers format:


1. Tap the Time pick list and select a format.
2. Tap the Date pick list and select a format.
3. Tap the Week starts pick list, and select whether you want the first day of the week to be Sunday or Monday.

This setting controls the Day, Week, and Month views in Date Book and all other aspects of your handheld that display a calendar.

4. Tap the Numbers pick list, and select formats for the decimal point and thousands separator.

## General preferences

The General Preferences screen enables you to set the auto shutoff interval, alarm options, sounds for your handheld, and the Beam Receive feature.

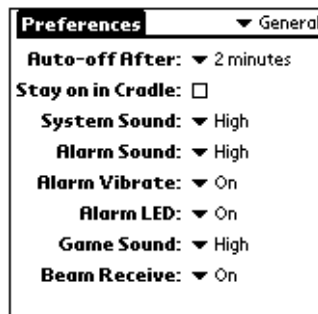

### Auto-off delay

Your handheld has an automatic shutoff feature that turns off the power and backlight after a period of inactivity. This feature helps conserve battery power in case you forget to turn off your handheld.

If you find that your handheld shuts itself off before you finish reviewing the information on the screen, you should increase the time setting of the automatic shutoff feature.

To set the Auto-off delay:

1. Tap the Auto-off pick list.
2. Tap the setting you want to use for the automatic shutoff feature: 30 seconds, 1 minute, 2 minutes, or 3 minutes.

### Cradle settings

You can choose to leave your handheld on when it is in the cradle during a HotSync operation, or when you are recharging the battery, so you can continue to view your data.

**To change the cradle setting:**

- Tap the Stay on in Cradle check box to leave your handheld on when it is in the cradle.

**System, alarm, and game sounds**

Your handheld uses a variety of sounds. The System, Alarm, and Game Sound settings enable you to turn the sounds on or off, and to adjust the volume level.

**To set the system and alarm sounds:**

1. Tap the System Sound pick list and select the sound level.

---

**IMPORTANT** When you turn off the System Sounds, you also turn off the “chime” tones associated with the HotSync operation.

---

2. Tap the Alarm Sound pick list and select the sound level.

Tap the Game Sound pick list and select the sound level.

The Game Sound setting works only with games that are programmed to respond to this setting. Older games typically do not respond to this setting.

**Alarm vibrate and indicator light settings**

You can set alarms in Date Book, Clock, and Note Pad to remind yourself of important meetings or notes. When you enable the Alarm Vibrate and indicator light settings, your handheld vibrates and the indicator light blinks to notify you of alarms. This is useful for situations where you want to turn the Alarm Sound off, but still be notified of alarms.

**To set the Alarm Vibrate and indicator light settings:**

1. Tap the Alarm Vibrate pick list and select On or Off.
2. Tap the Alarm LED pick list and select On or Off.

**Beam Receive**

You can choose to turn off the Beam Receive feature. This prohibits anyone from beaming information to your handheld. It also results in a slight saving of battery power.

**To change the Beam Receive setting:**


- Tap the Beam Receive pick list and select On or Off.

## Date and Time preferences

The Date and Time Preferences screen enables you to set the date, time, time zone, and Daylight Saving option on your handheld.

**To set the date:**

1. Tap the Set Date box.
2. Tap the arrows to select the current year.

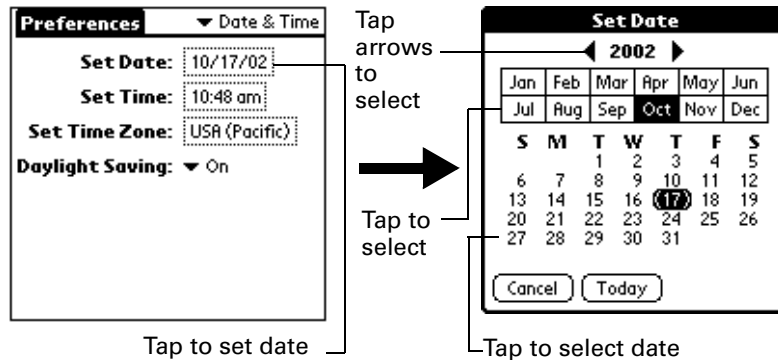

3. Tap a month.
4. Tap the current date.

**To set the time:**

1. Tap the Set Time box.



2. Tap the up or down arrows to change the hour.
3. Tap each number of the minute, and then tap the arrows to change them.
4. Tap OK.

**To set the time zone:**

1. Tap the Set Time Zone box.



2. Tap a time zone.

When you travel, changing the time zone setting to a new time zone automatically resets the date and time on your handheld, but it does not change the time of appointments set in Date Book.

### 3. Tap OK.

To set the daylight saving switch:

- Tap the Daylight Saving pick list, and then tap Off or On.

## Connection preferences

The Connection Preferences screen enables you to define the settings used to connect your handheld to other devices. The screen displays a list of available configurations that are ready to be further defined; the list varies depending on the kind of software you've added to your handheld.


For example, a modem connection appears on the list. If you have this modem, you only need to specify the phone setup (and network connection — if required) to complete the configuration.

**NOTE** You can purchase a PalmModem accessory for use with your handheld. See [www.palm.com](http://www.palm.com).

You can also create custom configurations, which include the following:



**PC via Cradle/Cable:** A local HotSync connection: the direct connection between your handheld and your desktop computer. Your handheld is connected by its universal connector to the cradle, and the cradle is attached by its cable to a USB port of your desktop computer. (If you are using the optional serial cradle, the cradle attaches by its cable to a serial (COM) port of your computer.)

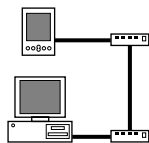

**Modem via Cradle/Cable:** A cable connection between your handheld's universal connector and a modem for dialing in to a modem that is part of your computer or laptop.



**PC via Infrared:** A connection between the IR port of your handheld and the infrared device of your computer or laptop.




**Modem via Infrared:** A connection between the IR port of your handheld and a modem. The modem can be attached to or within a mobile phone or some other device containing an IR port. (Some IR phones contain modems.)

## Editing connections


The following example shows you how to edit the IR to Phone connection to adjust the communication speed; you can similarly edit other connections or settings or create a custom connection. You can use the IR to Phone connection to perform a remote IR HotSync operation. To accomplish the HotSync operation, your handheld sends data through its IR port to a modem attached to or within a mobile phone, which then dials a modem attached to or within your desktop computer, to synchronize with your Desktop application.

To edit the IR to Phone connection:

1. Select the IR to Phone connection and tap Edit.

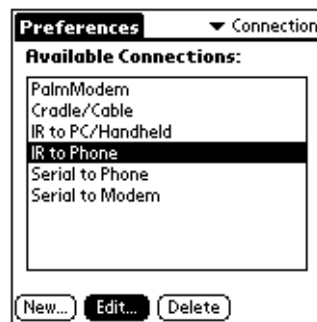

2. Tap Details.

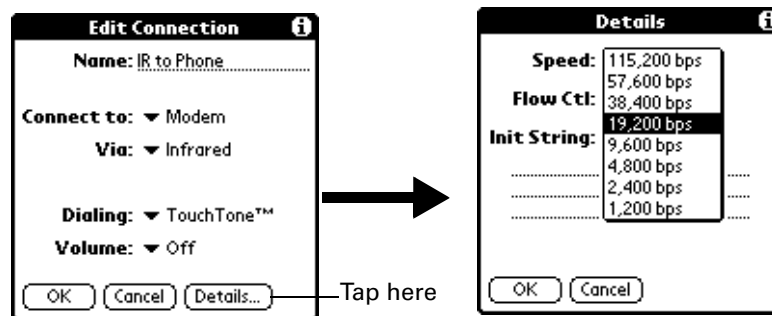

3. Tap the Speed pick list and select the appropriate speed.
4. Enter the initialization string supplied by the documentation for the modem attached to your mobile phone, if necessary.
5. Tap OK, and then tap OK again to save the configuration.

After you create the configuration, you need to set up the HotSync Manager of your Desktop application and the HotSync application of your handheld to perform a modem HotSync operation.

## Network preferences and TCP/IP software

Although your handheld is wirelessly enabled, you can also use TCP/IP software that is included in the handheld operating system to connect with Internet Service Providers (ISPs) or dial-in (remote access) servers. You will need an optional modem accessory that also supports TCP/IP settings.

To use TCP/IP, you must create a configuration in Connection Preferences and then create Network Preferences settings.

The Connection Preferences screen enables you to define several ways that your handheld can use the a modem to communicate with remote devices. For example, you can communicate with your ISP server, or with your computer if you are away on travel. See “Connection preferences” earlier in this chapter for a complete explanation on how to create modem configurations.

After you configure both the Connection and Network Preferences, you can establish a PPP (Point-to-Point Protocol) connection with your ISP or dial-in server. You can do this either by using menu commands from the Network Preferences screen or by using a third-party application.


**NOTE** TCP/IP provides the ability to connect to your ISP or dial-in server with applications that allow you to view the transmitted data. Visit the web site [www.palm.com](http://www.palm.com) for information on third-party applications that take advantage of TCP/IP.

### Selecting a service

Use the Service setting to select the service template for your Internet Service Provider or a dial-in server. Service templates are a set of ISP and dial-in server configuration settings that you can create, save, and reuse.

To select a service:

1. Tap the Service pick list.

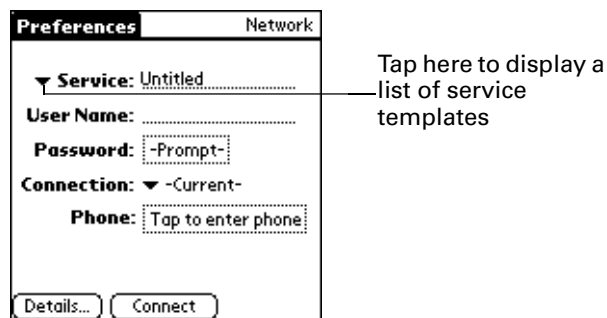

2. Tap the predefined service template you want to use.

### Entering a user name

The User Name setting identifies the name you use when you log into your Internet Service Provider or your dial-in server. Although this field can contain multiple lines of text, only two lines appear onscreen.



To enter a user name:

1. Tap the User Name field.
2. Enter your user name.

The screenshot shows the 'Preferences' dialog box with the 'Network' tab selected. The 'Service' is set to 'My ISP'. The 'User Name' field is highlighted with a red box, and a red arrow points to it with the text 'Enter your user name here'. The 'Password' field shows '-Prompt-', the 'Connection' is set to '-Current-', and the 'Phone' field says 'Tap to enter phone'. At the bottom are 'Details...' and 'Connect' buttons.

**NOTE** Most dial-in servers do not accept spaces in the user name.

### Entering a password

The Password box identifies the password you use to log into your server or ISP. Your entry in this field determines whether your handheld prompts you to enter a password each time you log into your network:

- If you do not enter a password, your handheld displays the word “Prompt” in this field and asks you to enter a password during the login procedure.
- If you enter a password, your handheld displays the word “Assigned” in this field and does not prompt you to enter a password during the login procedure.

If you are concerned about security, select the Prompt option and do not enter a password.

To enter a password:

1. Tap the Password field.
2. Enter the password you use to log into your server.

The screenshot shows the 'Preferences' dialog box with the 'Network' tab selected. The 'Service' is set to 'My ISP', 'User Name' is 'myxnetname', 'Password' is '-Prompt-', 'Connection' is 'Custom', and 'Phone' is 'Tap to enter phone'. A red arrow points to the 'Password' field with the text 'Tap here'. To the right is a 'Password' dialog box with the text 'Enter password here' and 'Enter a password:'. Below this is a message: 'If you do not assign a password, you will be asked for one when you connect.' and 'OK' and 'Cancel' buttons.

3. Tap OK.


The Password field updates to display the word “Assigned.”

### Selecting a connection

Use the Connection setting to select the method you want to use to connect to your Internet Service Provider or a dial-in server. See “Connection preferences” earlier in this chapter for information about creating and configuring connection settings.

To select a connection:

1. Tap the Connection pick list.

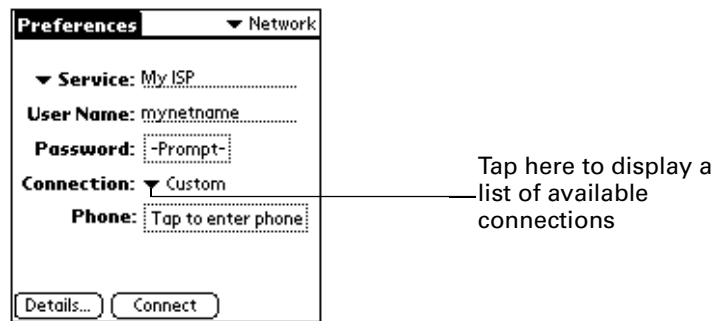


2. Tap the connection you want to use.

### Adding telephone settings

When you select the Phone field, your handheld opens a dialog box in which you define the telephone number you use to connect with your ISP or dial-in server. In addition, you can also define a prefix, disable Call Waiting, and give special instructions for using a calling card.

To enter your server phone number:

1. Tap the Phone field.
2. Enter the phone number for your ISP or dial-in server.

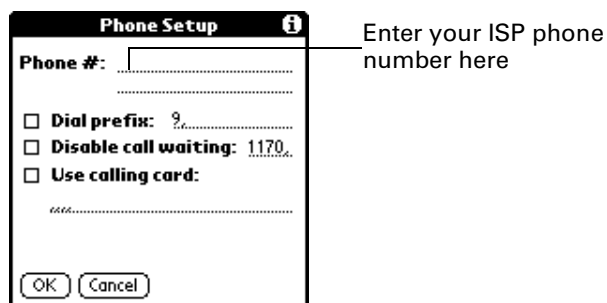

3. If you need to enter a prefix or disable Call Waiting, skip to those procedures. Otherwise, tap OK.

### Entering a prefix

A prefix is a number that you dial before the telephone number to access an outside line. For example, many offices require that you dial “9” to dial a number outside the building.

To enter a prefix:

1. Tap the Dial Prefix check box to select it.




2. Enter the prefix.
3. Tap OK.

### Disabling Call Waiting

Call Waiting can cause your session to terminate if you receive a call while you are connected. If your telephone has Call Waiting, you need to disable this feature before logging into your ISP or dial-in server.

To disable Call Waiting:

1. Tap the Disable call waiting check box to select it.

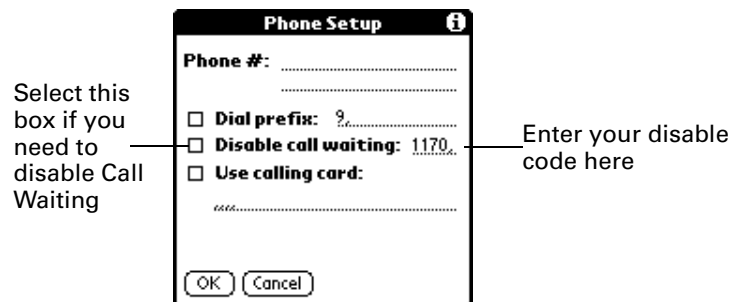

2. Enter the code to disable Call Waiting on the Disable call waiting line.

Each telephone company assigns a code to disable Call Waiting. Contact your local telephone company for the code that is appropriate for you.

3. Tap OK.

### Using a calling card

The Use calling card field enables you to use your calling card when dialing your ISP or Intranet server. Keep in mind that there is usually a delay before you enter your calling card number. When you define your calling card number, you need to add commas at the beginning to compensate for this delay. Each comma delays transmission of your calling card number for two seconds.

**To use a calling card:**

1. Tap the Use calling card check box to select it.



2. Enter your calling card number on the Use calling card line.

**NOTE** The Phone Setup dialog box works correctly for AT&T and Sprint long-distance services. However, because MCI works differently, MCI customers need to put the calling card number in the Phone # field and the phone number in the Use calling card field.

**TIP** It's a good idea to add at least three commas before your calling card number to compensate for the cue delay.

3. Tap OK.

**Connecting to your service**

After you set your Connection and Network Preferences, establishing a connection to your Internet Service Provider (ISP) or your company's network (dial-in server) is easy.

**NOTE** If you are connecting to an ISP, you need a third-party application, such as a web browser or news reader, to take advantage of this connection. For information about third-party applications that support TCP/IP, check the web site [www.palm.com](http://www.palm.com).

**To establish a connection:**

- Tap Connect to dial the current service and display the Service Connection Progress messages.

To see expanded Service Connection Progress messages, press the lower half of the Scroll button.


**To close a connection:**

- Tap Disconnect to terminate the connection between your handheld and your service.

**Creating additional service templates**


You can create additional service templates from scratch or by duplicating existing templates and editing information. After you create a new or duplicate template, you can add and edit settings.

**To add a new service template:**

1. Tap the Menu icon .
2. Tap Service, and then tap New.

An Untitled service template is added to the Service pick list.

**To duplicate an existing service template:**

1. Tap the Service pick list.
2. Tap the predefined service template you want to duplicate.
3. Tap the Menu icon .
4. Tap Service, and then tap Duplicate.

A copy of the service template is added to the Service pick list.

**Adding detailed information to a service template**

If you are using one of the predefined service templates, you probably only need to enter your user name and telephone number. If you are creating a new service template, you may need to provide additional information to your ISP or dial-in server. You use the Details dialog box to add additional information to a selected service template.

**To add connection details:**

1. Tap the service field.
2. Tap Details.

**Idle timeout**

The Idle timeout setting defines how long your handheld waits before dropping the connection with your ISP or dial-in server when you switch out of a TCP/IP application.

**To set the Idle timeout:**

1. Tap the Idle timeout pick list and select one of the following options:

<b>1 minute</b>	Waits one minute for you to open another application before it drops the connection.
<b>2 minutes</b>	Waits two minutes.
<b>3 minutes</b>	Waits three minutes.
<b>Never</b>	Keeps your PPP or SLIP connection until you turn off your handheld (or until it times out). This option works best with the PalmModem accessory.

2. Tap OK.

**Defining primary and secondary DNS**

The Domain Naming System (DNS) is a mechanism in the Internet for translating the names of host computers into IP addresses. When you enter a DNS number (or IP address), you are identifying a specific server that handles the translation services.

Each IP address has four sections, separated by periods. In the Details dialog box, you enter each section separately. Each section of an IP address is made up of a number from 0 to 255; numbers are the only allowable characters in this field.

Ask your Internet Service Provider or System Administrator for the correct Primary or Secondary DNS IP numbers.

Many systems do not require that you enter a DNS. If you are not sure, leave the DNS field blank.

**To enter a primary and secondary DNS:**

1. Tap the Query DNS check box to deselect it.
2. Tap the space to the left of the first period in the Primary DNS field, and then enter the first section of the IP address.

Each section must be a number from 0 to 255.

3. Repeat step 2 for the second, third, and last sections of the Primary DNS field.
4. Repeat steps 2 and 3 for the Secondary DNS number.
5. Tap OK.


**IP address**

Everyone who logs on to the Internet needs to have a unique identifier (an IP address), whether permanent or temporary. Some networks dynamically assign a temporary IP address when clients log in. The IP Address field lets you identify whether your network provides automatic (dynamic) temporary IP addressing.

If your IP address is permanently assigned, you need to get that information from your System Administrator. If you are not sure, select Automatic.

**To identify dynamic IP addressing:**

- Tap the IP Address check box to select it.

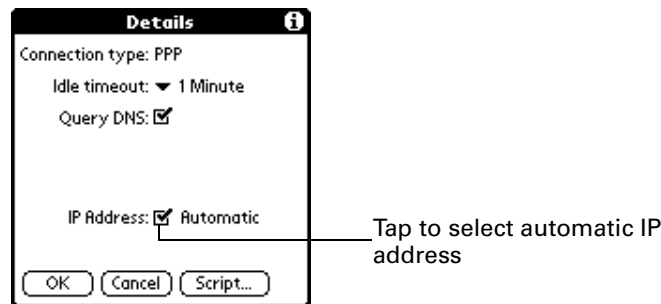

**To enter a permanent IP address:**

1. Tap the IP Address check box to deselect it and display a permanent IP address field below the check box.
2. Tap the space to the left of the first period then enter the first section of the IP address.

Each section must be a number from 0 to 255.

3. Tap and enter the remaining sections of the IP address.
4. Tap OK.


### Login scripts

A login script is a series of commands that automates logging in to a network server, for example, your corporate network or your Internet Service Provider (ISP). A login script is associated with a specific service template created in Network Preferences.

A login script is something that you are likely to receive from your IS System Administrator if your company has a system in which you log in to the corporate servers from your handheld using a modem or network connection. The script is generally prepared by the System Administrator and distributed to users who need it. It automates the events that must take place in order to establish a connection between your handheld and the corporate servers.

You can create login scripts in two ways:

- In a text editor on your desktop computer, in which you create a file with the extension PNC, which you then install on your handheld using the Install Tool (this method is not available to Mac computer users)
- In the Login Script dialog box on your handheld, accessed from the Details dialog box in Network Preferences

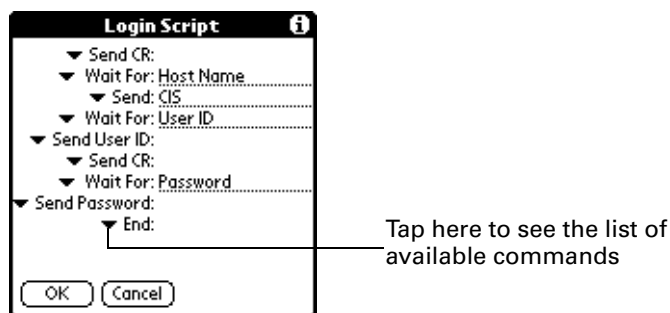


**NOTE** You can also use non-ASCII and literal characters in your login script.

### Creating a login script on your handheld

You can create login scripts by selecting commands from the Command pick list in the Login Script dialog. Some commands, such as Send, require you to supply additional information. Those commands have a parameter field so that you can add the necessary data.

To create a login script:

1. Tap Script.
2. Tap the End pick list.

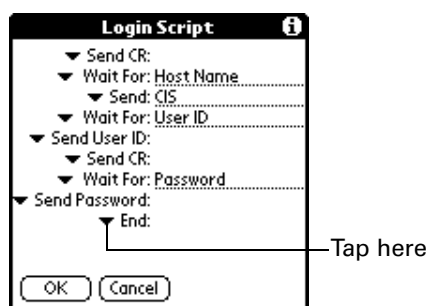

3. Tap the command you want from the Command list. If the command requires additional information, a field appears to the right of it for you to enter the information. The following commands are available:

<b>Wait For</b>	Tells your handheld to wait for specific characters from the TCP/IP server before executing the next command.
<b>Wait For Prompt</b>	Detects a challenge-response prompt coming from the server and then displays the dynamically generated challenge value. You then enter the challenge value into your token card, which in turn generates a response value for you to enter on your handheld. This command takes two arguments, separated by a vertical bar ( ) on the input line.
<b>Send</b>	Transmits specific characters to the TCP/IP server to which you are connecting.



<b>Send CR</b>	Transmits a carriage return or LF character to the TCP/IP server to which you are connecting.
<b>Send User ID</b>	Transmits the User ID information entered in the User ID field of the Network Preferences screen.
<b>Send Password</b>	Transmits the password entered in the Password field of the Network Preferences screen. If you did not enter a password, this command prompts you to enter one. The Password command is usually followed by a Send CR command.
<b>Delay</b>	Tells your handheld to wait a specific number of seconds before executing the next command in the login script.
<b>Get IP</b>	Reads an IP address and uses it as the IP address for your handheld. This command is used with SLIP connections.
<b>Prompt</b>	Opens a dialog box and prompts you to enter text of some kind (for example, a password or a security code).
<b>End</b>	Identifies the last line in the login script.

4. Repeat steps 2 and 3 until the login script is complete.
5. Tap OK.

### Plug-in applications

You can create plug-in applications containing script commands that extend the functionality of the built-in script commands. A plug-in application is a standard PRC application that you install on your handheld just like any other application. After you install the plug-in application, you can use the new script commands in a login script.

Plug-in applications have the following characteristics:


- Written in C language
- Compiled into a device executable
- Called properly from a login script
- Able to return control to a login script after it terminates
- Created using a development environment that supports Palm OS® software, such as Metrowerks CodeWarrior for Palm Platform.

For additional information on creating plug-in applications, send e-mail to Palm Developer Support at [devsupp@palm.com](mailto:devsupp@palm.com).

### Deleting a service template

There is only one way to delete a service template: use the Delete command from the Service menu.

**To delete a service template:**

1. Tap the Service pick list.
2. Tap the service template you want to delete.
3. Tap the Menu icon .
4. Tap Service, and then tap Delete.
5. Tap OK.

**Network preferences menu commands**

The Network Preferences screen includes menu commands to make it fast and easy to create and edit service templates. TCP/IP application menus are shown here for your reference. See [“Using menus”](#) in [Chapter 6](#) for more information about choosing menu commands.

**Service menu**

Service	Edit	Options
New	✓N	
Delete...	✓D	
Duplicate	✓L	

**Options menu**

Service	Edit	Options
		View Log ✓V

**TCP/IP troubleshooting**

If you are having a problem establishing a network connection using TCP/IP, check this section and try the suggestions listed.

**Displaying expanded Service Connection Progress messages**

It's helpful to identify at what point in the login procedure the connection fails. An easy way to do this is to display the expanded Service Connection Progress messages. Expanded Service Connection Progress messages describe the current stage of the login procedure. Press the lower half of the scroll button at any point during login to display these messages.

**Viewing the Network Log**

If viewing the expanded Service Connection Progress messages does not give you enough information to find out why you cannot connect to your ISP or dial-in server, take a look at the Network Log. The Network Log lists all of the communication that occurs between your modem and your dial-in server during the login procedure. The information in the Network Log can help your ISP or your System Administrator pinpoint where the login procedure communication fails and why.

**To view the Network Log:**

1. Tap Options, and then tap View Log.
2. Tap the up and down arrows of the scroll bar to see the entire Network Log.
3. Tap Done.

**Adding a DNS number**

If your ISP or dial-in server requires a DNS number and you did not enter that information in the Network Preferences screen, it will appear that you successfully logged into your network. When you try to use an application or look up information, however, the connection fails. If this occurs, try adding a DNS number. Ask your ISP or your System Administrator for the correct Primary and Secondary DNS IP numbers.

## Owner preferences

The Owner Preferences screen enables you to record a name, company name, phone number, or any other information that you want to associate with your handheld.

If you use the Security application to turn off and lock your handheld with a password, information that you put in the Owner Preferences displays the next time you turn on your handheld. See [Chapter 14](#) for information about security.

**To enter the Owner preferences:**

- Enter the text that you want to associate with your handheld in the Owner Preferences screen. If you enter more text than can fit on one screen, a scroll bar automatically appears on the right side of the screen.

The screenshot shows the 'Owner' preferences screen. At the top, there is a title bar with 'Preferences' and a dropdown menu set to 'Owner'. Below this, there are several text input fields with dotted lines indicating where to type. The first field is labeled 'This device is owned by:' and contains the text 'Midyne Spear', 'Creative Spearit', and 'Bonny Doon, CA'. The second field contains the phone number '408-555-1212'. The third field is labeled 'If found, please contact me.' and is currently empty. A scroll bar is visible on the right side of the screen, indicating that the text in the first field exceeds the visible area.

If you assign a password with the Security application, the information in the Owner Preferences screen cannot be changed. In this case, an Unlock button appears at the bottom of the screen.

**To unlock the Owner Preferences screen:**

1. Tap Unlock.
2. Enter the password that you defined in the Security application.
3. Tap OK.

## ShortCuts preferences


The ShortCuts Preferences screen enables you to define abbreviations for entering text with Graffiti strokes. This section describes how to create, edit, and delete a ShortCut.

### Creating a ShortCut

You can create a ShortCut for any words, letters, or numbers. All ShortCuts you create appear on the list in the ShortCut Preferences screen. All the ShortCuts are available in any of your handheld applications and are backed up on your computer when you perform a HotSync operation.

To create a ShortCut:

1. Tap New.
2. On the ShortCut name line, enter the letters you want to use to activate the ShortCut.

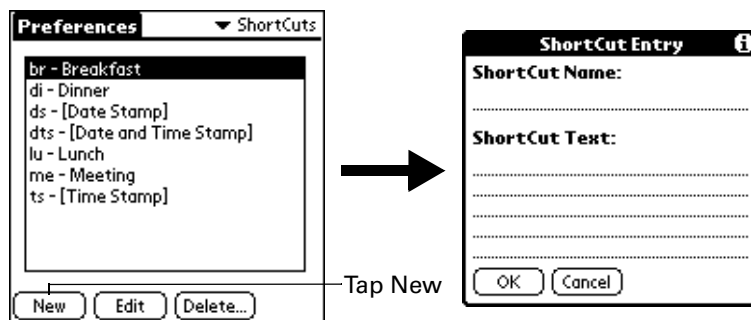


3. Tap the ShortCut Text area and enter the text that you want to appear when you write the ShortCut characters.

**TIP** You may want to add a space (space character) after the last word in your ShortCut text. This way, a space automatically follows the ShortCut text.

4. Tap OK.

To use a ShortCut, draw the ShortCut stroke followed by the ShortCut characters. When you draw the ShortCut stroke, the ShortCut symbol appears at the insertion point to show that you are in ShortCut mode.



### Editing a ShortCut

After you create a ShortCut, you can modify it at any time.

**To edit a ShortCut:**

1. Tap the ShortCut you want to edit.
2. Tap Edit.
3. Make the changes you want and tap OK.

**Deleting a ShortCut**

If you no longer need a ShortCut, you can delete it from the list of ShortCuts.

**To delete a ShortCut:**

1. Tap the ShortCut you want to delete.
2. Tap Delete.
3. Tap Yes.



# Maintaining Your Handheld

This chapter provides information on the following:

- Proper care of your handheld
- Prolonging battery life
- Resetting your handheld

## Caring for your handheld

Your handheld is designed to be rugged and reliable and to provide years of trouble-free service. Please observe the following general tips when using your handheld:

- Take care not to scratch the screen of your handheld. Keep the screen clean. When working with your handheld, use the supplied stylus or plastic-tipped pens intended for use with a touch-sensitive screen. Never use an actual pen or pencil or other sharp object on the surface of the handheld screen.
- Your handheld is not waterproof and should not be exposed to rain or moisture. Under extreme conditions, water may enter the circuitry through the front panel buttons. In general, treat your handheld as you would a pocket calculator or other small electronic instrument.
- Take care not to drop your handheld or subject it to any strong impact. Do not carry your handheld in your back pocket: if you sit on it, you may damage it.
- Protect your handheld from temperature extremes. For example, do not leave your handheld on the dashboard of a car on a hot day or on a day when temperatures are below freezing, and keep it away from heaters and other heat sources.
- Do not store or use your handheld in any location that is extremely dusty, damp, or wet.
- Use a soft, damp cloth to clean your handheld. If the surface of the handheld screen becomes soiled, clean it with a soft cloth moistened with a diluted window-cleaning solution.

## Battery considerations

Please note the following considerations for the battery in your handheld:

- Under normal conditions, your handheld battery should remain charged by placing it in the cradle for just a few minutes each day. You can conserve battery life by minimizing the use of the backlight feature, and changing the Auto-off setting that automatically turns the handheld off after a period of inactivity. See “Auto-off delay” in [Chapter 17](#) for more information.
- If the battery becomes low in the course of normal use, an alert appears on the handheld screen describing the low battery condition. If this alert appears, perform a HotSync® operation to back up your data; then leave your handheld in the cradle to recharge the unit. This helps prevent accidental data loss.
- If the battery drains to the point where your handheld does not operate, it stores your data safely for about a week. In this case, there is enough residual energy in the battery to store the data, but not enough to turn on your handheld. If your handheld does not turn on when you press the power button, you should recharge the unit immediately. The battery may not have enough residual energy to power the indicator light which normally displays green when charging.
- If your battery drains and you have the unit in an uncharged state for an extended period of time, you can lose all of the stored data.
- There are no serviceable parts inside your handheld, so do not attempt to open the unit.
- If you ever dispose of your handheld, please dispose of it without damaging the environment. Take your handheld to your nearest environmental recycling center.

## Resetting your handheld

Under normal circumstances, you will not have to use the reset button. On rare occasions, however, your handheld may no longer respond to buttons or the screen. In this case, you need to perform a reset to get your handheld running again.


### Performing a soft reset

A soft reset tells your handheld to stop what it's doing and start over again. All records and entries stored in your handheld are retained with a soft reset. After a soft reset, the Welcome screen appears, followed by the Date and Time Preferences screen (to set date and time).



**To perform a soft reset:**

- Use the reset tip tool, or the tip of an unfolded paper clip (or similar object *without* a sharp tip), to gently press the reset button inside the hole on the back panel of your handheld.

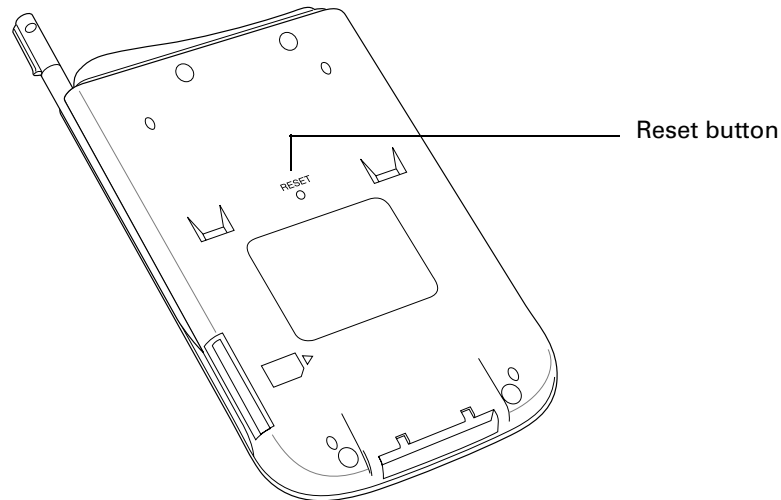

**TIP** The metal and plastic stylus that comes with your handheld has a reset tip inside. To use it, unscrew the barrel from the stylus quill.

## Performing a hard reset

With a hard reset, all records and entries stored in your handheld are erased. Never perform a hard reset unless a soft reset does not solve your problem.

**NOTE** You can restore any data previously synchronized with your computer during the next HotSync operation.

**To perform a hard reset:**

1. Hold down the power button on the front panel of the handheld.
2. While holding down the power button, use the reset tip tool, or the tip of an unfolded paper clip (or similar object *without* a sharp tip) to gently press and release the reset button.
3. Wait for the Palm Powered™ logo to appear; then release the power button.
4. When a message appears on the handheld screen warning that you are about to erase all the data stored on your handheld, do one of the following:
  - Press the upper half of the scroll button on the front panel of the handheld to complete the hard reset and display the Digitizer screen.
  - Press any other button to perform a soft reset.

**NOTE** With a hard reset, the current date and time are retained. Formats Preferences and other settings are restored to their factory default settings.

**To restore your data from a Windows computer after a hard reset:**

1. Click the HotSync icon ™ in the Windows system tray (bottom-right corner of the taskbar).

You can also click the HotSync command on the Palm Desktop software menu bar.


2. From the HotSync Manager menu, choose Custom.
3. Select the appropriate user name from the list.
4. Select an application in the Conduit list.
5. Click Change, and then do one of the following:.

**The MyPalm Update conduit:** Set update options. Enter your Username and Password, and select the check box to set these options as a default.

**MultiMail:** Select Synchronize Active Accounts. Click Configure Accounts to change e-mail account settings. Select the Set as Default check box to use this setting as a default.

**Other applications:** Select Desktop overwrites handheld.

Changing the HotSync setting from the default affects only the next HotSync operation. Thereafter, the HotSync Actions revert to their default settings. To use a new setting on an ongoing basis, select the Set As Default box. Thereafter, whatever you selected as the default setting is used when you click the Default button in the Custom dialog.

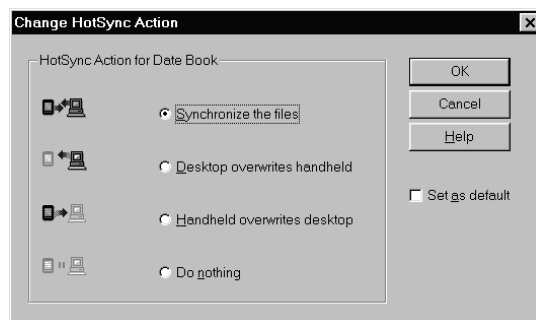

6. Click OK.
7. Repeat steps 4 through 6 to change conduit settings for other applications.
8. Click Done to activate your settings.
9. Perform a HotSync operation.

**To restore your data from a Mac computer after a hard reset:**


1. Double-click the HotSync Manager in the Palm folder.
2. From the HotSync menu, choose Conduit Settings.

3. From the Users pop-up menu, select the appropriate user name.
4. Select an application from the list.
5. Click Conduit Settings, and do one of the following:

**The MyPalm Update conduit:** Set update options. Enter your Username and Password, and select the check box to set these options as a default.

**Other applications:** Click Macintosh overwrites handheld.

Changing the HotSync setting from the default affects only the *next* HotSync operation. Thereafter, the HotSync Actions revert to their default settings. To use a new setting on an ongoing basis, click Make Default. Thereafter, whatever you selected as the default setting is used for HotSync operations.

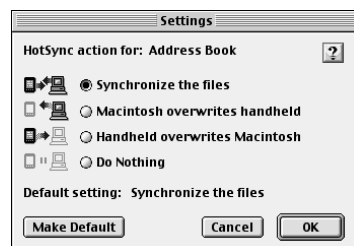

6. Click OK.
7. Repeat steps 4 through 6 to change conduit settings for other applications.
8. Close the Conduit Settings window.
9. Perform a HotSync operation.



## Frequently Asked Questions

If you encounter a problem with your handheld, do not call Technical Support until you have reviewed the following list of frequently asked questions, and you have also reviewed the following:

- The README file located in the folder where you installed the Palm™ Desktop software on Windows your computer or on your installation CD for Macintosh users
- The Palm Desktop online Help
- The Palm Desktop software for the Macintosh User's Guide located in the Documentation folder on your installation CD
- The "Palm Support Assistant" knowledgebase, accessible at [www.palm.com](http://www.palm.com) under the Support section
- The most recent Palm™ i700 Series handheld HelpNotes on your regional web site

If you are still having problems, contact Technical Support. See the Customer Support card that comes with your handheld, or go to [www.palm.com](http://www.palm.com).

**NOTE** Thousands of third-party add-on applications have been written for the Palm OS® handhelds. Unfortunately, we are not able to support such a large number of third-party applications. *If you are having a problem with a third-party application, please contact the developer or publisher of that software.*

## Software installation problems

**The Palm Desktop Installer Menu did not appear when I inserted the CD-ROM into my Windows computer.**

1. Click the Start button.
2. Choose Run from the Start menu.
3. Click Browse.
4. Locate your CD-ROM drive and select the Setup.exe file.
5. Click Open.
6. Click OK.

**I cannot install Palm Desktop software on my Windows computer.**

Try the following:

1. Disable any virus scanning software on your computer.
2. Press CTRL-ALT-DELETE and end all tasks except Systray and Explorer.

If a dialog with buttons appears instead of a list of tasks, click the Task List button and then end all tasks except Systray and Explorer.

3. Make sure your computer has at least 30 MB of disk space available.
4. Delete all temporary files.
5. Run ScanDisk on your computer.
6. Reinstall Palm Desktop software.

**I cannot install Palm Desktop software on a Mac computer.**


Try the following:

1. Disable any virus scanning software on your computer.
2. Quit any open applications.
3. Make sure your computer has at least 25 MB of disk space available.
4. Reinstall Palm Desktop software.

## Operating problems

**I don't see anything on my handheld's screen.**

Try each of these in turn:

- Press an application button to ensure your handheld is turned on.
- Tap the Contrast icon  in the upper-right corner of the Graffiti® writing area. If the Contrast dialog box appears, adjust the contrast by holding down the up scroll button for a few seconds. If this doesn't work, hold the down scroll button for a few seconds.
- If your handheld was exposed to cold, make sure it is at room temperature.
- Recharge the unit.
- Perform a soft reset. If your handheld still doesn't turn on, perform a hard reset. See ["Resetting your handheld"](#) in [Appendix A](#).

---

**IMPORTANT** With a hard reset, all records and entries stored in your handheld are erased. Never perform a hard reset unless a soft reset does not solve your problem. You can restore any data previously synchronized with your computer during the next HotSync® operation.

---

**I get a warning message telling me my handheld memory is full.**

- Purge records from Date Book and To Do List. This deletes To Do List items and past Date Book events from the memory of your handheld. See ["Purging records"](#) in [Chapter 6](#). You may need to perform a HotSync operation to recover the memory.
- Delete unused memos and records. If necessary, you can save these records. See ["Deleting records"](#) in [Chapter 6](#).
- If you have installed additional applications on your handheld, remove them to recover memory. See ["Removing applications"](#) in [Chapter 6](#).

**My handheld keeps turning itself off.**

Your handheld is designed to turn itself off after a period of inactivity. This period can be set at one, two, or three minutes. Check the Auto-off setting. See ["Auto-off delay"](#) in [Chapter 17](#).

**My handheld is not making any sounds.**


Check the System, Alarm and Game Sound settings. See ["System, alarm, and game sounds"](#) in [Chapter 17](#).

**My handheld's indicator light is not blinking when alarms occur.**

Check the Alarm indicator light setting. See ["Alarm vibrate and indicator light settings"](#) in [Chapter 17](#).

- My handheld does not vibrate when alarms occur.** Check the Alarm Vibrate setting. See [“Alarm vibrate and indicator light settings”](#) in [Chapter 17](#).
- My handheld has frozen.** Perform a soft reset. See [“Resetting your handheld”](#) in [Appendix A](#).

## Tapping and writing problems

- When I tap the buttons or screen icons, my handheld activates the wrong feature.** Calibrate the screen. See [“Digitizer preferences”](#) in [Chapter 17](#).
- When I tap the Menu icon , nothing happens.** Not all applications or screens have menus. Try changing to a different application.
- I can’t get my handheld to recognize my handwriting.**
- For your handheld to recognize handwriting input with the stylus, you need to use Graffiti writing. See [“Using Graffiti writing to enter data”](#) in [Chapter 3](#).
  - Make the Graffiti character strokes in the Graffiti writing area, not on the display part of the screen.
  - Write Graffiti strokes for letters in the left-hand side, and the strokes for numbers in the right-hand side of the Graffiti writing area.
  - Make sure that Graffiti is not shifted into extended or punctuation modes. See [“Using Graffiti writing to enter data”](#) in [Chapter 3](#).
  - See [“Graffiti tips”](#) in [Chapter 3](#) for tips on increasing your accuracy when you write Graffiti characters.



## Wireless problems

### The signal strength is weak.

You can monitor the transmission signal strength using the Signal Strength bar graph and text message on the Wireless Preferences screen. See [“Monitoring the transmission signal”](#) in [Chapter 4](#) for more information. Monitor the signal strength while you try the following solutions:

- Move away from your original location, five to ten feet in any direction.
- If you’re indoors, stand near a window, or move outdoors.
- Open metal blinds on windows.
- If you’re in an underground parking lot or other space below street level, move to a location above ground.
- If you’re in a crowd, move to a less crowded area.
- If you’re in a vehicle, keep your handheld level with the windshield. The metal frame of the vehicle shields radio signals. Mountains and buildings may also block signals.

If you’re outdoors, move away from overhead electrical wires. Move from under trees.

### I can’t access the network.

- Make sure your handheld is activated.
- Check the battery icon to verify the battery is charged. See [“Step 2: Charge your handheld”](#) in [Chapter 1](#).
- Make sure the radio is on and within range by verifying the indicator light is flashing green. See [“Using the indicator light”](#) in [Chapter 4](#).
- Verify that the signal strength indicator on the radio panel shows a strong signal. See [“Monitoring the transmission signal”](#) in [Chapter 4](#).
- The network may be down. Try again later.

**I can't access a web clipping application.**

- Make sure the radio is on and within range by verifying the indicator light is flashing green. See [“Using the indicator light”](#) in [Chapter 4](#).
- Try to access the MyPalm™ mobile portal by pressing the Wireless button.
  - If you can access the MyPalm mobile portal, network service is available. It may be that the web clipping server currently is not accessible. Try again later.
  - If you cannot access the MyPalm mobile portal, network service may be down. Try again later.
- For questions and support for third-party web clipping applications, please contact the software developer directly.

## Application problems

**I tapped the Today button, but it does not show the correct date.**

Your handheld is not set to the current date. Make sure the Set Date box in the Date and Time Preferences screen displays the current date. See [“Date and Time preferences”](#) in [Chapter 17](#) for more information.

**I know I entered some records, but they do not appear in the application.**

- Check the Categories pick list (upper-right corner). Choose All to display all of the records for the application.
- Check Security and confirm that Private Records is set to Show private records.
- In To Do List, tap Show and see if Show Only Due Items is selected.

**I am having problems listing memos the way I want to see them.**

- If you cannot manually arrange the order of the memos in the list screen, check the Memo Preferences setting. Make sure that Sort by is set to Manual.
- If you choose to view your memos alphabetically on Palm Desktop software and then perform a HotSync operation, the memos on your handheld still appear in the order defined in the Memo Preferences setting. In other words, the sort settings you use with Palm Desktop software *are not* transferred to your handheld.

**I created an event in Date Book, but it doesn't appear in the Week View.**

In the Week View, you cannot select overlapping events that have the same start time. If you have two or more events with the same start time, choose the Day View to see the overlapping events.

## HotSync problems

**I cannot do a HotSync operation; what should I check to make sure I am doing it correctly?**

- Make sure the HotSync cradle is connected securely.

On a Windows computer try these steps:

- Check the Windows system tray to make sure the HotSync Manager is running. If it is not, open Palm Desktop software.
- Make sure you selected Local USB or Local Serial, as appropriate, from the HotSync Manager menu.
- If you are using the serial cradle, make sure you selected the correct serial port on the Local tab in the Setup dialog. It should be set to the port where you connected the HotSync cradle.

On a Mac computer try these steps:

- Make sure HotSync Manager is enabled. If it is not, double-click the HotSync Manager icon in the Palm folder and enable HotSync Manager on the HotSync Controls tab.

If you are using the optional serial cradle, double-click the HotSync Manager icon in the Palm folder and then click the Serial Port Settings tab. Make sure Local is selected and that the port selection matches the port where your HotSync cradle is attached.

**I did a HotSync operation, but one of my applications did not synchronize.**

- On a Windows computer, click the HotSync Manager and choose Custom. Check that the correct conduit is active.
- On a Mac computer, double-click the HotSync Manager icon. From the HotSync menu, choose Conduit Settings. Select your user name from the User pop-up menu, and check that the correct conduit is active.

**I am using Outlook as my PIM, but I cannot do a HotSync operation.**

- Click the HotSync Manager and choose Custom. Check that the correct conduit is active.
- Check that the correct conduit is installed. Reinstall the HotSync Manager and make sure the correct conduit is selected.

**I cannot launch the HotSync Manager.**

- If you are using the optional serial cradle, or if you are performing a HotSync operation using a modem, make sure you are not running another program, such as America Online, that uses the serial port you selected in the Setup dialog box.
- Backup the Palm Desktop software, uninstall it, then reinstall it.

**I tried to do a local HotSync operation, but it did not complete successfully.**

- Make sure your handheld is seated in the cradle correctly.
- Check the connection between the HotSync cradle and the USB or serial port on your computer.
- Make sure the user name you selected in Palm Desktop software matches the user name assigned to your handheld.
- Make sure the date on your computer matches the date on your handheld.
- Read the HotSync Log for the user account for which you are performing a HotSync operation

On a Windows computer, try each step in turn:

- Make sure HotSync Manager is running. If it is running, close it, and restart it.
- Make sure you selected Local USB or Local Serial, as appropriate, from the HotSync Manager menu.
- If you are using the serial cradle, make sure you selected the correct serial port on the Local tab in the Setup dialog. It should be set to the port where you connected the HotSync cradle.
- If you are using the serial cradle, try a lower baud rate setting on the Local tab in the Setup dialog.
- If you are using the serial cradle, make sure you aren't running a program, such as America Online, that uses the serial port you selected in the Setup dialog box.

On a Mac computer, try each step in turn:

- Make sure HotSync Manager is enabled on the HotSync Controls tab in the HotSync Software Setup window.
- If you are using the optional serial cradle, make sure you selected Local on the Serial Port Settings tab in the HotSync software settings window, and that the Local Setup port matches the port where your HotSync cradle is connected.
- If you are using the optional serial cradle, try a lower Speed setting on the Serial Port Settings tab
- If you are using the optional serial cradle, make sure you aren't running a program, such as America Online, fax or telephony software, or AppleTalk networking that uses the serial port you selected in the Serial Port Settings tab.

**I tried to do a modem HotSync operation, but it did not complete successfully.**

Check the following on your computer:

- Make sure your computer is turned on and that it does not shut down automatically as part of an energy-saving feature.
- Make sure the modem connected to your computer is turned on and is connected to the outgoing phone line.
- Make sure the modem you are using with your handheld has an on-off switch. Your handheld cannot “wake up” a modem that has an auto-off feature.
- Make sure the modem is connected properly to your computer and is connected to the incoming phone line.

On a Windows computer, check the following:

- Make sure Modem is checked in the HotSync Manager menu.
- Confirm that the Setup String in the Setup dialog box configures your modem correctly. You may need to select a different Modem Type or enter a custom Setup String. Most modems have a Setup String that causes them to send initial connection sounds to a speaker. You can use these sounds to check the modem connection.
- Confirm that the Speed setting in the Setup dialog box works for your modem. If you have problems using the As Fast As Possible option or a specific speed, try using a slower speed.
- Make sure you are not running another program, such as WinFax, CompuServe, or America Online that uses the serial port you selected in the Setup dialog box.
- Make sure your modem resets before you try again. (Turn off your modem, wait a minute, then turn it back on.)

On a Mac computer, check the following:

- Make sure Modem is selected on the Serial Port Settings tab in the HotSync Software Setup window.
- You may need to select a different Modem type or enter a Custom setup string on the Serial Port Settings tab. Most modems have a setup string that causes them to send initial connection sounds to a speaker. You can turn on the Modem Speaker option and use these sounds to check the modem connection.
- Make sure you are not running another program, such as America Online, fax or telephony software, or AppleTalk networking that uses the serial port you selected in the Serial Port Settings tab.

**I tried to do a modem HotSync operation, but it did not complete successfully.  
(continued)**

- Make sure your modem resets before you try again. (Turn off your modem, wait a minute, then turn it back on.)

Check the following on your handheld:

- Confirm that the telephone cable is securely attached to your modem.
- Make sure the dialing instruction dials the correct phone number.
- If you need to dial an outside line prefix, make sure you selected the Dial Prefix option on your handheld and entered the correct code.
- If the telephone line you are using has Call Waiting, make sure you selected the Disable call waiting option under Modem Sync Phone Setup on your handheld and entered the correct code.
- Make sure the telephone line you are using is not noisy, which can interrupt communications.
- Check the batteries in your modem and replace them if necessary.

**I can't perform an IR HotSync operation.**

- On a Windows computer, be sure the HotSync Manager is running and the Serial Port for local operations is set to the simulated port for infrared communication. See [“IR HotSync operations”](#) in [Chapter 16](#) for details.
- On a Mac computer, make sure the infrared communications extensions have been installed in the Extensions folder inside the System Folder. Next, open the HotSync Software Setup window and be sure HotSync Manager is enabled and that the Local Setup Port is set to Infrared Port. See [“IR HotSync operations”](#) in [Chapter 16](#) for more information.
- On your handheld, be sure the HotSync application is set to Local, with the option IR to PC/Handheld.
- Be sure the IR port of your handheld is aligned directly opposite to, and within a few inches of, the infrared device of your computer.
- IR HotSync operations do not work after you receive a low battery warning. Check the battery power of your handheld. Recharge the internal battery.

**My handheld appears to freeze when I place it near my computer.**

Move your handheld away from the computer's infrared port.

**When I press the HotSync button on the cradle, nothing happens on Palm Desktop software and my handheld times out.**

- Make a copy of your Palm folder. Uninstall, then reinstall Palm Desktop software.
- Turn on your handheld and tap the Applications icon. Tap the HotSync icon, then tap Local.

**When I perform a HotSync operation, my information does not transfer to Palm Desktop software.**

- If you have performed a HotSync operation successfully, but you cannot find the data from your handheld on Palm Desktop software, check to see you have the correct user name selected for viewing data.
- On a Windows computer, click the HotSync Manager and choose Custom. Check that all conduits are set to synchronize files.
- On a Mac computer, double-click the HotSync Manager icon. From the HotSync menu, choose Conduit Settings. Select your user name from the User pop-up menu, and check that the correct conduit is active.

**My handheld displays the message "Waiting for sender" when it's near my computer's infrared port.**

- Your computer's infrared port may be set to search automatically for the presence of other infrared devices. Consult the documentation for your operating system for information about turning off this option.
- In some cases, simply moving your handheld away from the computer's infrared port solves the problem.

**I want to synchronize my computer with more than one handheld.**

- If the computer running Palm Desktop software synchronizes with more than one handheld, each handheld must have a unique name. Assign a user name to your handheld the first time you perform a HotSync operation.
- Please be aware that synchronizing more than one handheld with the same user name causes unpredictable results and, potentially, loss of your personal information.

## Beaming problems

**I cannot beam data to another Palm OS handheld.**

- Confirm that your handheld and the other Palm OS handheld are between ten centimeters (approximately 4") and one meter (approximately 39") apart, and that the path between the two handhelds is clear of obstacles. Beaming distance to other Palm OS handhelds may be different.
- Move your handheld closer to the receiving handheld.

**When someone beams data to my handheld, I get a message telling me it is out of memory.**

- Your handheld requires at least twice the amount of memory available as the data you are receiving. For example, if you are receiving a 30KB application, you must have at least 60KB free.
- Perform a soft reset. See [“Performing a soft reset”](#) in [Appendix A](#) for more information.

## Recharging problems

**When I place my handheld in the cradle, the indicator light does not go on.**

- Confirm that your handheld is well seated in the cradle.
- Confirm that your recharger cable is properly connected to the back of the cradle’s USB or serial port connector that plugs into your computer.
- Confirm that your recharger is plugged into an AC outlet that has power.
- If you have not used your handheld for a long period, such as an extended vacation, the battery may not contain enough charge to power the indicator light. After your handheld has recharged, the indicator light will function normally.

## Password problems

**I forgot the password, and my handheld is not locked.**

- First, use the password hint to try and remember the password. If this does not help, or if you do not have a password hint, you can use Security to delete the password, but your handheld deletes all entries marked as private. However, if you perform a HotSync operation *before* you delete the password: the HotSync process backs up all entries, whether or not they are marked private. Then, you can follow these steps to restore your private entries:
  - Use the Palm Desktop software and the cradle or infrared communication to synchronize your data.
  - Tap Forgotten Password in Security to remove the password and delete all private records.
  - Perform a HotSync operation to synchronize your data and restore the private records by transferring them from your computer to your handheld.



**I forgot the password and my handheld is locked.**

- First, use the password hint to try and remember the password. If this does not help, or if you do not have a password hint, you must perform a hard reset to continue using your handheld. See [“Performing a hard reset”](#) in [Appendix A](#) for more information.



## Technical support

If, after reviewing the sources listed at the beginning of this appendix, you cannot solve your problem, contact your regional technical support office by e-mail, phone, or fax.

Before requesting support, please experiment a bit to reproduce and isolate the problem. When you do contact support, please be ready to provide the following information:

- The name and version of the operating system you are using
- The actual error message or state you are experiencing
- The steps you take to reproduce the problem
- The version of handheld software you are using and available memory

**To find version and memory information:**

1. Tap the Applications icon .
2. Tap the Menu icon .
3. Tap App, and then tap Info.

**NOTE** Thousands of third-party add-on applications have been written for the Palm OS handhelds. Unfortunately, we are not able to support such a large number of third-party applications. *If you are having a problem with a third-party application, please contact the developer or publisher of that software.*

4. Tap Version to see version numbers, and tap Size to see the amount of free memory in kilobytes.



# Product Regulatory Information

## FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The use of shielded I/O cables is required when connecting this equipment to any and all optional peripheral or host devices. Failure to do so may violate FCC rules.

**CAUTION** Changes or modifications not covered in this manual must be approved in writing by the manufacturer's Regulatory Engineering Department. Changes or modifications made without written approval may void the user's authority to operate this equipment.

In August 1996, the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this product complies with the FCC guidelines and these international standards.

### Responsible Party:

Palm, Inc.  
5470 Great America Parkway  
Santa Clara, California 95052  
United States of America  
(408) 878-9000

### Palm i700 Series Product Family



**Tested to Comply  
With FCC Standards**

**FOR HOME OR OFFICE USE**

## Battery Warning

Do not mutilate, puncture, or dispose of batteries in fire. The batteries can burst or explode, releasing hazardous chemicals. Discard used batteries according to the manufacturer's instructions and in accordance with your local regulations.

## A

- ABA (Address Book archive file) 28
- Accented characters
  - Graffiti writing 24
- Activation 7
- Activation key 7
- Add-on applications 93–97
- Address Book
  - \*If Found Call\* entry 101
  - adding custom fields 103
  - adding e-mail address from 53
  - archive files (.aba) 28
  - business card for beaming 26
  - categorizing records 83
  - conduit for synchronizing 155
  - creating records 80
  - deleting records 81
  - displaying category 103
  - displaying data in the Address list 102
  - finding records 86–87
  - fonts 91
  - menus 102
  - notes for records 91
  - opening 99
  - overview 99
  - private records 143
  - sorting records 89
- Agenda (Date Book view) 125
- Alarm
  - LED setting 178
  - lists 92
  - preset 127
  - setting in Clock 112
  - setting in Date Book 119
  - setting in Note Pad 134
  - sound 113, 127, 178, 205
  - vibrate setting 178
- Alphabet
  - Graffiti writing 20
  - onscreen keyboard 14

- Application buttons 11, 73, 99, 115, 174

## Applications

- Address Book 99
- beaming 26–27
- Calculator 105
- Card Info 109
- categories 75
- Clock 111
- Date Book 115
- font style 92
- installing 93–97
- Launcher 73–76
- Memo Pad 129
- mobile portal 38
- Note Pad 133
- opening 73
- plug-in 191
- preferences for 79
- removing 97
- security 137
- size in kilobytes 215
- To Do List 145
- version of 215
- viewing as icons 76
- viewing as list 76
- See also* Add-on applications

## Archive files

- importing data from 28
- for main applications 28
- saving deleted records 82
- saving purged records 83

- Auto-off delay 177
- Autotext. *See* Graffiti ShortCuts

## B

- Backlight 11, 175
- Battery
  - conserving power 177
  - gauge 73
  - life and use 197

- recharging 5
- recycling 198
- warning 218
- Beaming
  - information 26–28
  - location of IR port 10
  - pen stroke to activate 175
  - problems with 213
  - See also* Infrared
- Bold font for text 91
- Browsing Internet 39
- Business card for beaming 26
- Buttons preferences 174
- C**
- Calculator
  - buttons explained 105–106
  - memory 106
  - overview 105
  - recent calculations 105, 106
- Calibration 13, 176
- Call Waiting, disabling 169, 185
- Calling card, using in phone settings 169, 185
- Capital letters (Graffiti writing) 21
- Card Info 109
- Caring for the handheld 197
- Categories
  - application 75
  - assigning records to 83–84
  - beaming 26–27
  - creating 85
  - default 83
  - displaying 84, 103, 208
  - merging 86
  - renaming 85
  - using in Applications Launcher 75
- Chain calculations 106
- Characters, Graffiti 18
- Charging handheld 5
- Check boxes 15
- Clearing Calculator entries 105
- Clipping. *See* Web clipping Applications
- Clock
  - alarm 112
  - alarm preferences 113
  - display options 113
  - menus 112
  - opening 111, 112
- Combining categories 86
- Comma delimited files, importing data from 28
- Command
  - buttons 15
  - equivalents (Graffiti writing) 78
  - stroke 28
  - toolbar 78
- Command stroke 28, 78, 89
- Compressing Day view 127
- Conduits
  - for modem HotSync operations 169
  - for synchronizing applications 209
  - for updating the mobile portal 155
  - for synchronizing applications 155–157, 200, 201
  - for synchronizing applications, Macintosh 157
- Conflicting events 124
- Connecting
  - service templates 186
  - to server or ISP 186
- Connection
  - preferences 181
  - selecting for network 184
- Continuous events
  - deleting from Date Book 82
  - scheduling 121
- Contrast control 14
- Copying
  - notes into other applications 133
  - text 81
- Country default setting 176
- Cradle
  - connecting to computer 12
  - for local HotSync operations 158, 164
  - viewing data from 177
- Creating
  - Address Book entries 100–101
  - categories 75, 85
  - custom fields in Address Book 103
  - Date Book events 116
  - notes for records 90
  - records 80
- Current date 208
- Current time 73
- Custom
  - fields in Address Book 103

Cutting text 81  
Cycling through views 99, 115

## D

Data entry. *See* Entering data

Date

displaying in Clock 113  
setting current 179, 208

Date Book

adding Address Book data to  
records 88–89

Agenda view 125

alarm 119

archive files (.dba) 28

changing event time 119

changing event to untimed 119

conduit for synchronizing 155

conflicting events 124

continuous events 120–122

creating records 80, 116–119

Day view 122

deleting records 81

display options 127

displaying current time 123

end time for Day view 127

fonts 91

menus 126

Month view 124

notes for records 90–91

opening 115

overview 115

private records 143

purging records 82–83

repeating events 82, 120–122

scheduling events 116–119

selecting dates 117

start time for Day view 127

Sunday or Monday to start week 176

switching views 122

untimed events 116, 118

Week view 123, 177, 208

Dates

To Do List record due 147–148

Day

displaying in Clock 113

Day (Date Book view) 116, 127

DBA (Date Book archive file) 28

Decimal point 177

Default

categories 83

Deleted

data, saving in archive files 82

Deleting

applications 97

Desktop software 97

filter 70

Graffiti characters 20

passwords 138

records 81

service templates 191

text 81

*See also* Purging records

Desktop software

linking to external files 29

removing 98

saving deleted data to an archive file 82

Digitizer 13, 176

DNS (Domain Naming System) 188

Double-booked events 124

Dragging

memos into other applications 129

stylus to activate features 175

using the stylus 14

## E

Editing

records 80–81

E-mail

adding attachments 54

addresses in Address Book 101

composing 54

deleting 56

deleting on server 56

drafts 55

filters for 68–70

forwarding 55

notification options 66

reading 51

sending 54

sending from a web clipping 45

setting preferences for 70

trash 57

Entering data 17–31

importing from other applications 28–31

problems with 206

using Note Pad 31

- using the computer keyboard 28
- using the onscreen keyboard 17
- Entries. *See* Address Book
- Euro
  - in Graffiti writing 23
  - in onscreen keyboard 18
- Events. *See* Date Book
- Exclamation marks in To Do List 149
- Expansion
  - adding hardware 12
  - using cards 109–110
- Expansion Card
  - applications 74
  - copying applications 76
  - described 12
  - formatting 110
  - renaming 109
- External keyboard 31
- F**
- FCC Statement 217
- Files, linking to external 29
- Filters
  - creating 68
  - editing or deleting 70
  - notification 67
  - turning on or off 69
- Finding
  - applications, using Graffiti writing 74
  - information in applications 86–89
  - phone numbers 88–89
  - using the Find application 87
- Fonts 91, 92
- Formats preferences 176
- Frequently asked questions (FAQs)
  - application problems 208
  - beaming problems 213
  - HotSync problems 209
  - operating problems 205
  - password problems 214
  - recharging problems 214
  - software installation problems 204
  - tapping and writing problems 206
  - wireless problems 207
- Frozen handheld 206

**G**

- Games 178
- General preferences 173
  - alarm LED setting 178
  - alarm sounds 178
  - alarm vibrate setting 178
  - auto-off delay 177
  - system sounds 178
- Glossary. *See* Graffiti ShortCuts
- Graffiti
  - accented characters 24
  - alphabet 18, 20
  - basic concepts 18
  - capital letters 21
  - Command stroke 78
  - how to write characters 19
  - menu commands 78
  - moving the cursor 25
  - numbers 22
  - online Help 81, 174
  - problems using 206
  - punctuation marks 22
  - ShortCuts for entering data 25, 194–195
  - symbols 23
  - tips 20
  - writing area 11, 19
- Green indicator light 36

**H**

- Handheld
  - increasing space on 12
- Hard reset 199, 205
- Hardware add-ons 12
- Help
  - Graffiti 81
  - online tips 16
- Hiding records 142
- History, in web clipping applications 43
- HotSync
  - buttons preferences 175
  - conduits for synchronizing
    - applications 155–157, 200, 201
    - conduits for synchronizing applications, Mac 157
  - customizing 156, 157
  - first-time operation 158–162, 170–172
  - IR operation 162–165
  - linking to external files 29



- local operation 152, 158, 210
- local operation on Mac 161
- modem operation 152, 165–170, 211–212
- modem settings 166
- operations using cradle 164, 180
- operations using IR port 162–164, 180–181
- problems with 209–213
- problems with IR 212
- restoring data 200–201
- setting options 151–152
- using with another PIM 98

## I

### Icons

- alarm 119
- application 14, 76
- note 91
- online Tips 16
- Over-the-air 41
- repeating event 121
- Security 46

Idle timeout of ISP or server connection 187

### IMAP

- additional options 66
- mail retrieval options 62

Importing data 28–31

### Indicator light

- alarm notification 36
- described 36
- e-mail notification 36
- showing radio status 36

### Information

- saving web clipping application 44–45
- web clipping Internet 36

### Infrared

- connections 180
- HotSync operations 162–164, 180–181
- port 10, 162
- problems with IR HotSync
  - operations 212
- requirements for computer 162

Initialization string 181

### Installing

- applications 93–97
- conduit to install applications 155

### International characters

- Graffiti writing 24

### Internet

- browsing using URL 39
- reviewing queries 43
- submitting queries 41
- web clipping information from 36

IP address 187, 188

### IR port

*See also* Beaming and Infrared

IR. *See* Infrared

IrCOMM 162, 180

IrDA (Infrared Data Association) 162

Items. *See* To Do List or Expense

## K

### Keyboard

- computer 28
- onscreen 14, 17, 175
- portable 31

## L

LED alarm 178

### Letters

- font style 92
- Graffiti 18, 20
- onscreen keyboard 17

List, in Applications Launcher 76

Locking the handheld with a password 139–141, 175, 193

Login scripts 189–191

Looking up Address Book data
 

- to add to other records 88–89
- scrolling in Address list 86

### Lost

- handheld, contact for 101
- records 208

### Lotus

- Organizer, importing data from 28

## M

### Mail

- adding Address Book data to records 88

Maintenance information 197

### Memo Pad

- adding Address Book data to
  - records 88–89
- archive files (.mpa) 28
- categorizing records 83

- conduit for synchronizing 155
  - creating records 80
  - deleting records 81, 121
  - dragging memos into other applications 129
  - fonts 91
  - menus 106, 130
  - opening 129
  - overview 129
  - private records 143
  - reviewing memos 130
  - sorting records 89, 208
- Memory
- amount of free 215
  - for beaming 214
  - Calculator 106
  - regaining 82, 205
- Memos. *See* Memo Pad
- Menus 77–79, 206
- Address Book 102
  - choosing 78
  - command equivalents (Graffiti writing) 78
  - command toolbar 79
  - Date Book 112, 126
  - Edit menu 80–81
  - Memo Pad 106, 130, 135
  - menu bar 14, 77
  - Network Preferences 192
  - To Do List 149
- Microsoft
- Outlook, connecting to 209
- Modem
- HotSync operations via 165–170, 211–212
  - initialization string 181
- Monday, to start week 177
- Month (Date Book view) 124, 127
- Moving the cursor (Graffiti writing) 25
- MPA (Memo Pad archive file) 28
- MultiMail Deluxe 49–72
- accessing 49
  - account setup 58
  - configuring 58
  - setting preferences for 70
- MultiMail Deluxe Desktop Link 8, 49
- MultiMediaCard 9
- See also* Expansion Card
- MyPalm mobile portal
- described 38
  - updating 8

## N

- Network
- connecting 186
  - idle timeout 187
  - login scripts 189–191
  - password 183
  - phone settings 184
  - preferences 181–193
  - primary DNS 188
  - secondary DNS 188
  - selecting connection 184
  - selecting service 182
  - user name 182
- Note Pad
- alarm 134
  - copying notes into other applications 133
  - entering data 31
  - menus 135
  - overview 133
  - reviewing notes 134
- Notes, attaching to records 90–91
- Notification filters 67
- Numbers
- decimal point and thousands separator 177
  - Graffiti writing 22
  - onscreen keyboard 14, 17

## O

- Onscreen keyboard 17, 81
- pen stroke to open 175
- Opening
- Address Book 99
  - applications 73
  - Calculator 105
  - Clock 111, 112
  - Date Book 115
  - Memo Pad 129
- Organizer (Lotus PIM) 28
- Outlook, connecting to 209
- Overlapping events 124
- Over-the-air icon 41, 46
- Owner preferences 193

## P

Pages (web clipping application)  
     saving text of 44  
     sending e-mail from 45  
 Palm MultiMail Desktop Link 49  
 Passwords 137–141  
     changing 138  
     creating 137  
     deleting 138  
     for network 183  
     forgotten 141, 214  
 Pasting  
     notes into other applications 133  
     text 81  
 Pen stroke, full-screen 174–175  
 Peripheral hardware 12  
 Phone Lookup 88–89  
 Phone numbers  
     selecting for Address list 102  
     selecting types 101  
 Phone settings for ISP or dial-in server 184–186  
 Pick lists 15  
 PIM (personal information manager)  
     using HotSync Manager with 98  
 Plug-in applications 191  
 Ports  
     IR on handheld 162  
 Power button 11  
 PPP 187  
 PRC (application file extension) 94, 191  
 Preferences  
     Buttons 174  
     choosing 79  
     Connection 181  
     cradle setting 177  
     Digitizer 176  
     Formats 176  
     General 173, 177  
     HotSync buttons 175  
     Network 181–193  
     Owner 193  
     ShortCuts 194  
     Web Clipping 45  
 Primary DNS 188  
 Prioritizing To Do List records 146, 149  
 Private records  
     displaying and creating 141–143, 208

    lost with forgotten password 141  
 Profiles 170  
 Protection. *See* Security application  
 Proxy server changes 46  
 Punctuation marks  
     Graffiti writing 22  
     onscreen keyboard 17  
 Purging  
     records 82–83  
     *See also* Deleting

## R

Radio  
     status 36  
     turning on 34  
 Range of times in Day view 127  
 Receiving data. *See* Beaming information  
 Reception 35  
 Recharging the battery 177  
 Records  
     beaming 26–27  
     choosing categories 83  
     creating 80  
     Date Book 116  
     defined 79  
     deleting 81, 121  
     displaying a category of 84  
     editing 80–81  
     fonts 91  
     hiding private 137, 142  
     lost 208  
     masking private 137  
     Memo Pad 129  
     notes for 90–91  
     number of 215  
     private 141–143  
     purging 82–83  
     sorting 89–90  
     To Do List 145  
     unmasking individual 143  
 Red indicator light 36  
 Reminder lists 92  
 Removing  
     applications 97  
     Desktop software 97  
 Renaming categories 85  
 Repeating events  
     deleting from Date Book 82

- scheduling 121
- Rescheduling events 119
- Resetting handheld
  - hard reset 199, 205
  - location of reset button 12, 198
  - soft reset 198
- Restoring data
  - Mac 200
  - Windows 200
- Reviewing
  - stored web clippings 43
  - web clippings and queries 43

**S**

- Saving
  - data 74, 80, 82
  - web clipping information 44
- Scheduling events 116–119
- Screen
  - backlight 11
  - blank 205
  - calibrating 13, 176
  - caring for 197
  - touching with your finger 11
- Scroll
  - bar 15
  - button 11
- SD card 9
  - See also* Expansion Card
- Searching. *See* Finding
- Secondary DNS 188
- Secure Digital card 9
  - See also* Expansion Card
- Security 137–141
  - changing password 138
  - deleting password 138
  - displaying owner's name 193
  - forgotten password 141
  - private records 141–143
  - setting a password hint 137
  - unmasking individual records 143
  - wireless transactions 46
- Security icon 46
- Selecting
  - date for event 117
  - phone numbers in Address Book 101
  - text 81
- Sending

- data. *See* Beaming information
- Serial
  - port 152, 154, 155, 166, 167
- Service
  - selecting for network 182
  - templates 186, 191
- Settings. *See* Preferences
- ShortCuts
  - backing up 155
  - managing 194–195
  - menu commands 78
  - predefined 25
  - using 25
- Signal strength 35
- Soft reset 198
- Sorting
  - applications 75
  - records 89–90, 208
- Sounds. *See* Alarm and System sounds
- Starting applications 73
- Stylus
  - dragging with 14
  - pen stroke to activate a feature 174
  - tapping with 13
- Sunday, to start week 177
- Symbols
  - in Graffiti writing 23
- System
  - conduit 155
  - sounds 178

**T**

- Tab delimited files, importing data from 28
- Tapping 13
- TCP/IP 181, 192
- TDA (To Do List archive file) 28
- Technical Support 203, 215
- Text
  - copying 81
  - cutting 81
  - entry. *See* Entering data
  - files, importing data from 28, 30
  - fonts for 91
  - saving web clipping 44
  - selecting all 81
- Thousands separator 177
- Time
  - alarm setting 119

- format 176
- setting current 179
- setting event 116
- start and end for Date Book Day
  - view 127
- Tips, online 16
- To Do List
  - adding Address Book data to
    - records 88–89
  - archive files (.tda) 28
  - categorizing records 83, 149
  - checking off items 146
  - completed items 148
  - completion date 148
  - conduit for synchronizing 155
  - creating records 80
  - deleting records 81, 121
  - due date 147–148, 149
  - fonts 91
  - menus 149
  - notes for records 90–91
  - overview 145
  - prioritizing records 146, 149
  - private records 143
  - purging records 82–83, 148
  - sorting records 89
- Today. *See* Current date
- Transmitting data. *See* Beaming information
- Troubleshooting 212
- Turning off handheld
  - automatically 177
  - pen stroke for 175
  - problems with 205
- Turning on handheld
  - displaying owner's name 193
  - power button 11
  - problems with 205
- Turning radio on/off 34

## U

- Undoing actions 81
- Uninstalling Desktop software 97
- Universal connector 12, 180
- Unresponsive handheld 206
- Untimed events 116, 118, 119, 120
- User name
  - for ISP 182
  - identifying handheld 193

- User profiles 170

## V

- VCal 28
- vCard 28
- Vibrate alarm 178
- Views
  - Web Clipping Preferences 45

## W

- Web clipping applications
  - accessing 38
  - described 36
  - preferences screen 45
  - saving information from 44–45
  - working with 40–45
- Web clippings
  - defining 36
  - example of 42–43
  - reviewing 43
- Week (Date Book view) 123–124, 177, 208
- Wireless
  - button 33
  - security 46
- Writing area 11
- Writing. *See* Entering data

